Canon

FAX-L2000/L2000IP Reference Guide

Downloaded from ManualsPrinter.com Manuals

Downloaded from ManualsPrinter.com Manuals

Manuals for the Machine

The manuals for this machine are divided as follows. Please refer to them for detailed information. The manuals supplied with optional equipment are included in the list below. Depending on the system configuration and product purchased, some manuals may not be needed.

Guides with this symbol are printed manuals.

Guides with this symbol are PDF manuals included on the accompanying CD-ROM.

• **Basic Operations** • **Troubleshooting**	**Reference Guide** **(This Document)**
• **Sending Instructions**	**Sending Guide**
• **Fax Instructions**	**Facsimile Guide**
• **Setting Up the Network Connection and Installing the CD-ROM Software**	**Setup Guide**
• **Remote User Interface Instructions**	**Remote UI Guide**
• **Network Connectivity and Setup Instructions**	**Network Guide**
• **PCL Printer Instructions**	**PCL Printer Guide**
• **PCL Printer Driver Installation and Instructions**	**PCL Driver Guide**
• **Fax Driver and Cover Sheet Editor Installation and Instructions**	**Fax Driver Guide** with Cover Sheet Editor

The machine illustration on the cover may differ slightly from your machine.

Downloaded from ManualsPrinter.com Manuals

How This Manual Is Organized

Chapter 1 Before You Start Using This Machine 1

Chapter 2 Getting Started 2

Chapter 3 Checking/Canceling a Job 3

Chapter 4 Restricting the Use of the Machine 4

Chapter 5 Summary of Important Settings 5

Chapter 6 Maintenance 6

Chapter 7 Troubleshooting 7

Chapter 8 Appendix 8

Includes the specifications of this machine and the index.

Considerable effort has been made to ensure that this manual is free of inaccuracies and omissions. However, as we are constantly improving our products, if you need an exact specification, please contact Canon.

Downloaded from ManualsPrinter.com Manuals

Contents

Preface . . . . . **x**
How to Use This Manual . . . . . **x**
Symbols Used in This Manual x
Keys Used in This Manual x
Illustrations Used in This Manual xi
Legal Notices . . . . . **xii**
Laser Safety xii
Additional Information xii
Important Information for Users in the United Kingdom xiii
For Your Safety (Australia Only) xiii
Caution (New Zealand Only) xiii
International Energy Star Program xiv
Trademarks xiv
Copyright xiv
Disclaimers xv
Legal Limitations on the Usage of Your Product and the Use of Images xvi
Important Safety Instructions . . . . . **xvii**
Installation xvii
Power Supply xviii
Handling xix
Maintenance and Inspections xx
Consumables xxi
Other Warnings xxi

Chapter 1 Before You Start Using This Machine

Main Features **1-3**
Standard 1-3
Optional 1-7
Customer Support **1-8**
Where to Setup the Machine **1-9**
Space Around the Machine **1-11**
Power Requirements **1-13**
General Precautions **1-15**
Moving the Machine **1-18**

Downloaded from ManualsPrinter.com Manuals

Unpacking: Have You Got Everything? 1-19
For the FAX-L2000/L2000IP 1-22
For the FAX-L2000IP Only 1-24
Consumable 1-24
Optional Equipment Available 1-25
Parts of the Machine 1-26
Front View 1-26
Rear View 1-28
Handset (Optional) 1-29
Removing the Shipping Material 1-30
Shipping Tape 1-30
Packaging Material Inside the Machine 1-31
Packaging Material from the Paper Cassettes 1-33
Protective Plastic Sheet 1-35
Assembling the Machine 1-36
Installing the Toner Cartridge 1-36
Attaching the Document Output Tray 1-40
Attaching the Document Feeder Tray 1-40
Loading Paper into the Paper Cassettes 1-41
Connecting the Handset (Optional) 1-47
Connecting an Extension Telephone 1-49
Connecting the Telephone Line 1-50
Turning the Power ON 1-51
Setting the Display Language and Country 1-53

Chapter 2 Getting Started

Operation Panel Parts and Functions 2-2
One-Touch Panels Closed 2-2
One-Touch Panels Opened 2-5
Using the Menus and Operation Panel Keys 2-7
General Guidelines for Registering Information 2-7
Using the Menus 2-7
Open a Menu and Select an Item 2-8
Return to the Previous Level 2-8
Return to the Standby Mode 2-9
Entering Names for Registration 2-10
Correcting a Mistake 2-11
Operation Panel Key Summary Table 2-12
Setting the Paper Size for the Paper Cassettes 2-14
Using the MP Tray 2-16
Loading Paper into the MP Tray 2-16
Turning the MP Tray ON/OFF and Setting the Paper Size 2-25
Setting the Paper Type for the MP Tray 2-26

Downloaded from ManualsPrinter.com Manuals

Available Paper Stock **2-27**
Using the Face-Up Tray **2-29**
Using the Energy Saver Mode **2-30**
Turning the Energy Saver Feature ON 2-30
Returning to the Full Power Mode 2-31
Setting the Daily Timer 2-32
Setting the Auto Clear 2-33

Chapter 3 Checking/Canceling a Job

Flow of Checking Operations **3-2**
Checking the Fax Jobs 3-2
Checking the Copy Jobs 3-3
Canceling a Job **3-4**
Canceling with the Stop key 3-4
Canceling from the Monitor Screen 3-5

Chapter 4 Restricting the Use of the Machine

Setting and Using the System Administrator's ID and Password **4-2**
Setting the System Administrator's ID and Password 4-2
Changing/Canceling the System Administrator's ID and Password 4-4
Restricting Machine Operation (Department ID Management) **4-6**
Setting Operation Restrictions 4-6
Turning Restrictions OFF or ON 4-10
Restricting the Use of the Telephone 4-12
Operating the Machine with Restrictions ON 4-13
Checking and Clearing the Counter Information 4-14
Using Memory Lock **4-17**
Setting a Time and Password for Memory Lock 4-17
Turning Memory Lock ON 4-20
Turning Memory Lock OFF and Printing Documents 4-21

Chapter 5 Summary of Important Settings

Opening the Additional Functions Menu **5-2**
Paper Settings **5-3**
Setting Procedure 5-3
Setting Items 5-4
Common Settings **5-5**
Setting Procedure 5-5
Setting Items 5-6

Downloaded from ManualsPrinter.com Manuals

Timer Settings 5-8
Setting Procedure 5-8
Setting Items 5-9
System Settings 5-10
Setting Procedure 5-10
Setting Items 5-11

Chapter 6 Maintenance

Storing Recording Paper 6-2
Recommended Paper 6-2
Storing the Paper Supply 6-2
Changing the Toner Cartridge 6-3
Storing Toner Cartridges 6-8
Handling Cartridges 6-8
Storing Cartridges 6-8
Periodic Cleaning 6-9
Cleaning the Main Unit 6-9
Cleaning the Transfer Guide Area 6-10
Cleaning the Scanning Area 6-13
Cleaning the Roller 6-20
Refilling the Stamp Ink Compartment (Optional) 6-22

Chapter 7 Troubleshooting

Clearing Document Feed Jams 7-2
Initializing the Automatic Document Feeder 7-4
Clearing Printer Feed Jams 7-5
Locating a Paper Jam 7-6
Face-Up Tray Area 7-7
Output Tray Area 7-8
Imaging Area 7-11
MP Tray Area 7-13
Paper Cassettes Area 7-14
Duplexer Area 7-16
Service Call Message 7-19
Calling Your Local Authorized Canon Dealer 7-19
Error Code Table (Listed by Number) 7-21
List of LCD Display Messages (Alphabetical List) 7-23
When Trouble Occurs 7-26
Copying Documents 7-26
Other Troubles 7-26

Downloaded from ManualsPrinter.com Manuals

Chapter 8 Appendix

Specifications **8-2**
General 8-2
Power 8-3
Operating Environment 8-3
Weight 8-4
Dimensions 8-4
Printing Area 8-5
Index **8-6**

Downloaded from ManualsPrinter.com Manuals

Preface

Thank you for purchasing the Canon FAX-L2000/L2000IP. Please read this manual thoroughly before operating the machine in order to familiarize yourself with its capabilities, and to make the most of its many functions. After reading this manual, store it in a safe place for future reference.

How to Use This Manual

Symbols Used in This Manual

The following symbols are used in this manual to explain procedures, restrictions, handling precautions, and instructions that should be observed for safety.

WARNING Indicates a warning concerning operations that may lead to death or injury to persons if not performed correctly. In order to use the machine safely, always pay attention to these warnings.

CAUTION Indicates a caution concerning operations that may lead to injury to persons, or damage to property if not performed correctly. In order to use the machine safely, always pay attention to these cautions.

IMPORTANT Indicates operational requirements and restrictions. Be sure to read these items carefully in order to operate the machine correctly, and to avoid damage to the machine.

NOTE Indicates a clarification of an operation, or contains additional explanations for a procedure. Reading these notes is highly recommended.

Keys Used in This Manual

The following symbols and key names are a few examples of how keys to be pressed are expressed in this manual. The operation panel keys on the machine are indicated within brackets.

Press (Start).

Press [Data Registration].

Downloaded from ManualsPrinter.com Manuals

Illustrations Used in This Manual

Unless otherwise mentioned, illustrations used in this manual are those taken when no optional equipment is attached to the FAX-L2000/L2000IP.

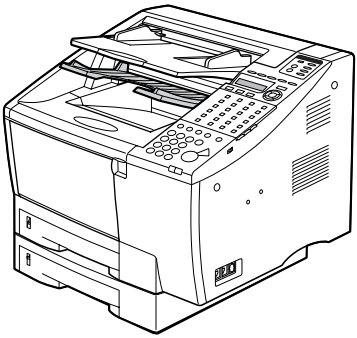

Downloaded from ManualsPrinter.com Manuals

Legal Notices

Laser Safety

This Product is certificated as a Class I laser product under EN60825-1:1994. This means that the Product does not produce hazardous laser radiation.
Since radiation emitted inside the Product is completely confined within protective housings and external covers, the laser beam cannot escape from the machine during any phase of user operation.

Additional Information

When servicing or adjusting the optical system of the printer, be careful not to place screwdrivers or other shiny objects in the path of the laser beam. Also, accessories such as watches and rings should be removed before working on the printer. The reflected beam, though invisible, can permanently damage your eyes.
Since the beam is invisible, the following label is attached to the inside of covers where there is danger of exposure to laser radiation:

DANGER- Invisible laser radiation when open.
AVOID DIRECT EXPOSURE TO BEAM.
CAUTION- INVISIBLE LASER RADIATION WHEN OPEN.
AVOID EXPOSURE TO BEAM.
ATTENTION - RAYONNEMENT LASER INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DANGEREUSE AU FAISCEAU.
VORSICHT - UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.
ATTENZIONE - RADIAZIONE LASER INVISIBLE IN CASO DI APERTURA. EVITARE L'ESPOSIZIONE AL FASCIO.
PRECAUCION - RADIACION LASER INVISIBLE CUANDO SE ABRE. EVITAR EXPONERSE AL RAYO.
VARO! - AVATTAESSA OLET ALTTIINA NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.
VARNING! - OSYNLIG LASERSTRÅLNING NAR DENNA DELÄR ÖPPNAD. BETRAKTA EJ STRÅLEN.
ADVARSEL! - USYNLIG LASER STRÅLING, NÅR DENNE ER ÅBEN. UNDGÅ BESTRÅLING.
ADVARSEL - USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES. UNNGÅ EKSPONERING FOR STRÅLEN.

This machine has been classified under EN60825-1:1994 and conforms to the following classes:

CLASS I LASER PRODUCT
LASER KLASSE I
APPAREIL A RAYONNEMENT LASER DE CLASSE I
APPARECCHIO LASER DI CLASSE I
PRODUCTO LASER DE CLASE I
APARELHO A LASER DE CLASSE I

CAUTION

- **Use of controls, adjustments or performance of procedures other than those specified in the manual may result in hazardous radiation exposure.**

Downloaded from ManualsPrinter.com Manuals

Important Information for Users in the United Kingdom

This equipment is intended for connection to analogue two wire public telecommunication networks.

Connect the supplied cable to this socket first, then to the telephone line.

This socket is intended for connection of the Canon optional telephone. If required, an adapter to connect any piece of approved telecommunications apparatus is available from your Canon supplier.

Canon recommend that any additional equipment connected in the installation is connected to this "handset" socket. Do not connect additional equipment through parallel sockets elsewhere on the telephone line.

Voltage and current available at these sockets is determined by the network to which the line cable is connected. They will not normally exceed the limits for TNV as described in EN60950.

This equipment is not intended or recommended for making calls to emergency services.

For Your Safety (Australia Only)

To ensure safe operation the three-pin plug supplied must be inserted only into a standard three-pin power point which is effectively earthed through the normal household wiring.

Extension cords used with the equipment must be three-core and be correctly wired to provide connection to earth. Wrongly wired extension cords are a major cause of fatalities.

The power point shall be located near the equipment and shall be easily accessible.

The fact that the equipment operates satisfactorily does not imply that the power point is earthed and the installation is completely safe. For your safety, if in any doubt about the effective earthing of the power point, consult a qualified electrician.

Caution (New Zealand Only)

- This equipment may not necessarily provide for the effective hand-over of a call to or from a telephone connected to the same line.
- The operation of this equipment on the same line as telephone or other equipment with audible warning devices or automatic ring detectors will give rise to bell tinkle or noise and may cause false tripping of the ring detector. Should such problems occur, the user is not to contact Telecom faults service.

Downloaded from ManualsPrinter.com Manuals

- Should this equipment become physically damaged, disconnect immediately from the Telecom connection and power source and contact your nearest service agent.
- To relocate this equipment please:
  1. Disconnect the equipment from the Telecom connection.
  2. Disconnect the equipment from the power source.
  3. Reconnect the equipment to the power source.
  4. Reconnect the equipment to the Telecom connection.
- If the supply cord of this equipment is damaged, it must be replaced by the special cord (Parts No.: HH2-1910).
- Not all standard telephones will respond to incoming ringing when connected to the extension socket.

International Energy Star Program

As an ENERGY STAR® Partner, Canon has determined that the FAX-L2000/L2000IP meet the ENERGY STAR® guidelines for energy efficiency.

The International ENERGY STAR® Office Equipment Program is an international program that promotes energy saving through the use of computers and other office equipment. The program backs the development and dissemination of products with functions that effectively reduce energy consumption. It is an open system in which business proprietors can participate voluntarily. The targeted products are office equipment, such as computers, displays, printers, facsimiles, and copiers. The standards and logos are uniform among participating nations.

Trademarks

Canon and the Canon logo are trademarks of Canon Inc.

Other product and company names herein may be the trademarks of their respective owners.

Copyright

Copyright 2002 by Canon Inc. All rights reserved.

No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or by any information storage or retrieval system without the prior written permission of Canon Inc.

Downloaded from ManualsPrinter.com Manuals

Disclaimers

The information in this document is subject to change without notice.

CANON INC. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, EITHER EXPRESS OR IMPLIED, EXCEPT AS PROVIDED HEREIN, INCLUDING WITHOUT LIMITATION, THEREOF, WARRANTIES AS TO MARKETABILITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OF USE OR AGAINST INFRINGEMENT OF ANY PATENT. CANON INC. SHALL NOT BE LIABLE FOR ANY DIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM THE USE OF THIS MATERIAL.

Although this equipment can use either loop disconnect or DTMF signalling, only the performance of the DTMF signalling is subject to regulatory requirements for correct operation. It is therefore strongly recommended that the equipment is set to use DTMF signalling for access to public or private emergency services.
DTMF signalling also provides faster call set up.

The equipment has been approved in accordance with Council Decision 98/482/EC for pan-European single terminal connection to the public switched telephone network (PSTN). However, due to differences between the individual PSTNs provided in different countries, the approval does not, of itself, give an unconditional assurance of successful operation on every PSTN network termination point.
In the event of problems, you should contact your equipment supplier in the first instance.

Canon Inc./Canon Europa N.V.

(Europe only)

CE

This equipment conforms with the essential requirements of EC Directive 1999/5/EC.
We declare that this product conforms with the EMC requirements of EC Directive 1999/5/EC at nominal mains input 230V, 50Hz although the rated input of the product is 220V-240V, 50/60Hz.
If you move to another EU country and are experiencing trouble, please call the Canon Help Desk.

(For Europe Only)

Downloaded from ManualsPrinter.com Manuals

Legal Limitations on the Usage of Your Product and the Use of Images

Using your product to scan, print or otherwise reproduce certain documents, and the use of such images as scanned, printed or otherwise reproduced by your product, may be prohibited by law and may result in criminal and/or civil liability. A non-exhaustive list of these documents is set forth below. This list is intended to be a guide only. If you are uncertain about the legality of using your product to scan, print or otherwise reproduce any particular document, and/or of the use of the images scanned, printed or otherwise reproduced, you should consult in advance with your legal advisor for guidance.

- **Paper Money**
- **Money Orders**
- **Certificates of Deposit**
- **Postage Stamps (canceled or uncanceled)**
- **Identifying Badges or Insignias**
- **Selective Service or Draft Papers**
- **Checks or Drafts Issued by Governmental Agencies**
- **Motor Vehicle Licenses and Certificates of Title**
- **Travelers Checks**
- **Food Stamps**
- **Passports**
- **Immigration Papers**
- **Internal Revenue Stamps (canceled or uncanceled)**
- **Bonds or Other Certificates of Indebtedness**
- **Stock Certificates**
- **Copyrighted Works/Works of Art without Permission of Copyright Owner**

Downloaded from ManualsPrinter.com Manuals

Important Safety Instructions

Please read these "Important Safety Instructions" thoroughly before operating the machine. As these instructions are intended to prevent injury to the user or other persons or destruction of property, always pay attention to these instructions. Also, since it may result in unexpected accidents or injuries, do not perform any operation unless otherwise specified in the manual. Improper operation or use of this machine could result in personal injury and/or damage requiring extensive repair that may not be covered under your Limited Warranty.

Installation

WARNING

- **Do not install the machine near alcohol, paint thinner, or other flammable substances. If flammable substances come into contact with electrical parts inside the machine, it may result in a fire or electrical shock.**
- **Do not place the following items on the machine. If these items come into contact with a high-voltage area inside the machine, it may result in a fire or electrical shock. If these items are dropped or spilled inside the machine, immediately disconnect the power cord from the power outlet. Then, contact your local authorized Canon dealer.**
  - **Necklaces and other metal objects**
  - **Cups, vases, flowerpots, and other containers filled with water or liquids**

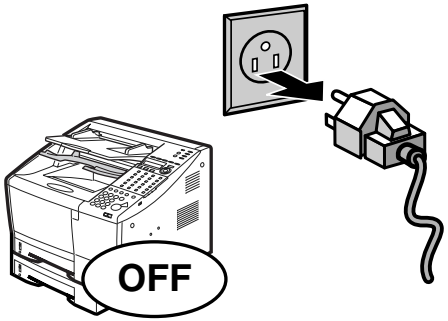

CAUTION

- **Do not install the machine in unstable locations, such as unsteady platforms or inclined floors, or in locations subject to excessive vibrations, as this may cause the machine to fall or tip over, resulting in personal injury.**
- **Never block the ventilation slots and louvers on the machine. These openings are provided for proper ventilation of working parts inside the machine. Blocking these openings can cause the machine to overheat. Never place the machine on a soft surface, such as a sofa or rug.**

Downloaded from ManualsPrinter.com Manuals

- Do not install the machine in the following locations:
  - A damp or dusty location
  - A location near water faucets or water
  - A location exposed to direct sunlight
  - A location subject to high temperatures
  - A location near open flames

Power Supply

⚠ WARNING

- Do not damage or modify the power cord. Also, do not place heavy objects on the power cord, or pull on or excessively bend it, as this could cause electrical damage and result in a fire or electrical shock.
- Keep the power cord away from a heat source; failure to do this may cause the power cord coating to melt, resulting in a fire or electrical shock.
- Do not connect or disconnect the power cord with wet hands, as this may result in electrical shock.
- Do not connect the power cord to a multiplug power strip, as this may cause a fire or electrical shock.
- Do not bundle up or tie the power cord in a knot, as this may result in a fire or electrical shock.
- Insert the power plug completely into the power outlet, as failure to do so may result in a fire or electrical shock.
- Do not use power cords other than the power cord provided, as this may result in a fire or electrical shock.
- As a general rule, do not use extension cords. Using an extension cord may result in a fire or electrical shock. If an extension cord must be used, however, use one rated for voltages of 220-240 V AC and over, untie the cord binding, and insert the power plug completely into the extension cord outlet to ensure a firm connection between the power cord and the extension cord.

⚠ CAUTION

- Do not use power supplies with voltages other than those specified herein, as this may result in a fire or electrical shock.
- Always grasp the power plug when disconnecting the power cord. Pulling on the power cord may expose or snap the core wire, or otherwise damage the power cord. If the power cord is damaged, this could cause current to leak, resulting in a fire or electrical shock.
- Leave sufficient space around the power plug so that it can be unplugged easily. If objects are placed around the power plug, you will be unable to unplug it in an emergency.

Downloaded from ManualsPrinter.com Manuals

Handling

WARNING

- **Do not attempt to disassemble or modify the machine. There are high-temperature and high-voltage components inside the machine which may result in a fire or electrical shock.**
- **If the machine makes strange noises, or gives off smoke, heat, or strange smells, immediately disconnect the power cord from the power outlet. Then, contact your service representative. Continued use of the machine in this condition may result in a fire or electrical shock.**
- **Do not use highly flammable sprays near the machine. If gas from these sprays comes into contact with the electrical components inside the machine, it may result in a fire or electrical shock.**
- **To avoid damage to the power cord and creating a fire hazard, always disconnect the power cord and the interface cable when moving the machine. Otherwise, the power cord or interface cable may be damaged, resulting in a fire or electrical shock.**
- **Do not drop paper clips, staples, or other metal objects inside the machine. Also, do not spill water, liquids, or flammable substances (alcohol, benzene, paint thinner, etc.) inside the machine. If these items come into contact with a high-voltage area inside the machine, it may result in a fire or electrical shock. If these items are dropped or spilled inside the machine, immediately disconnect the power cord from the power outlet. Then, contact your local authorized Canon dealer.**

CAUTION

- **Do not place heavy objects on the machine, as they may tip over or fall resulting in personal injury.**
- **Disconnect the power cord for safety when the machine will not be used for an extended period of time, such as during consecutive holidays.**
- **The laser beam can be harmful to human bodies. Since radiation emitted inside the product is completely confined within protective housings and external covers, the laser beam cannot escape from the machine during any phase of user operation. Read the following remarks and instructions for safety.**

Downloaded from ManualsPrinter.com Manuals

Maintenance and Inspections

WARNING

- **When cleaning the machine, disconnect the power cord. Failure to observe these steps may result in a fire or electrical shock.**
- **Disconnect the power cord from the power outlet regularly, and clean the area around the base of the power plug's metal pins and the power outlet with a dry cloth to ensure that all dust and grime is removed. If the power cord is connected for a long period of time in a damp, dusty, or smoky location, dust can build up around the power plug and become damp. This may cause a short circuit and result in a fire.**
- **Clean the machine using a slightly dampened cloth with a mild detergent mixed with water. Do not use alcohol, benzene, paint thinner, or other flammable substances. Check detergent for flammability prior to use. If flammable substances come into contact with a high-voltage area inside the machine, it may result in a fire or electrical shock.**
- **There are some areas inside the machine which are subject to high-voltages. When removing jammed paper or when inspecting the inside of the machine, do not allow necklaces, bracelets, or other metal objects to touch the inside of the machine, as this may result in burns or electrical shock.**
- **Do not burn or throw used toner cartridges into open flames, as this may cause the toner remaining inside the cartridge to ignite, resulting in burns or a fire.**

CAUTION

- **The toner fixing unit and its surroundings inside the machine may become hot during use. When removing jammed paper or when inspecting the inside of the machine, do not touch the toner fixing unit and its surroundings, as doing so may result in burns or electrical shock.**

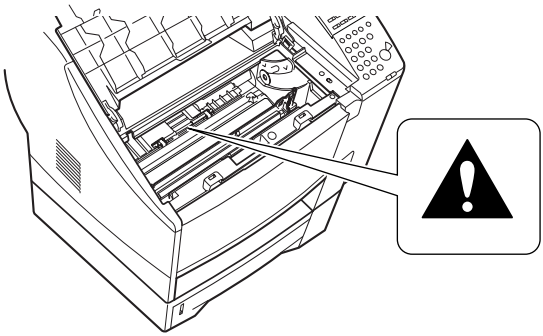

- **When removing jammed paper or replacing the toner cartridge, take care not to allow the toner to come into contact with your hands or clothing, as this will dirty your hands or clothing. If they become dirty, wash them immediately with cold water. Washing them with warm water will set the toner, and make it impossible to remove the toner stains.**

Downloaded from ManualsPrinter.com Manuals

- When removing paper which has become jammed inside the machine, remove the jammed paper gently to prevent the toner on the paper from scattering and getting into your eyes or mouth. If the toner gets into your eyes or mouth, wash them immediately with cold water and immediately consult a physician.
- When loading paper or removing jammed originals or paper, take care not to cut your hands on the edges of the originals or paper.
- When removing a used toner cartridge from the machine, remove the cartridge carefully to prevent the toner from scattering and getting into your eyes or mouth. If the toner gets into your eyes or mouth, wash them immediately with cold water and immediately consult a physician.

Consumables

⚠ WARNING

- Do not burn or throw used toner cartridges into open flames, as this may cause the toner remaining inside the cartridges to ignite, resulting in burns or a fire.
- Do not store toner cartridges or copy paper in places exposed to open flames, as this may cause the toner or paper to ignite, resulting in burns or a fire.
- When discarding used toner cartridges, put the cartridges in a bag to prevent the toner remaining inside the cartridges from scattering, and dispose of them in a location away from open flames.

⚠ CAUTION

- Keep toner and other consumables out of the reach of small children. If these items are ingested, consult a physician immediately.

Other Warnings

⚠ WARNING

- For cardiac pacemaker users:
  This product generates a low level magnetic field. If you use a cardiac pacemaker and feel abnormalities, please move away from the product and consult your doctor.

Downloaded from ManualsPrinter.com Manuals

Downloaded from ManualsPrinter.com Manuals

This chapter describes the specifications of the machine and includes the index.

Specifications 8-2
- General 8-2
- Power 8-3
- Operating Environment 8-3
- Weight 8-4
- Dimensions 8-4
- Printing Area 8-5

Index 8-6

describes what to do in response to a paper jam in the main unit, an error code, or error play.

Document Feed Jams 7-2
g the Automatic Document Feeder 7-4
Printer Feed Jams 7-5
ng a Paper Jam 7-6
all Message 7-19
Your Local Authorized Dealer 7-
e Table (Listed by Number) 7-21
D Display Messages (Alphabetical List) 7-23
uble Occurs 7-26
g Document 7-26
ber, change the toner cartridge, and perform routine 7-26
roubles 7-26

. 8-2
. 2
. 6-2
. 6-3
. 6-8
. 6
. 6-9
. 6-9
ea 6-10
ou can perform with the PAPER
YSTEM SETTINGS menus. 6-13
. 6-20
ment (Optional) 6-22
. 5-2
. 5-3
. 5-3
. 5-5
. 5-5
. 5-8

Downloaded from ManualsPrinter.com Manuals

Assembling the Machine 1-36
Installing the Toner Cartridge 1-36
Attaching the Document Output Tray 1-40
Attaching the Document Feeder Tray 1-40
Loading Paper into the Paper Cassettes 1-41
Connecting the Handset (Optional) 1-47
Connecting an Extension Telephone 1-49
Connecting the Telephone Line 1-50
Turning the Power ON 1-51
Setting the Display Language and Country 1-53

Downloaded from ManualsPrinter.com Manuals

Main Features

Standard

■ **Improved Speed**
Your machine is equipped with the ITU-T (International Telecommunication Union-Telecommunication Standardization Sector) standard V.34 mode which enables transmission speeds up to 33.6 Kbps, more than double the rate of older G3 fax models.

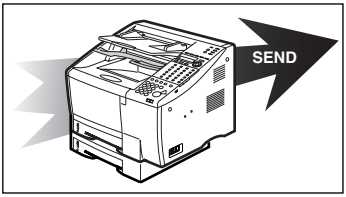

■ **UHQ (Ultra High Quality) Image**
Canon's ultra high quality image processing produces excellent reproductions of the documents you send and copy.

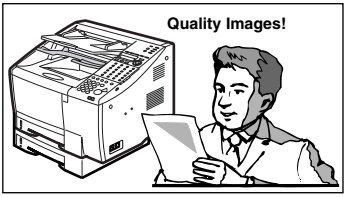

■ **Full Support of ITU-T Subaddresses and Passwords**
You can employ ITU-T subaddresses and passwords to communicate not only with other Canon fax machines, but fax machines of other manufacturers as well.

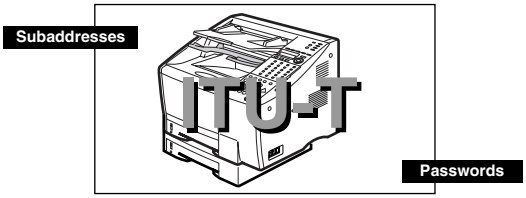

Downloaded from ManualsPrinter.com Manuals

■ **Laser Beam Printer**

Quiet, clean laser technology guarantees quality reproduction.

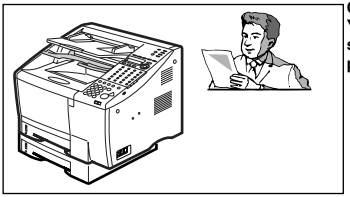

■ **Automatic Dialing**

Includes one-touch and coded speed dialing, directory dialing, group dialing, and access code dialing methods which enables you to send the same document to several destinations by simply pressing a single key or just a few keys.

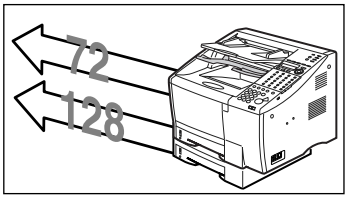

■ **Variety of Send and Receive Features**

Includes sequential broadcasting, polling, relay sending and receiving, and confidential mailbox sending and receiving.

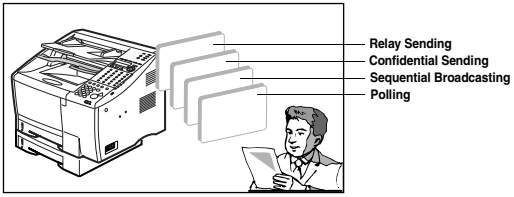

■ **ECM Send and Receive**

ECM (Error Correction Mode) reduces errors during sending and receiving on noisy or poor quality telephone lines.

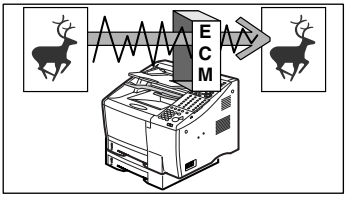

Downloaded from ManualsPrinter.com Manuals

■ **Receiving in Memory If You Run Out of Paper or Toner**

If you run out of paper or toner while you are receiving a document, the machine continues to receive by storing the remainder of the document into the machine's memory, so you can print it out after you refill the paper cassette or replace the toner cartridge. A memory backup function also safeguards the contents of the memory for approximately 12 hours after a power failure.

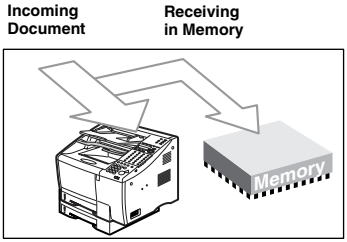

■ **Delayed Sending**

Scan a document into memory, and set the machine to send the document at a later time. This enables you to take advantage of holiday or late night telephone rates.

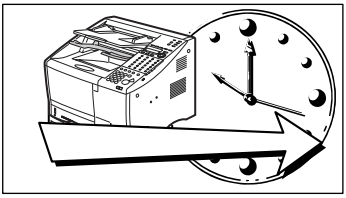

■ **Dual Access**

Even while you are sending or receiving a document, you can continue to use the machine to register information or record documents into memory.

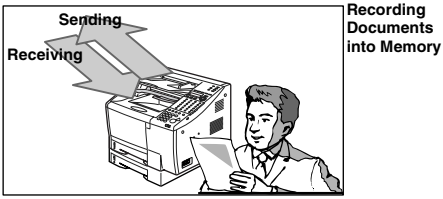

■ **Easy to Use**

A larger LCD display and operation panel with larger keys makes the machine easier to use.

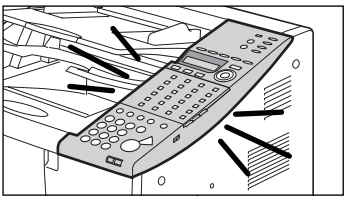

Downloaded from ManualsPrinter.com Manuals

■ **Economical and Quiet**

Canon's RAPID Fusing System™ realizes quiet operation while you save money. If the machine remains idle for a specified length of time, the machine automatically shuts itself down, and enters the low energy sleep mode. It remains in this low energy mode until the machine receives a document transmission or until you press (Energy Saver).

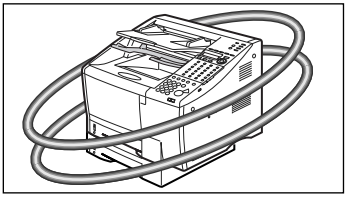

■ **JBIG, Improved Image Data Compression**

JBIG (Joint Bi-Level Image Experts Group) is a new ITU-T standard image data compression method. JBIG's compression method allows data to be compressed more efficiently* than MMR (Modified Modified Read), a conventional compression method. JBIG is especially effective when transmitting halftone image documents. The smaller data size requires less transmission time, and JBIG saves you time and money.

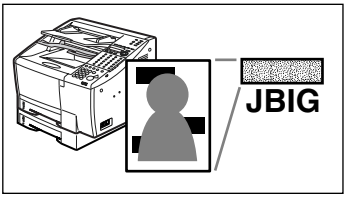

* The actual compression ratio may vary with different images.

Downloaded from ManualsPrinter.com Manuals

Optional

For details about purchasing optional equipment, contact your local authorized Canon dealer.

■ **Fax Memory**
A 32 MB memory module is available to expand the fax memory capacity of the FAX-L2000/L2000IP. (See “Optional Equipment Available”, on p. 1-25.)

■ **FAX-L2000 Printer Kit**
After installation of the optional Printer Kit, the FAX-L2000 can be used as a network printer. (Printer function is a standard feature for the FAX-L2000IP.)

■ **FAX-L2000 Network Printer/Fax Kit**
After installation of the Network Kit, the FAX-L2000 can send Internet Fax. (Internet Fax function is a standard feature for the FAX-L2000IP.)

Downloaded from ManualsPrinter.com Manuals

Customer Support

Your Canon FAX-L2000/L2000IP is designed with the latest technology to help provide trouble-free operation.

If you encounter a problem, try to solve it by referring to and following the information in Chapter 6, “Maintenance,” and Chapter 7, “Troubleshooting.” If you cannot solve the problem, or if you think your Canon FAX-L2000/L2000IP needs servicing, contact your local authorized Canon dealer.

Downloaded from ManualsPrinter.com Manuals

Where to Setup the Machine

Even if your machine has been setup for you, take a few minutes to glance through this section to become familiar with where the machine should be placed. You may also want to check the machine's installation, to confirm that it has been done correctly.

■ **Avoid direct sunlight. If you have to place the machine near a window, install heavy curtains or blinds to protect the machine from direct sunlight.**
Be sure not to block the machine's ventilation slots and louvers.

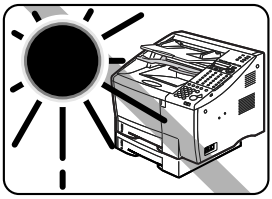

■ **Choose a flat, stable surface free of vibration.**

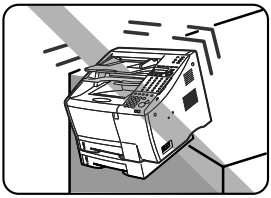

■ **Avoid a location subject to extreme temperature or humidity fluctuation. Use in a location within a temperature range of 10°C to 32.5°C, and a humidity range of 20% to 80% RH (relative humidity).**

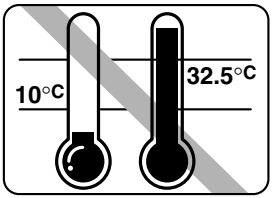

Downloaded from ManualsPrinter.com Manuals

■ **Do not setup the machine near a television, radio, or heavy equipment like copy machines, air conditioners, computers, or large printers that can generate strong electromagnetic fields. Large equipment can generate electronic noise that can interfere with the operation of the machine.**

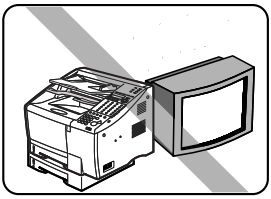

■ **Choose a location that is clean and free from dust and moisture.**

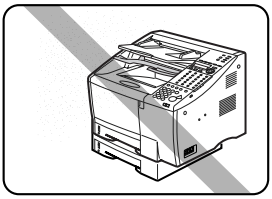

■ **Do not use or store the machine outdoors.**

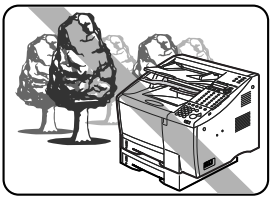

■ **Place the machine near a telephone line.**

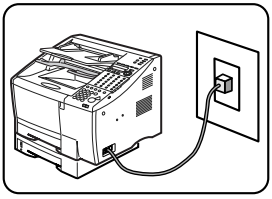

■ **To avoid damage to the machine from overheating, do not block the exhaust vent. Install the machine approximately 10 cm away from walls or other equipment.**

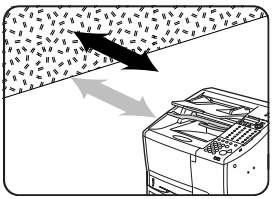

Downloaded from ManualsPrinter.com Manuals

Space Around the Machine

To ensure proper ventilation and easy operation, set up the machine in an area that meets the minimum requirements for clearance, as illustrated below.

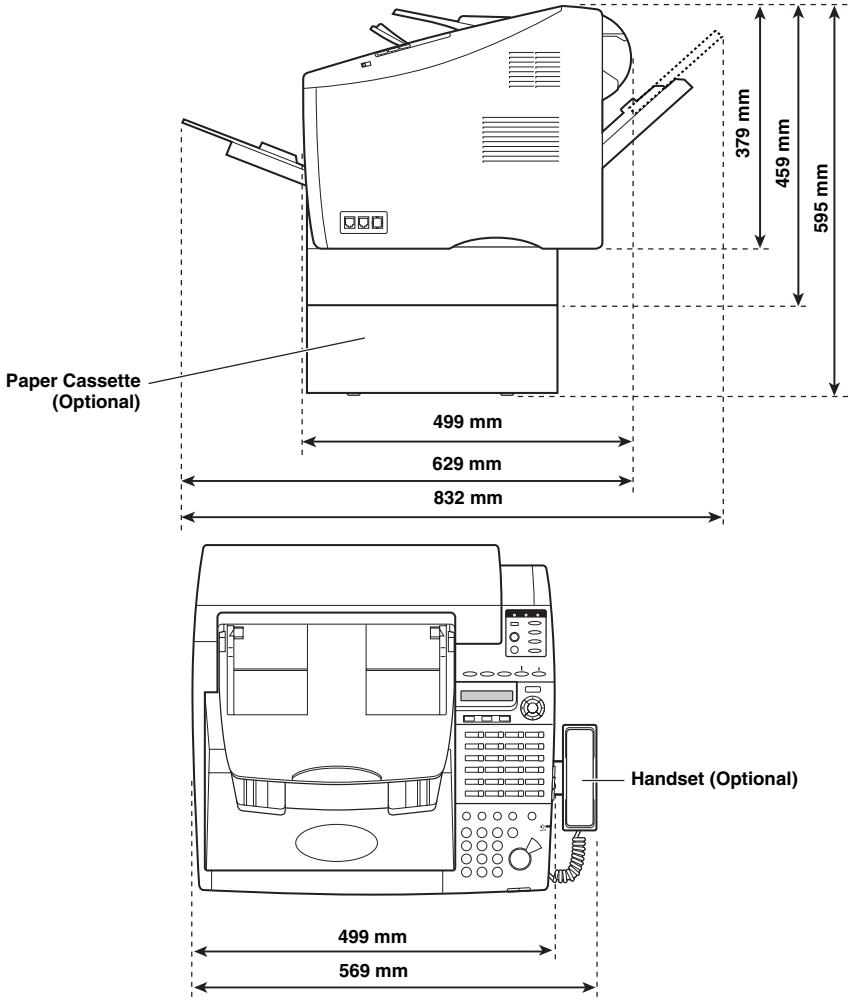

Downloaded from ManualsPrinter.com Manuals

CAUTION

- **To avoid damage to the machine from overheating, do not block the exhaust vent. Install the machine approximately 10 cm away from walls or other equipment.**

Downloaded from ManualsPrinter.com Manuals

Power Requirements

■ **Place the machine near a standard 220-240 V AC power outlet. This machine is intended for domestic use. Do not attempt to use it outside the country where you purchased it.**

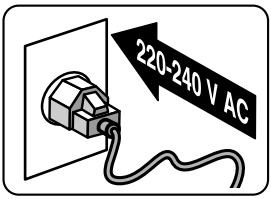

■ **Do not plug the power cord into an extension cord connector or power strip shared with other plugs.**

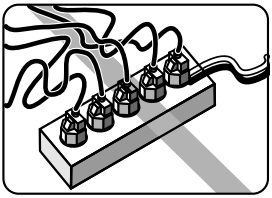

■ **Do not plug the machine into a power outlet shared with an air conditioner, personal computer, electric typewriter, copier, or other equipment that generates electrical noise.**

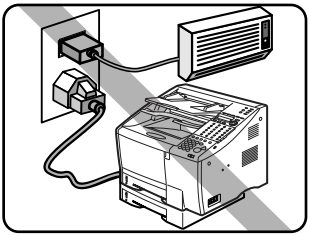

■ **Check the plug frequently, and make sure that it is firmly plugged into the socket.**

Downloaded from ManualsPrinter.com Manuals

■ **Do not plug the power cord into an UPS (Uninterruptable Power Supply).**

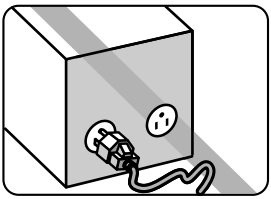

Downloaded from ManualsPrinter.com Manuals

General Precautions

Observe the following precautions always when you use this machine.

WARNING

- **TO AVOID SERIOUS INJURY, NEVER DISASSEMBLE THE MACHINE. EXPOSED POWER POINTS INSIDE THE MACHINE CAN CAUSE ELECTRICAL SHOCK IF YOU TOUCH THEM.**

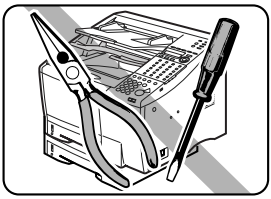

■ **After you unplug the machine, always wait at least five seconds before you plug it in again. Always unplug the machine before you move it.**

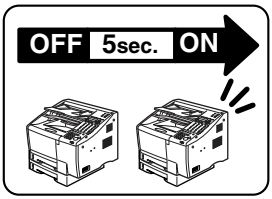

■ **During electrical storms, disconnect the plug from the power outlet. The machine can hold documents in memory for up to 12 hours using its backup battery. However, this length of time will become shorter through repeated charging and discharging of the backup battery, or if you install the optional memory.**

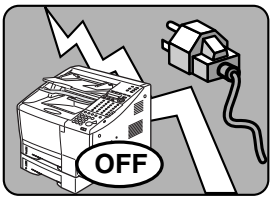

Downloaded from ManualsPrinter.com Manuals

■ **Before you connect or disconnect the plug from the power outlet, make sure your hands are dry.**

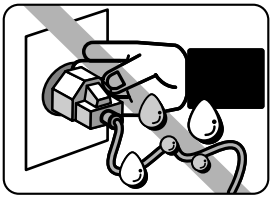

■ **Do not stack boxes or furniture around the power outlet. Keep the area open so you can reach the outlet quickly. If you notice anything unusual (smoke, strange odors, or noises) around the machine, unplug the machine immediately. Call for service.**

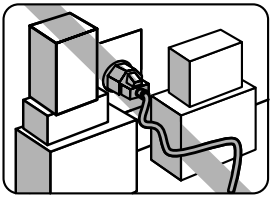

■ **Before you transport the machine, remove the toner cartridge. To protect the toner cartridge from bright light, cover it with its original protective bag or a cloth.**

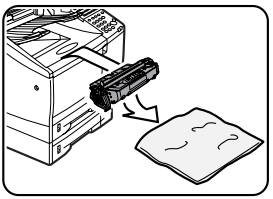

■ **Keep liquids, cleaners, and other solvents away from the machine. Keep metal pins, paper clips, staples, and other objects away from the machine. If something falls into the machine, disconnect the plug from the power outlet, and call your local authorized Canon dealer.**

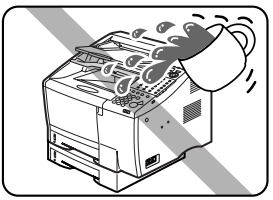

Downloaded from ManualsPrinter.com Manuals

■ **Do not set the machine, other equipment, or furniture on the power cord. Never tie the power cord into a knot, or wrap it around another object.**

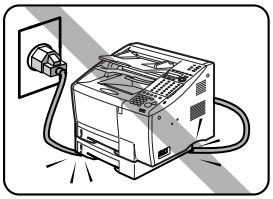

■ **To avoid paper jams, never unplug the power cord, open the printer cover, or remove a paper cassette during printing.**

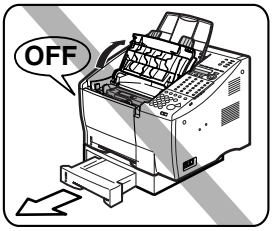

Downloaded from ManualsPrinter.com Manuals

Moving the Machine

The machine is heavy. Be sure to follow these general guidelines when lifting the machine to move it or to install the optional paper cassette.

- Moving the machine requires two people.
- When you lift the machine, remove the paper cassette from the machine, and firmly hold the front of the machine by the paper cassette slot, and lifting handles on both sides of the machine as shown in the illustration below.
- If you have the 500 sheet optional paper cassette installed, call your local authorized Canon dealer when moving the machine.

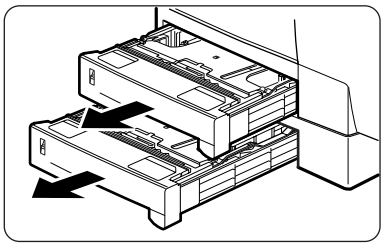

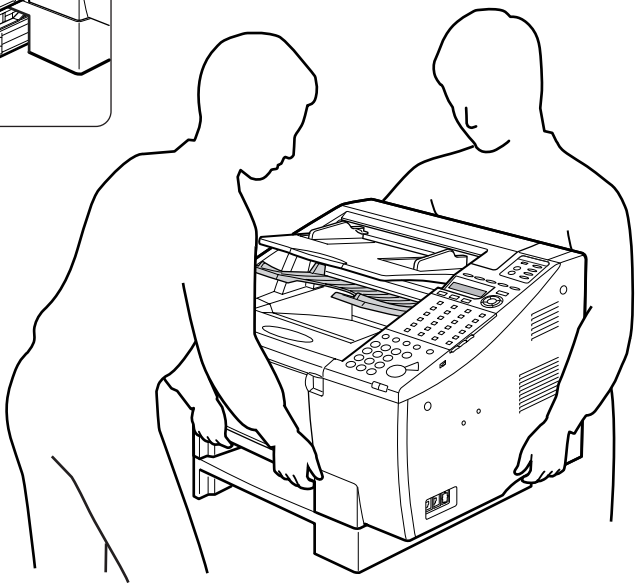

Downloaded from ManualsPrinter.com Manuals

Unpacking: Have You Got Everything?

As you unpack the machine, save the carton and packing material in case you want to move or ship the machine in the future. Ask someone to help you remove all the items from the box.

CAUTION

- **Lifting the main unit requires two people. To remove the main unit from the carton, follow the general guidelines and illustration on p. 1-18.**

1 **Cut and remove the strapping bands from the carton.**

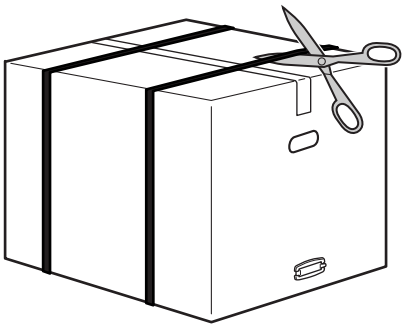

2 **Remove the adhesive tapes on the top of the carton.**

Downloaded from ManualsPrinter.com Manuals

3 **Take out the document output tray, document feeder tray, documentation and destination labels, telephone line and power cord, and FX7 Toner Cartridge in its protective bag. Remove the four polystyrene plastic blocks positioned on top of the main unit.**

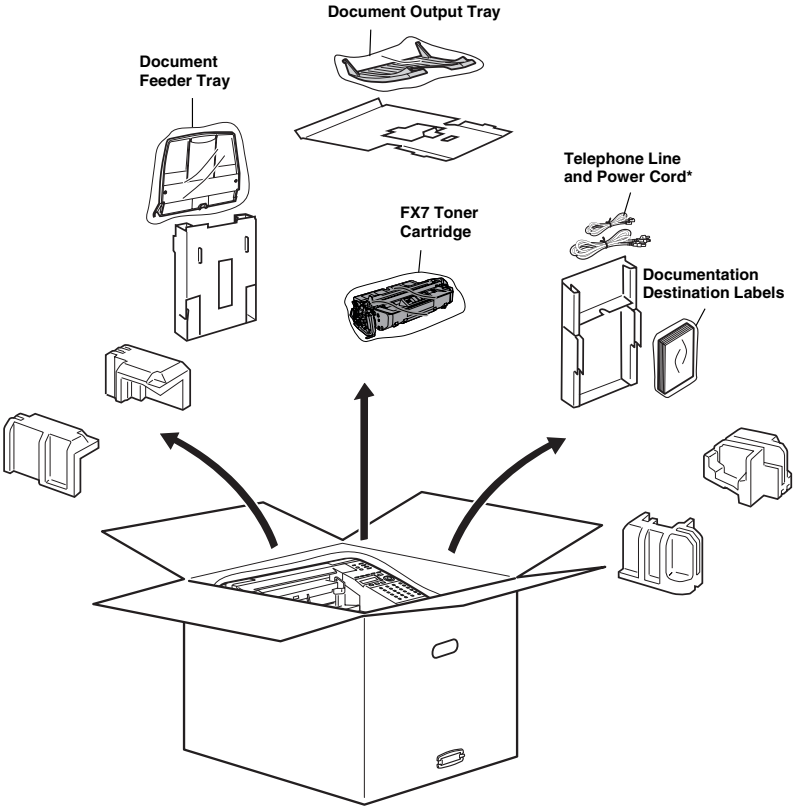

* The shapes of the power cord and telephone line will differ depending on the country of purchase.

Downloaded from ManualsPrinter.com Manuals

4 **Remove the two stoppers on the side of the box by pulling out the tab on the right side of each stopper.**

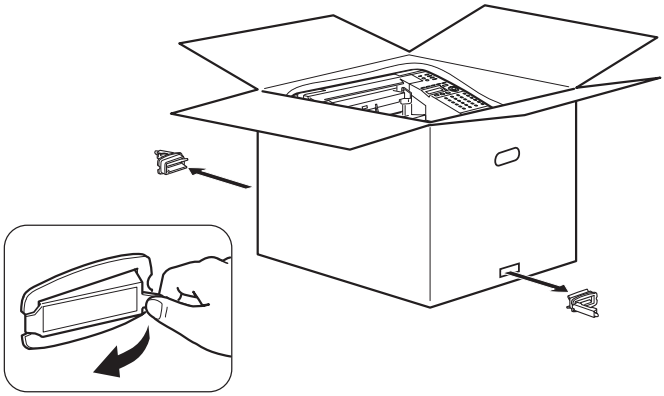

5 **Lift and remove the top carton.**

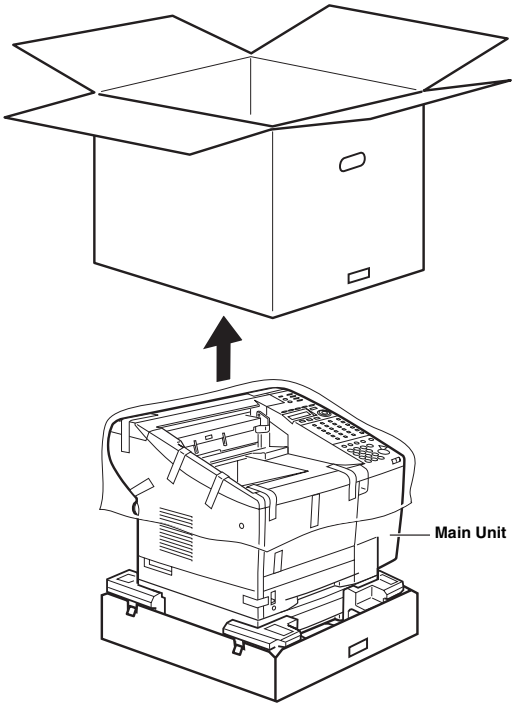

Downloaded from ManualsPrinter.com Manuals

6 **Lift the main unit by gripping the handles on its right and left sides. (See “Moving the Machine”, on p. 1-18.)**

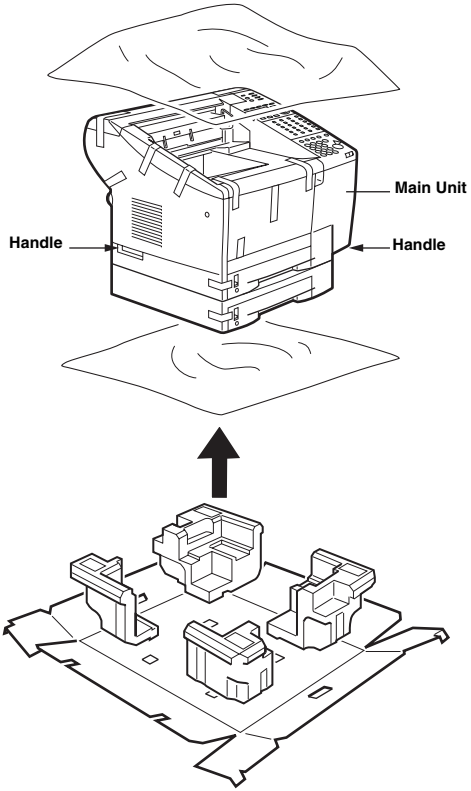

For the FAX-L2000/L2000IP

Check each item against this list as you remove it from the box.

- One main unit

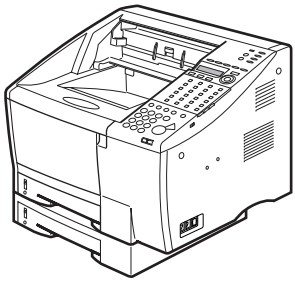

Downloaded from ManualsPrinter.com Manuals

• One document feeder tray

Remove the tape on the back of the tray before attaching it to the main unit.

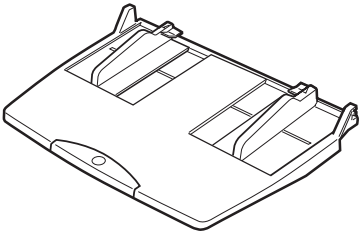

• One document output tray

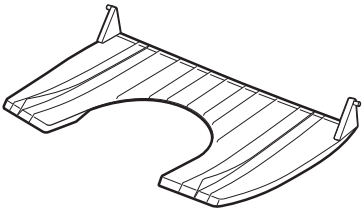

• One power cord*

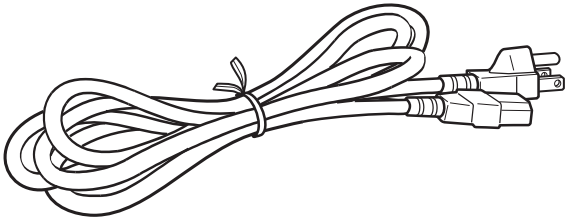

• One telephone line*

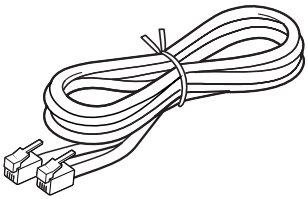

* The shapes of the power cord and telephone line will differ depending on the country of purchase.

Downloaded from ManualsPrinter.com Manuals

- Two sheets of destination labels

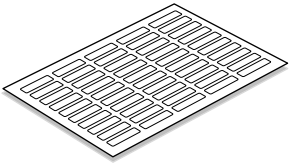

- Two sheets of cassette handling precaution label

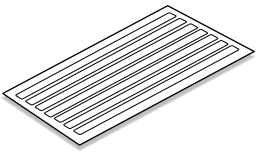

- One Reference Guide
- One Facsimile Guide
- One FX7 Toner Cartridge

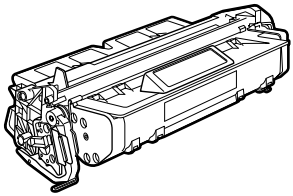

For the FAX-L2000IP Only

- Two CD-ROMs
- One Setup Guide

Consumable

- Canon FX7 Toner Cartridge

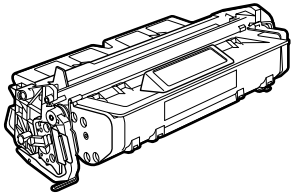

Downloaded from ManualsPrinter.com Manuals

Optional Equipment Available

- HANDSET KIT 8
- G3 FAX OPTION MEMORY VII (32 MB)
- Verification Stamp Unit 1
- FXL-Cassette Feeder 6 (letter, A4; 500-sheet capacity)
- Printer Kit (for the FAX-L2000 only)
- Network Kit (for the FAX-L2000 only)

Downloaded from ManualsPrinter.com Manuals

Parts of the Machine

The illustrations below are those of the FAX-L2000/L2000IP with the optional handset kit installed.

Front View

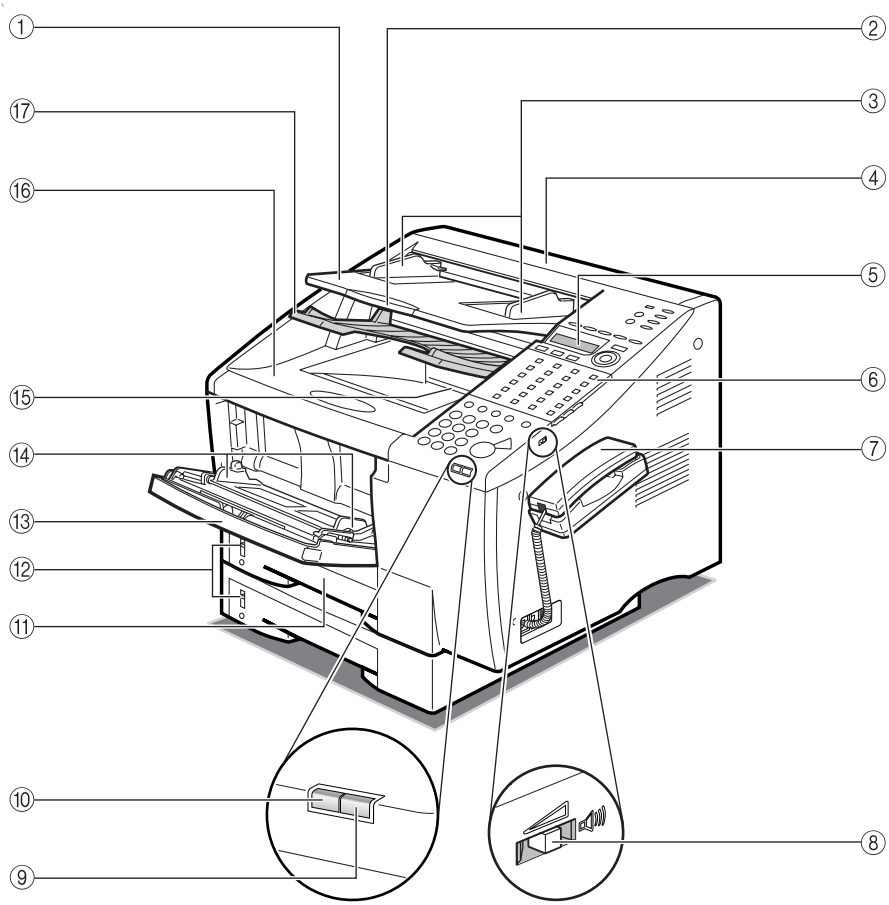

Downloaded from ManualsPrinter.com Manuals

① **Document Feeder Tray**
Holds documents for scanning.

② **Document Extension Tray**
Open to support long documents during scanning.

③ **Document Guides**
Adjust to the width of the document.

④ **ADF (Automatic Document Feeder) Cover**
Provides access to help you clear paper jams, and clean the scanning area.

⑤ **LCD Display**
Displays menu items and messages.

⑥ **Operation Panel**
Use the operation panel keys to operate the machine.

⑦ **Handset (Optional)**
Detachable handset.

⑧ **Speaker Volume Switch**
Adjusts the speaker's volume.

⑨ **Error Lamp**
A light that blinks red when a problem occurs.

⑩ **In Use/Memory Lamp**
A light that blinks green when the machine is transmitting or receiving documents, or maintains a steady green when there are documents stored in memory.

⑪ **Paper Cassettes**
Adjustable to A4, A5, B5, executive, legal, and letter paper sizes. Each cassette holds approximately 250 sheets of paper.

⑫ **Paper Volume Status Bar**
Indicates the level of the current paper supply.

⑬ **MP (Multi-Purpose) Tray**
Adjustable to A4, A5, B5, executive, legal, and letter paper sizes. Holds approximately 100 sheets of paper.
Also holds envelopes and free-size paper.

⑭ **Paper Guides**
Adjust to the width of the paper.

⑮ **Output Tray**
Holds printed documents after they are ejected from the machine.

⑯ **Printer Cover**
Covers the toner cartridge.

⑰ **Document Output Tray**
Holds documents that have been sent or copied.

Downloaded from ManualsPrinter.com Manuals

Rear View

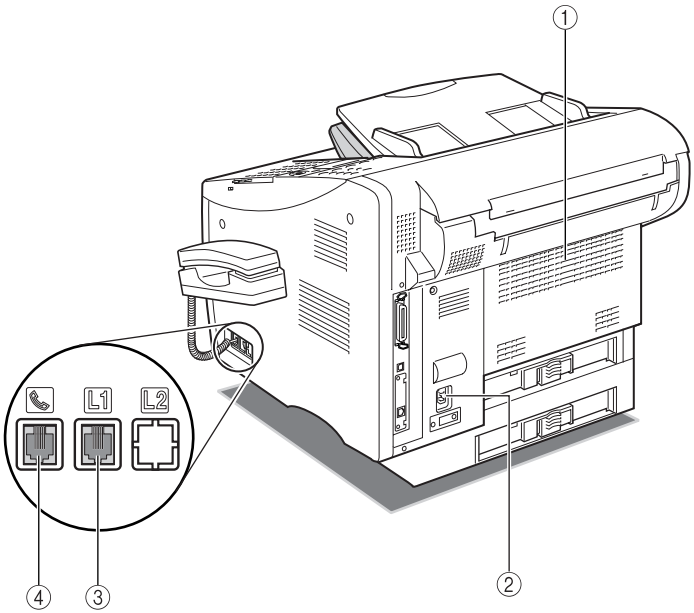

① **Face-Up Tray**
Holds printed documents after they are ejected from the machine.

② **Power Socket**
Connect the power cord here.

③ **Telephone Line Jack (L1)**
Connect the telephone line here.

④ **Handset Jack**
Connect the optional handset or an extension telephone.

Downloaded from ManualsPrinter.com Manuals

Handset (Optional)

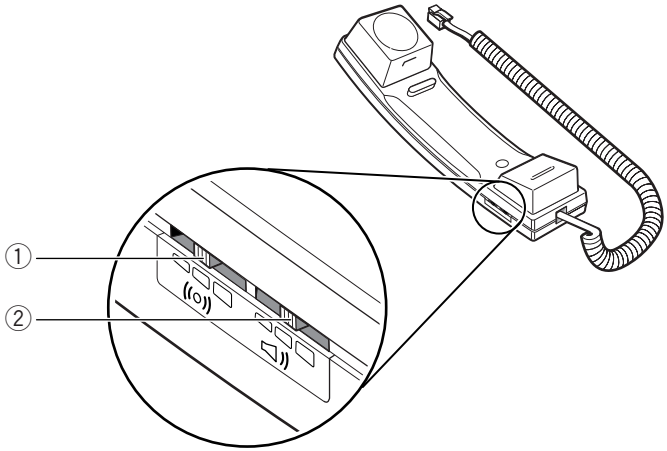

① **Ringer Volume Switch**
Adjusts the volume of the ringer. Use a pen or another pointed object to adjust the switch to 'HIGH', 'LOW', or 'OFF'.

② **Speaker Volume Switch**
Adjusts the volume of the handset so you can hear suitable sound from the speaker.

Downloaded from ManualsPrinter.com Manuals

Removing the Shipping Material

All shipping material must be removed. The shipping material is attached inside the main unit and inside the paper cassettes to protect delicate parts from vibrations during shipping.

Shipping Tape

1 **Remove all shipping tape from the unit.**

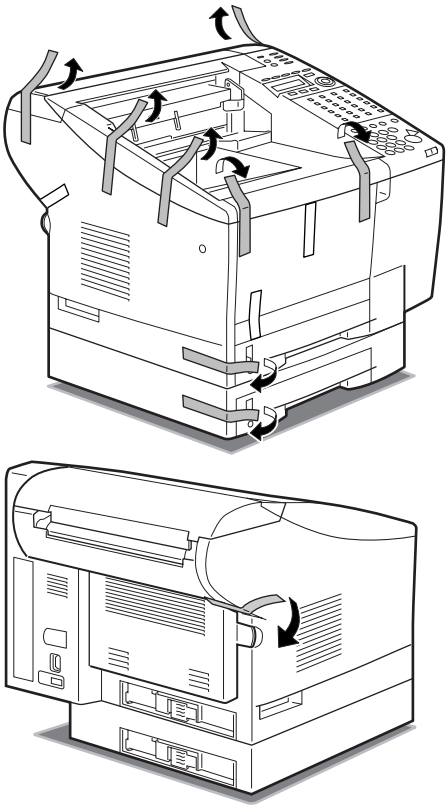

Downloaded from ManualsPrinter.com Manuals

Packaging Material Inside the Machine

1 **Gently lift the ADF cover, and remove the protective packing material from inside the feeder area.**

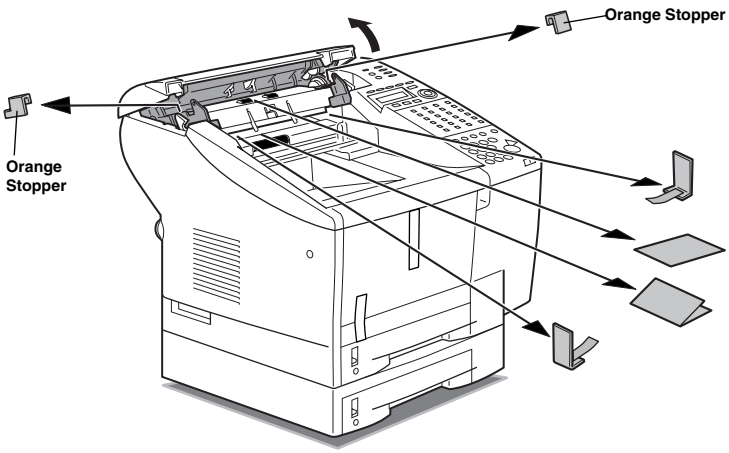

IMPORTANT

- *Be sure to remove the orange stoppers.*

2 **Close the ADF cover.**

3 **Open the printer cover.**

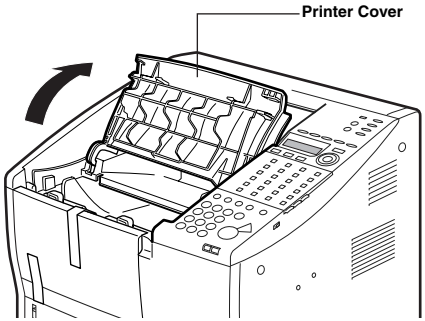

Downloaded from ManualsPrinter.com Manuals

4 **Remove the shipping tape of the MP tray and the printer cover.**

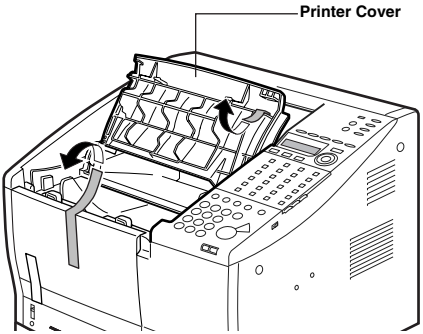

5 **Close the printer cover.**

Downloaded from ManualsPrinter.com Manuals

Packaging Material from the Paper Cassettes

If your machine comes with more than one paper cassette, you can use this procedure for each one.

1 **Pull out the paper cassette, and remove it from the machine.**

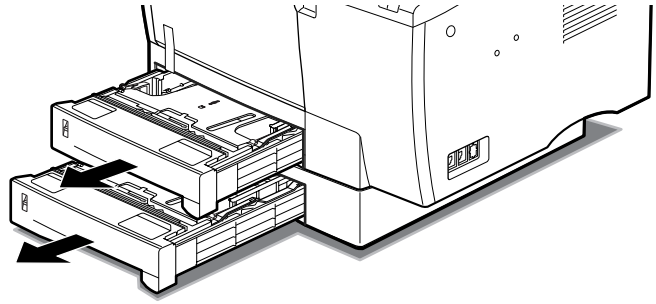

2 **Remove the shipping tape.**

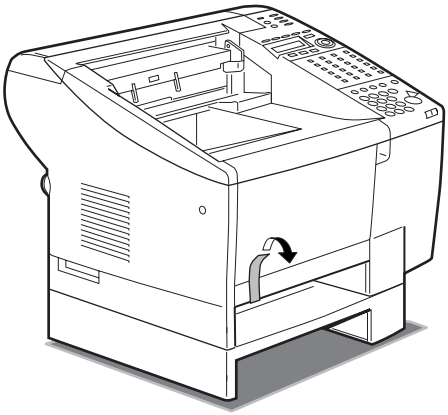

3 **Set the paper cassette down on a flat, stable surface.**

Downloaded from ManualsPrinter.com Manuals

4 **Remove the tape and orange key attached to the paper cassette.**

To remove the orange key: While pressing down on the bottom metal plate with one hand, turn the orange key counter-clockwise to pull it out.

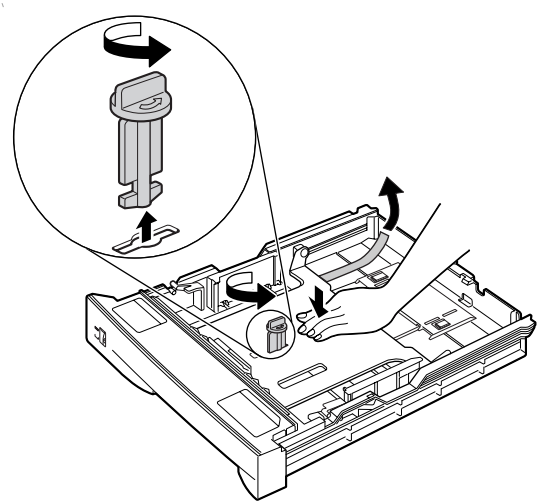

5 **Select your language from the supplied cassette handling precaution label and stick it to the part of the paper cassette indicated in the illustration below.**

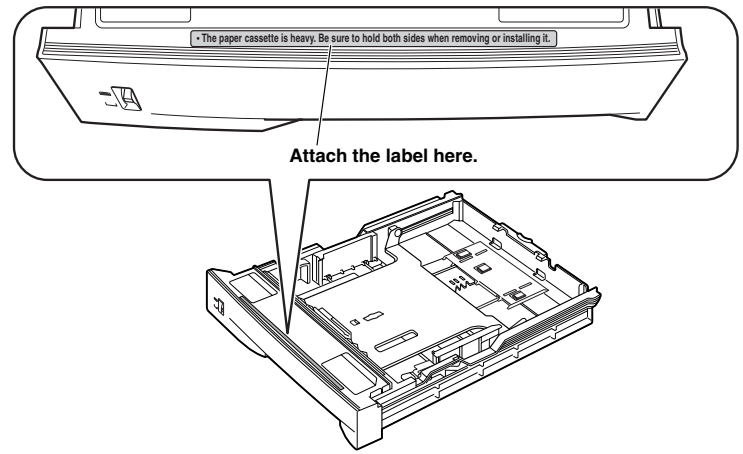

Downloaded from ManualsPrinter.com Manuals

6 **Reinsert the paper cassette into the machine.**

For more details on how to reinsert the paper cassette into the machine, see step 6 of “Loading Paper into the Paper Cassettes”, on p. 1-41.

Protective Plastic Sheet

The LCD display on the operation panel is covered with a plastic sheet to protect it during shipping. This protective material should be removed before you use the machine.

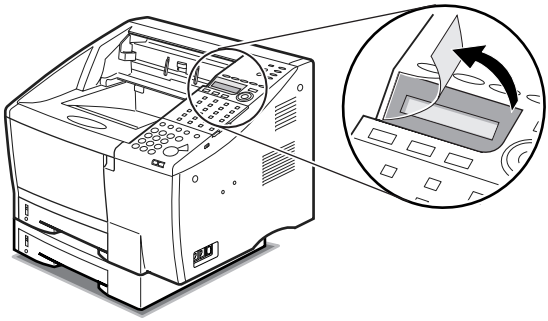

Downloaded from ManualsPrinter.com Manuals

Assembling the Machine

Follow the instructions in this section to help you assemble the machine, and prepare it for full operation.

Installing the Toner Cartridge

Install only a Canon FX7 Toner Cartridge in your machine.

CAUTION

- **Installing any other type of cartridge in this machine could damage the machine and void your warranty. Leave the toner cartridge in its protective bag until you are ready to install the cartridge. Handle the toner cartridge carefully.**

1 Open the printer cover.

Open the printer cover to its full extent.

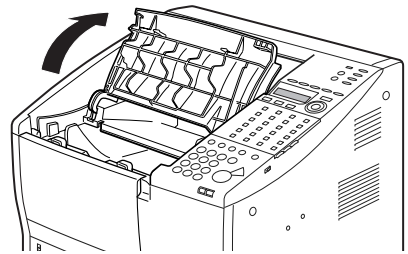

2 Remove the toner cartridge from its protective bag.

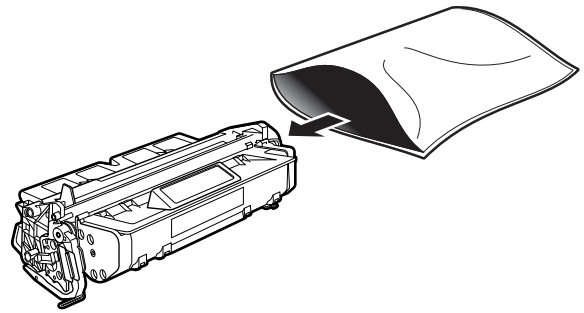

Downloaded from ManualsPrinter.com Manuals

IMPORTANT

- *Save the protective bag and all other shipping material. You will need this material later when you dispose of the cartridge after it has run out of toner.*

3 **While holding the cartridge by the ends, rock it gently five or six times to distribute the toner evenly inside the cartridge.**

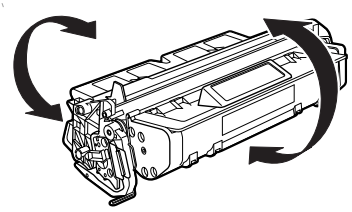

4 **Place the cartridge on a stable, flat, clean surface, and snap the tab on the side to detach it from the cartridge.**

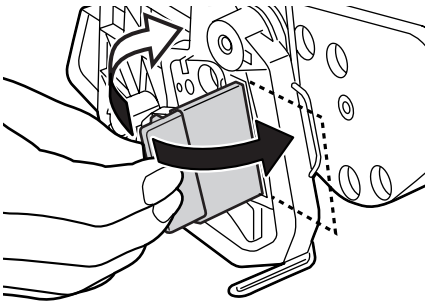

5 **As you steady the cartridge with one hand, remove the tape by gently pulling the plastic tab straight out with your other hand.**

Use a firm, even pull to avoid breaking the tape.

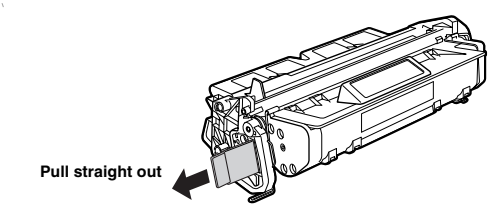

Downloaded from ManualsPrinter.com Manuals

IMPORTANT

- *Do not pull the tab upwards or downwards. The tape may break.*
- *If the tab breaks off from the tape, pull the tape out by pulling on the end of the tape where the tab was originally attached.*
- *Wash off any toner from your hands or clothing immediately with cold water.*

6 Insert the cartridge in the direction indicated by the arrow, with the FX7 toner label on the cartridge facing up.

Gently slide the toner cartridge into the machine until it is completely down and in a level position.

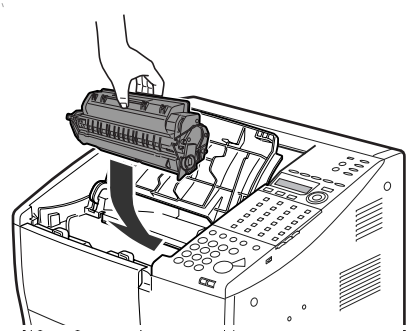

CAUTION

- **To avoid pinching your fingers between the toner cartridge and the machine, grip the cartridge as shown below.**

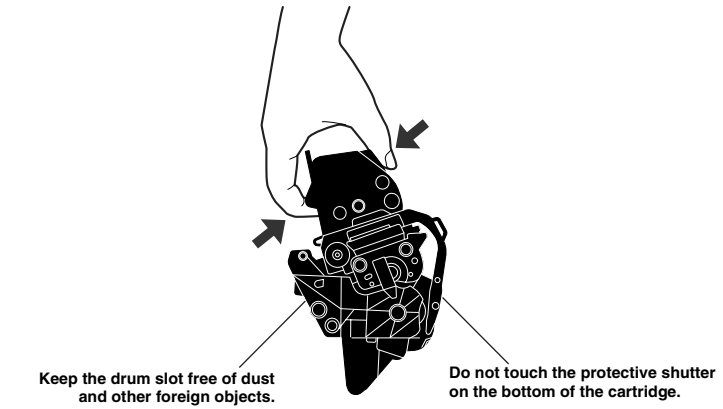
Keep the drum slot free of dust and other foreign objects.
Do not touch the protective shutter on the bottom of the cartridge.

Downloaded from ManualsPrinter.com Manuals

- **When you insert the toner cartridge, make sure that the plastic knob ① on the side of the cartridge slides vertically into the guiding groove ② on the machine.**

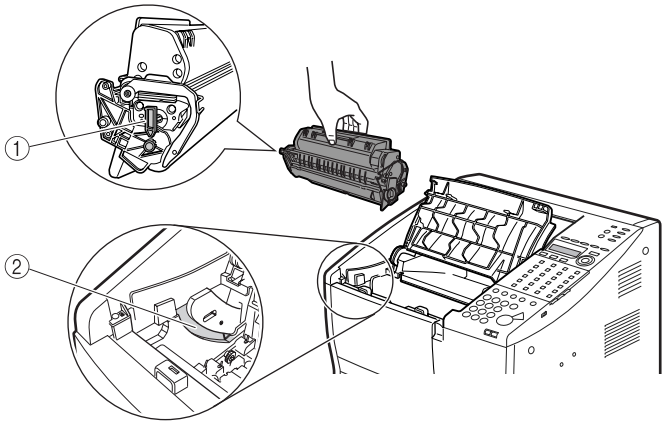

7 Close the printer cover.

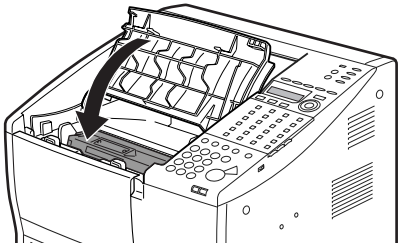

IMPORTANT

- *If the printer cover does not close completely, do not force it down. Remove the toner cartridge and insert it again.*
- *To avoid exposing the light-sensitive drum, never leave the printer cover open.*
- *The machine will not operate if the printer cover is not closed completely.*
- *If you see the message below, and the Error lamp blinks red when the machine is plugged in, open the printer cover again, and make sure the toner cartridge is in a level position. (See "Turning the Power ON", on p. 1-51.) Then, close the printer cover.*

```
CHECK PRINTER COVER
```


Downloaded from ManualsPrinter.com Manuals

Attaching the Document Output Tray

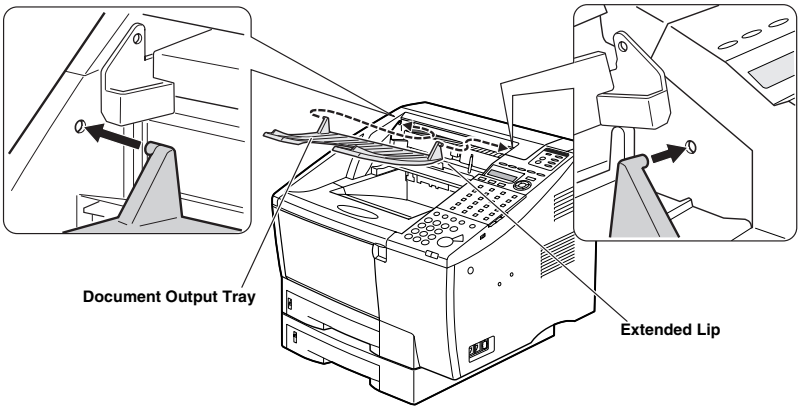

IMPORTANT

- *Make sure the knobs on each side of the tray fit into the holes on each side of the main unit. The back of the tray sits on top of the extended lip of the main unit.*

Attaching the Document Feeder Tray

NOTE

- *Remove the tape on the back of the tray before attaching it to the main unit.*

1 **Slide one side into position first, then the other side.**

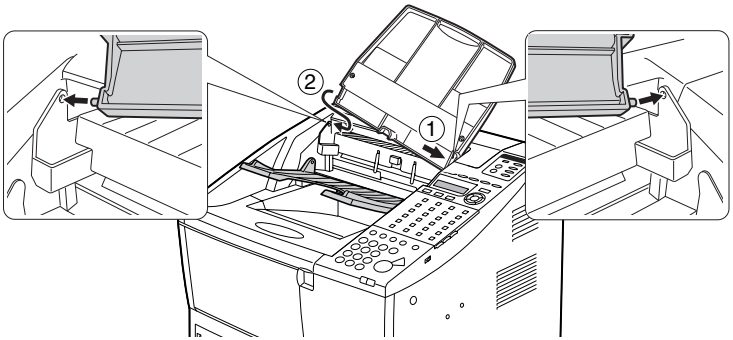

Downloaded from ManualsPrinter.com Manuals

Loading Paper into the Paper Cassettes

If your machine comes with more than one paper cassettes, you can use this procedure for each one.

The paper cassette can be adjusted to hold standard A or B series paper or inch-size paper, and can hold up to approximately 250 sheets of paper.

For high-quality printouts, we recommend using Canon standard 60 to 105 g/m^2 weight paper.

Whenever you change the paper size, you have to adjust the paper size setting for the paper cassette using the PAPER SETTINGS menu. (See “Setting the Paper Size for the Paper Cassettes”, on p. 2-14.)

IMPORTANT

- *Use of print media not meeting the paper requirements, may cause severe paper jams or result in the excessive mechanical wear of the machine.*
- *Do not load the following paper into the paper cassette:*
  - *Moist paper*
  - *Paper that is wavy, curled, or damaged*
  - *Folded, clipped, or stapled paper*
  - *Paper containing materials that melt, vaporize, offset, discolor, or emit dangerous fumes at a temperature of 190°C or higher*
- *To avoid paper curling, do not open the paper packages until you are ready to load the paper into the machine. Store unused paper from opened packages in a cool, dry location.*
- *Let the paper run out before you refill the paper cassette. Avoid mixing new paper with paper remaining in the paper cassette.*
- *Do not load different paper sizes into the paper cassette at the same time.*
- *If a printed page comes out of the machine all curled up, you can correct the problem by turning over the paper stack in the paper cassette so that the bottom sheet in the stack is now at the top.*
- *If the leading edge of the paper is curled, straighten it out as much as possible before loading it into the paper cassette.*
- *Adjust the paper size guides so that there is no room between the guides and the paper stack.*

1 **Pull out the paper cassette from the main unit.**

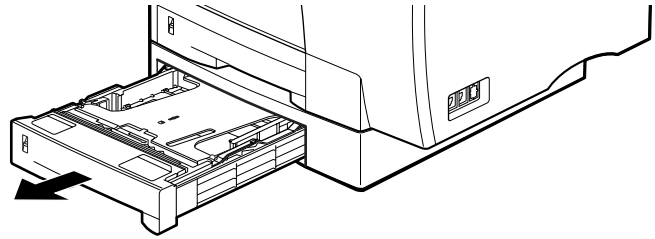

Downloaded from ManualsPrinter.com Manuals

2 Confirm that the paper guides inside the paper cassette are set to the size of the paper you are loading.

If the setting is correct, proceed to step 3.

If the setting is not correct, set the paper guides to match the size of the paper that you are loading.

● To change the paper size:

❑ Adjust the paper size side guides in the following way:
Push the paper size side guides inward or outward to match the paper size that you are loading.

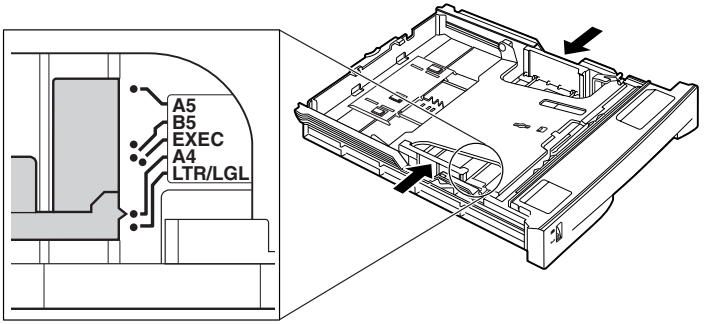

❑ Push the stopper in the center of the paper size rear guide, and slide it to the mark indicating the desired paper size.

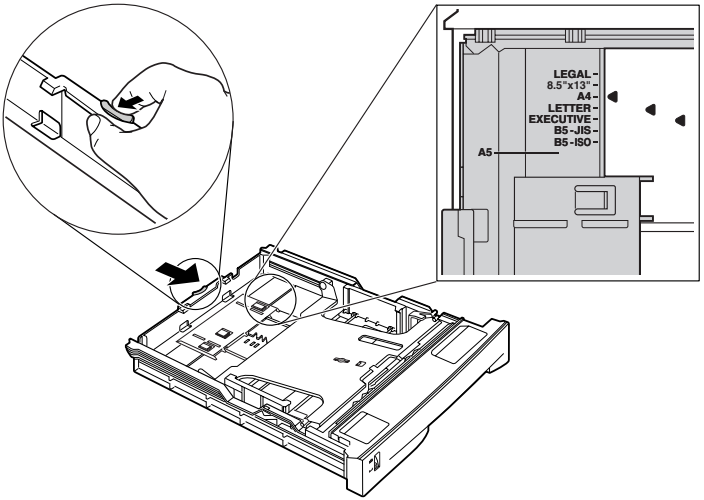

Downloaded from ManualsPrinter.com Manuals

3 **Before you load a stack of paper into the paper cassette, tap the leading edge of the paper stack on a flat surface so that the edges are evenly aligned.**

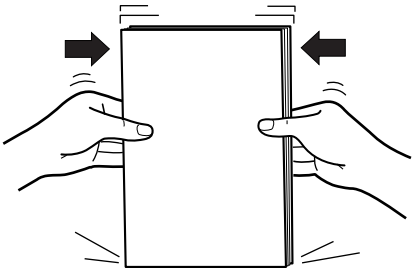

4 **Press down the inside plate of the paper cassette.**

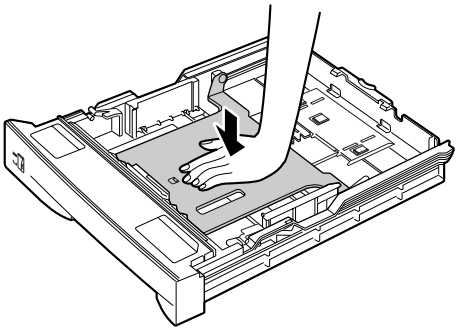

Downloaded from ManualsPrinter.com Manuals

5 **Load the stack of paper into the paper cassette with the side you want to print on face down. Insert the stack of paper so that it fits neatly against the back of the paper cassette.**

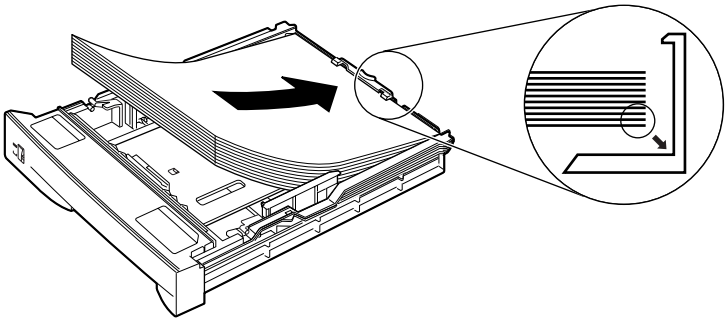

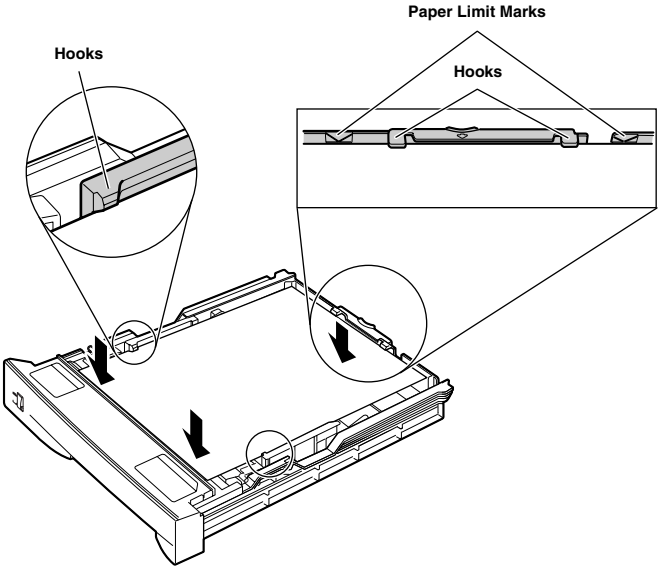

Downloaded from ManualsPrinter.com Manuals

IMPORTANT

- *Make sure that the stack of paper is below the paper limit marks and hooks at the back of the cassette.*
- *Press the paper stack down to make sure it has a clearance of approximately 1 mm from the hook of the paper size rear guide.*

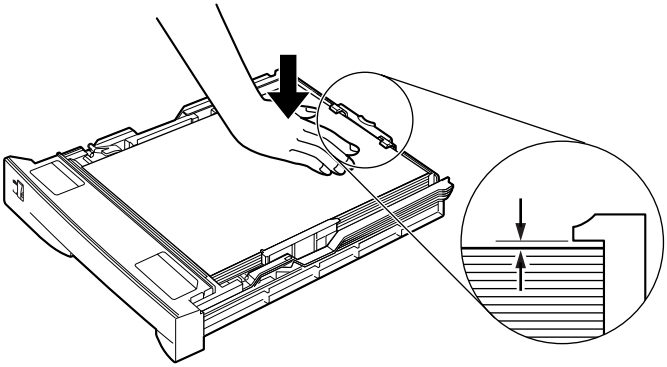

6 Reinsert the paper cassette into the main unit.

Align the paper cassette with the rails on the main unit, then lift it slightly to insert the cassette. Slide it all the way into the main unit.

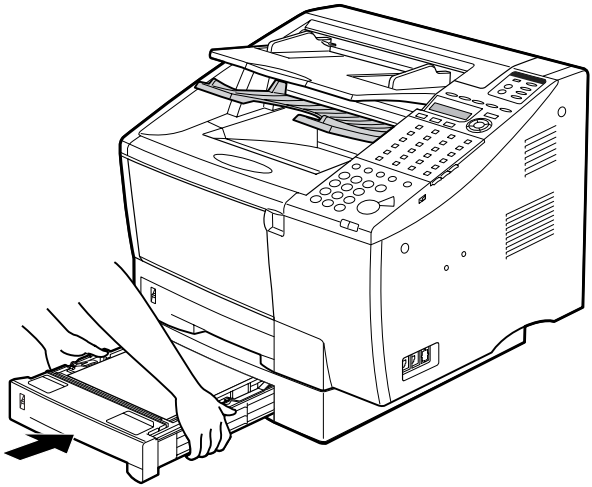

IMPORTANT

- *Make sure you slowly insert the cassette all the way into the main unit until it locks into place.*

Downloaded from ManualsPrinter.com Manuals

NOTE

- *The paper volume status bar on the paper cassette indicates the level of the current paper supply. When you see the paper volume status bar drop, make sure you have a supply of paper on hand to refill the cassette. When you see the message <SUPPLY REC. PAPER> on the LCD display, refill the cassette.*

```
SUPPLY REC. PAPER
```

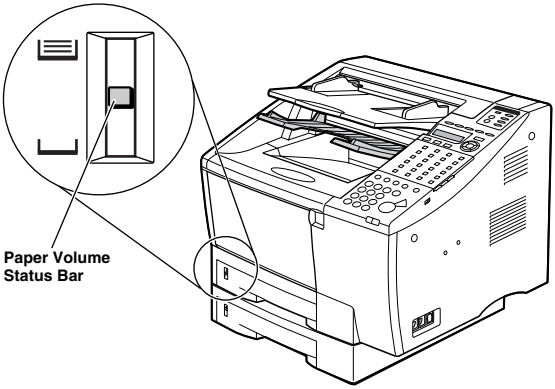

Downloaded from ManualsPrinter.com Manuals

Connecting the Handset (Optional)

A handset is available as an option for the machine. This handset is to be used with the Canon FAX-L2000/L2000IP only.

1 **Attach the handset cradle holder to the back of the cradle with the screws provided.**

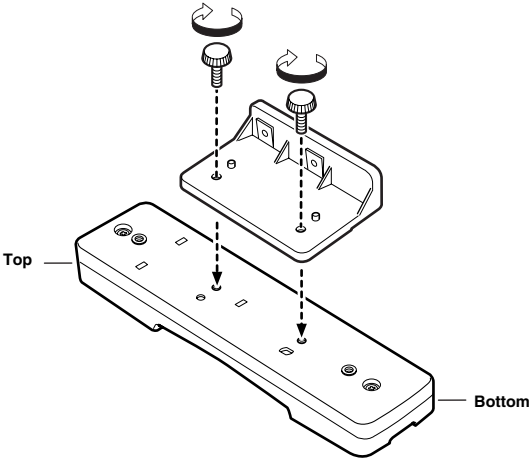

2 **Fit the handset cradle holder over the holes on the main unit.**

3 **Use the provided screws to fasten the handset cradle holder onto the main unit.**

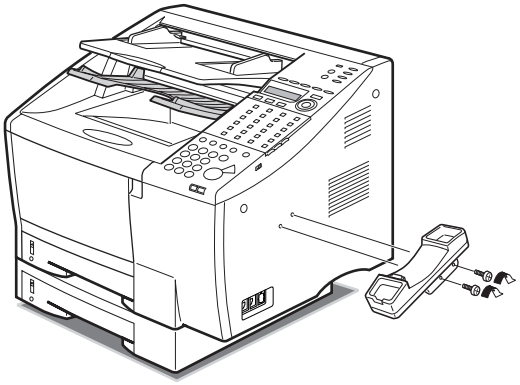

Downloaded from ManualsPrinter.com Manuals

4 **Connect the end of the handset connector cord to the handset jack marked with the handset icon ( ). Place the handset on the handset cradle.**

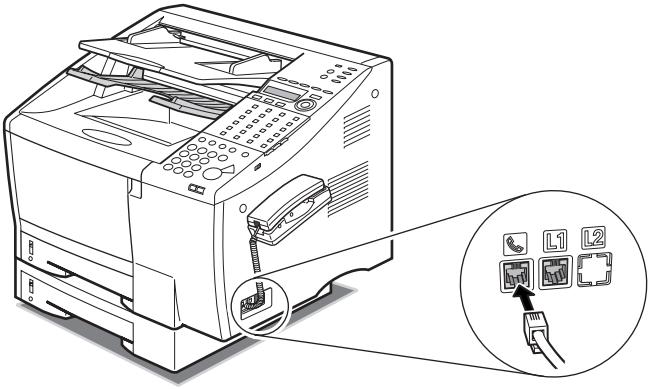

Downloaded from ManualsPrinter.com Manuals

Connecting an Extension Telephone

To connect an extension telephone to the machine, you have to use the extension telephone jack.

NOTE

- *Only one jack is provided to be used with the optional handset or an extension telephone. A separate jack is not provided for an extension telephone.*

1 Connect the extension telephone cord to the handset jack marked with the handset icon ( ).

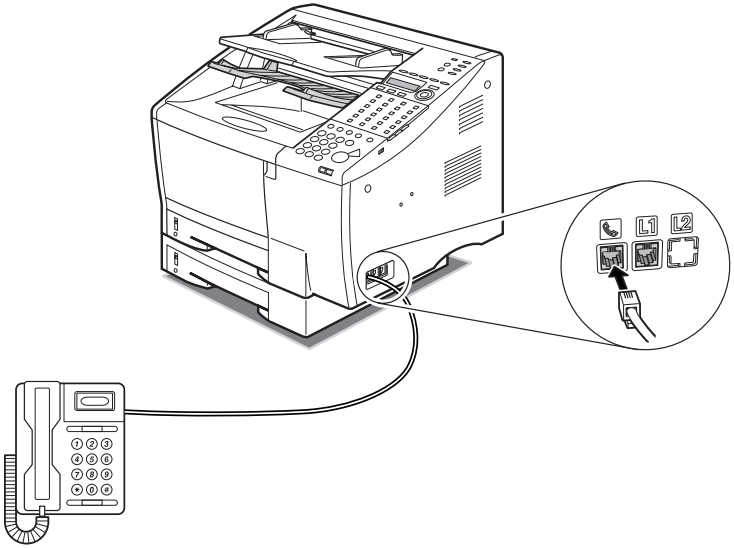

● **Users in the U.K. only**

❑ When connecting an extension telephone, be sure to connect the B.T. adapter. Contact your Canon Supplier for more information. B.T. adapter is available as an option.

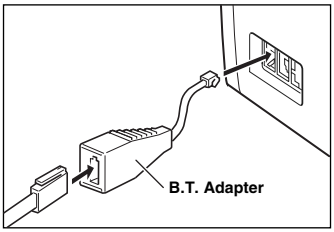

Downloaded from ManualsPrinter.com Manuals

Connecting the Telephone Line

1 **Connect one end of the supplied telephone line to the main unit's jack marked [L1].**

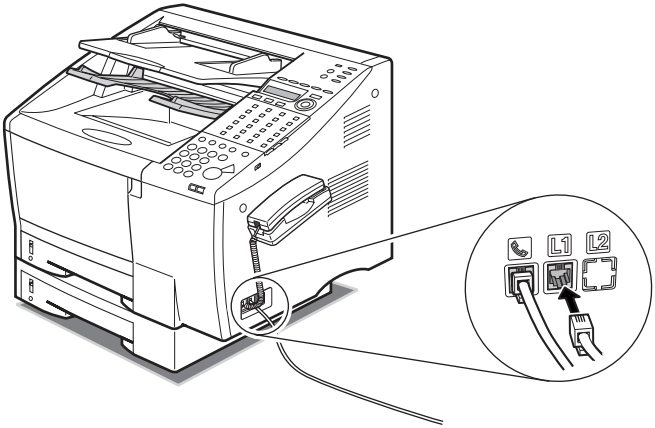

2 **Connect the other end of the telephone line to your wall telephone jack.**

Downloaded from ManualsPrinter.com Manuals

Turning the Power ON

1 **Connect the power cord to the power socket on the back of the main unit.**

2 **Connect the other end of the power cord to the power source.**

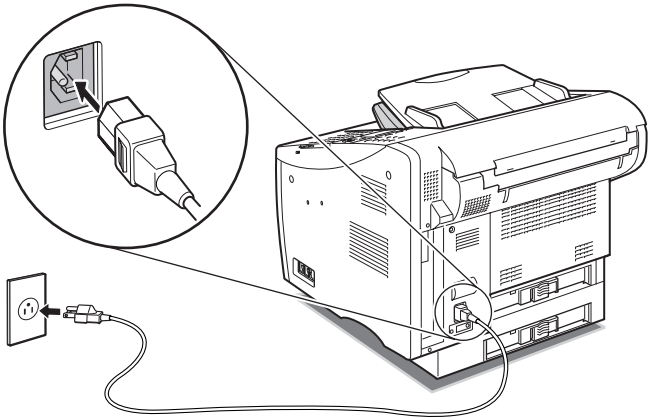

After you connect the power cord to the power source, the LCD display turns ON.

CAUTION

- **The machine must be connected to a properly grounded, three-prong 220-240 V AC outlet.**

NOTE

- *There is no power switch on the main unit.*
- *The message below appears while it takes a few seconds for the machine to warm up.*

```
PLEASE WAIT
```

- *When you connect the power cord to an AC outlet for the first time after purchase, <DISPLAY LANGUAGE> will appear in the LCD display after <PLEASE WAIT>. In this case, set the language for the LCD display, and the country*. (See "Setting the Display Language and Country", on p. 1-53.)*
  ** The country selection feature is available for certain countries only.*
- *The machine has warmed up and is ready to use when you see the date and time displayed. Now the machine is in the Standby mode.*

```
FAX 31/12 2002 03:40
AUTO
```


Downloaded from ManualsPrinter.com Manuals

- *When the date is displayed on the LCD display, the machine is in the Standby mode and ready for normal operation. If the Error lamp starts blinking red, wait for one of the following messages to appear.*

Message	Description
INSTALL CARTRIDGE	You have not yet installed the toner cartridge. Install the FX7 toner cartridge. (See “Installing the Toner Cartridge”, on p. 1-36.)
REPLACE CARTRIDGE	The toner cartridge has run out of toner. Replace the toner cartridge.
CHECK PRINTER COVER	The printer cover is not closed completely. If it does not close easily, do not force it. Remove the toner cartridge, and insert it again. Make sure it is sitting level inside the main unit, and close the printer cover again.
SUPPLY REC. PAPER	At least one of the paper cassettes is empty or not seated correctly inside the machine. Remove each cassette. Make sure the stacks of paper are below the hooks, and insert the paper cassettes again. Push the paper cassettes all the way into the machine until they lock into place.

Downloaded from ManualsPrinter.com Manuals

Setting the Display Language and Country

When you connect the power cord to an AC outlet for the first time, you need to select the language for the LCD display. For some countries, you also need to select the country where you are using the FAX-L2000/2000IP. The FAX-L2000/2000IP automatically switches the selectable settings and the default settings in the menus to suit the selected country.

Follow these steps to set the display language and country.

After connecting the power cord, the display changes from <PLEASE WAIT> to the <DISPLAY LANGUAGE> menu.

NOTE

- *The country selection feature is available for certain countries only.*

1 **Press [▼] or [▲] to select the preferred language for the LCD display → press [OK].**

```
DISPLAY LANGUAGE
<  ENGLISH          >
```
→
```
COUNTRY SELECT
   UK
```

If <COUNTRY SELECT> does not appear after <DATA ENTRY OK> is displayed, the setting is completed. The FAX-L2000/2000IP enters the Standby mode.

If <COUNTRY SELECT> appears, go to step 2.

2 **Press [▼] or [▲] to select the country where you are using the FAX-L2000/2000IP → press [OK].**

```
COUNTRY SELECT
   UK
```

Once you have selected the language and country, these setting menus will not appear next time you connect the power cord.

Downloaded from ManualsPrinter.com Manuals

NOTE

- *If your country name does not appear, select <OTHERS>.*
- *To check the settings made by the country selection, you can print the User's Data List. (See Chapter 12, "Printing Report and Lists," in the Facsimile Guide.)*
- *You can change the display language or country setting using the Common Settings menu, and the System Settings menu from the Fax Settings menu respectively. (See "Common Settings", on p. 5-5, or Chapter 11, "Summary of Important Settings," in the Facsimile Guide.)*

Downloaded from ManualsPrinter.com Manuals

This chapter describes the specifications of the machine and includes the index.

Specifications 8-2
- General 8-2
- Power 8-3
- Operating Environment 8-3
- Weight 8-4
- Dimensions 8-4
- Printing Area 8-5

Index 8-6

describes what to do in response to a paper jam in the main unit, an error code, or error play.

Document Feed Jams 7-2
g the Automatic Document Feeder 7-4
Printer Feed Jams 7-5
ng a Paper Jam 7-6
all Message 7-19
Your Local Authorized Dealer 7-
e Table (Listed by Number) 7-21
D Display Messages (Alphabetical List) 7-23
uble Occurs 7-26
g Document 7-26
ber, change the toner cartridge, and perform routine 7-26
roubles 7-26

. 8-2
. 2
. 6-2
. 6-3
. 6-8
. 6
. 6-9
. 6-9
ea 6-10
ou can perform with the PAPER
YSTEM SETTINGS menus. 6-13
. 6-20
ment (Optional) 6-22
. 5-2
. 5-3
. 5-3
. 5-5
. 5-5
. 5-8

Downloaded from ManualsPrinter.com Manuals

Operation Panel Parts and Functions

This section provides you with the names and functions of the operation panel keys, and explains all the parts on the operation panel.

One-Touch Panels Closed

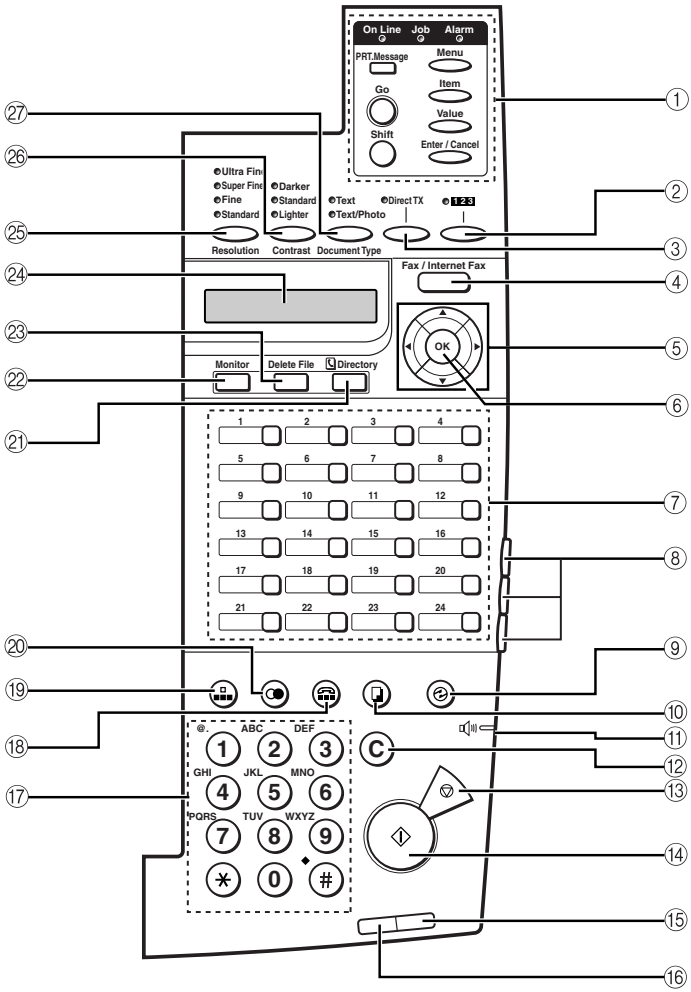

Downloaded from ManualsPrinter.com Manuals

① **Printer Operation Panel**

These keys control the printing function of the machine. For details, see the *PCL Printer Guide*. For the FAX-L2000, the installation of the Printer Kit is necessary to use these keys.

② **(Counter Check)**

Press to check the counter information.

③ **Direct TX**

Sets the machine to the Direct Sending mode so you can send a document ahead of other documents stored in memory. Direct Sending scans a document, and sends it immediately without storing the document in memory.

④ **Fax/Internet Fax**

Press to send an Internet Fax. For the FAX-L2000, the installation of the Network Kit is necessary to use the Internet Fax function.

⑤ **◀ ▶ Cursor Keys**

Move the cursor to the left or right during data registration.

▲▼ Search Keys

Enable you to scroll through the display so you can see other options and selections in the menus during data registration.

They also enable you to search through the registered fax numbers during directory dialing.

⑥ **OK**

Selects a menu item during data registration.

⑦ **One-Touch Speed Dialing Keys**

Dial numbers registered under one-touch speed dialing keys.

⑧ **One-Touch Speed Dialing Panels**

The first panel displays keys 1-24. Open the first panel to access keys 25-48. Open the second panel to access keys 49-72. Open the third panel to access the registration keys.

⑨ **(Energy Saver)**

Press to enter or cancel the Energy Saver mode. When the machine is in the Energy Saver mode, the Energy Saver indicator lights, and the other keys and indicators are turned OFF.

⑩ **(Copy)**

Enables the machine to act as a copier, so you can copy a document.

⑪ **Speaker Volume Switch**

Adjusts the speaker's volume.

⑫ **(Clear)**

Clears an entire entry during information registration.

⑬ **(Stop)**

Cancels sending, receiving, data registration, and other operations, and returns the machine to the Standby mode.

⑭ **(Start)**

Enables you to start sending, receiving, scanning, and copying documents.

⑮ **Error Lamp**

A light that blinks red when a paper jam occurs or the machine has run out of paper or toner. The error is described by a message that appears on the LCD display.

⑯ **In Use/Memory Lamp**

A light that blinks green when the machine is transmitting or receiving documents, or maintains a steady green light when there are documents stored in memory.

Downloaded from ManualsPrinter.com Manuals

⑰ **Numeric Keypad**

Use the keys on the numeric keypad to enter telephone numbers when dialing. These keys are also used to enter text, numbers, and symbols when registering names and numbers.

⑱ **(Hook)**

Enables you to dial, even when the handset is still on the handset cradle.

⑲ **(Coded Dial)**

Press [Coded Dial], followed by a three digit code to dial the telephone number registered for coded speed dialing.

⑳ **(Redial)**

Redials the previous number dialed manually with the keys on the numeric keypad.

㉑ **Directory**

Enables you to search for fax/telephone numbers by the name under which they are registered for speed dialing, and then use the number for dialing.

㉒ **Monitor**

Press to check the fax transmission or copying status.

㉓ **Delete File**

Deletes documents waiting in memory for sending.

㉔ **LCD Display**

Displays messages and prompts during operation. It also displays selections, text, numbers, and names when registering information.

㉕ **Resolution**

Sets the resolution for the documents you send.

㉖ **Contrast**

Adjusts the lightness/darkness of the documents you send or copy.

㉗ **Document Type**

Adjusts the quality of documents containing only text, or both photos and text.

Downloaded from ManualsPrinter.com Manuals

One-Touch Panels Opened

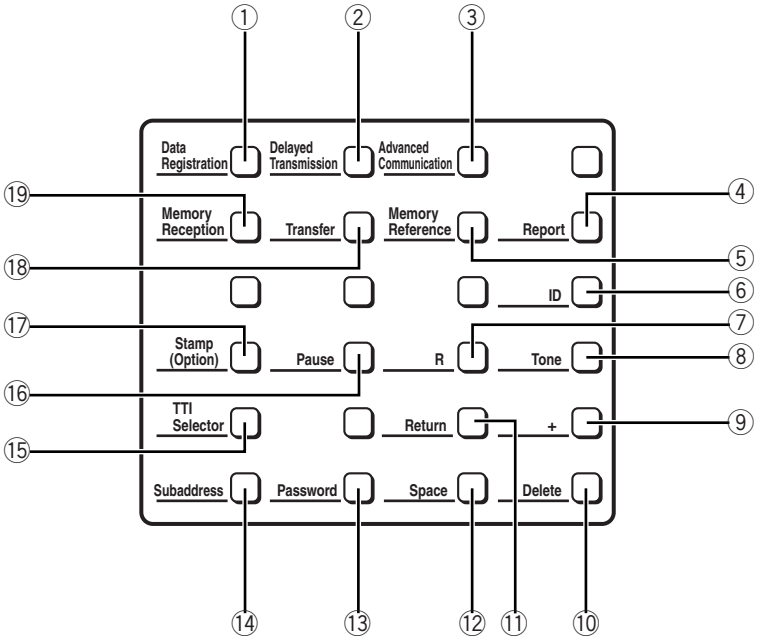

① **Data Registration**

Starts data registration for speed dialing, sender information, and other important settings for sending and receiving.

② **Delayed Transmission**

Sets a time for delayed sending.

③ **Advanced Communication**

Press to set a document for advanced communications, such as polling sending and receiving, confidential mailbox, and relay broadcast, and subaddress/password transmissions.

④ **Report**

Prints reports about information registered in the machine. Also cancels printing of reports.

⑤ **Memory Reference**

Performs operations with documents currently stored in memory, including printing a list of documents, printing a document, sending a document to another destination, or deleting a document.

⑥ **ID**

Press to enter the Department ID.

⑦ **R**

Press to dial an outside line access number or an extension number then the unit is connected through a switchboard (PBX).

⑧ **Tone**

Connects to information services that accept tone dialing only, even if you are using a rotary pulse line.

Downloaded from ManualsPrinter.com Manuals

⑨ **+**

Press [+] to enter a plus sign in a fax number.

⑩ **Delete**

Deletes a number or letter entry only when you are registering or entering a number, except for manual sending.

⑪ **Return**

Press to enter a paragraph break when entering e-mail text.

⑫ **Space**

Enters a space between letters and numbers on the LCD display when you are registering information and dialing.

⑬ **Password**

Enables you to enter an ITU-T password so you can send a document with a password.

⑭ **Subaddress**

Enables you to enter an ITU-T subaddress so you can send a document with a subaddress.

⑮ **TTI Selector**

Enters a registered sender's name to appear at the top of the document you are sending.

⑯ **Pause**

Enters pauses between digits or after the entire telephone number when dialing or registering facsimile numbers.

⑰ **Stamp (Option)**

Switches the machine in and out of the Stamp mode. If the machine is in the Stamp mode, the machine marks all documents scanned when sending in the Memory or Direct Sending mode. If you want to use the optional stamp feature, call your local authorized Canon dealer, and request the installation of the stamp feature.

⑱ **Transfer**

Switches the machine in and out of the Transfer mode. In the Transfer mode, the machine sends all the documents it receives to another fax machine at your home or another office.

⑲ **Memory Reception**

Switches the machine in and out of the Memory Lock mode. In the Memory Lock mode, the machine stores all documents it receives in memory.

Downloaded from ManualsPrinter.com Manuals

Using the Menus and Operation Panel Keys

This section provides a brief overview on how to use the operation panel keys to open menus, make selections, and register data.

General Guidelines for Registering Information

Always keep these points in mind while you are using the menus:

- If you pause and do not press a key for 120 seconds, the machine returns to the Standby mode automatically. You must then start the procedure from the beginning.
- If your machine is set to manually receive, and the machine rings while you are registering information, pick up the handset. If you hear a slow beep tone, the sender is trying to send you a document. Press (Stop) → (Start) to receive the document, then hang up the handset.

Using the Menus

The machine employs a menu system you can use to register important information or set up important features. Here, we describe how to display and operate these menus. For details on the content and purpose of each menu, see Chapter 5, “Summary of Important Settings,” or Chapter 11, “Summary of Important Settings,” in the *Facsimile Guide*.



1 **Open all three one-touch speed dialing panels to see the operation panel keys.**

2 **Press [Data Registration].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```


Downloaded from ManualsPrinter.com Manuals

3 Press [▼] or [▲] to display the name of the desired menu title.

There are eight Additional Functions menu items for Data Registration.

ADDITIONAL FUNCTIONS 1.PAPER SETTINGS	→	ADDITIONAL FUNCTIONS 8.PRINT LISTS

NOTE

- *Displaying menu names with [▼] or [▲] is rotational. If you press [▼] with the last menu name displayed, the display rotates to the first menu name. If you press [▲] with the first menu name displayed, the display rotates to the last selection.*

Open a Menu and Select an Item

1 Press [▼] or [▲] until the name of the menu you want to open is displayed → press [OK].

ADDITIONAL FUNCTIONS 6.SYSTEM SETTINGS	→	SYSTEM SETTINGS 1.SYS. ADMIN. INFO

2 Press [▼] or [▲] to browse through the menu items → press [OK] to go to the next level.

Return to the Previous Level

1 Press [Data Registration] to return to the previous level to continue browsing.

If you continue to press [Data Registration], the machine returns to the Standby mode.

Downloaded from ManualsPrinter.com Manuals

Return to the Standby Mode

1 **Press (Stop) to return to the Standby mode.**

NOTE

- *If you do not press a key for 120 seconds, the machine automatically returns to the Standby mode.*

Downloaded from ManualsPrinter.com Manuals

Entering Names for Registration

When you come to a step that requires entering a name for data registration, follow the procedure below.

In a display that requires a name entry, the letter or number in the upper right corner of the LCD display tells you the entry mode.

```
                    :A
_
```

1 Press [∗] to change the entry mode.

Display	Entry Mode	What It Does
:A	Upper case letter	Enables you to enter upper case letters. You can also press [#] to enter a symbol.
:a	Lower case letter	Enables you to enter lower case letters. You can also press [#] to enter a symbol.
:1	Number	Enables you to enter numbers.

NOTE

- *The numeric keys are clearly labeled with one number and some letters.*
- *When entering characters for the Internet Fax and LAN settings, select ":A" (upper case letter entry mode) to enter lower case letters, and press the numeric key until the lower case letter you want appears. For example, if you want to enter the letter "a", select the upper case letter entry mode → press ② until the lower case "a" appears on the LCD display.*

2 Press the appropriate key on the numeric keypad to enter a letter or number.

If upper or lower case letter is the chosen entry mode, press the key repeatedly until the upper or lower case letter you want appears.

If you go past the letter you want, press the key repeatedly until it appears again.

NOTE

- *Each key contains the upper and lower case letters for its group of letters (for example: ② contains the letters ABCabc).*
- *The letters contained under each numeric key differ depending on the country you use this machine.*

Downloaded from ManualsPrinter.com Manuals

3 **Enter the next letter, if necessary.**

If the next letter you want to enter is under the same key you just pressed, press [▶] to move the cursor to the right one space. Then, press the key repeatedly until the letter you want appears.

If the next letter you want to enter is under a different key, just press that key to move the cursor to the right, and enter the first letter of that group.

For example, if you want to enter the word <Canon>:

Press ② until you see an upper case <C> → press ✱ → press ② until you see a lower case <a>. To enter the rest of the word, press ⑥ until you see a lower case <n> → press [▶] to move the cursor to the right → press ⑥ until an <o> appears → press [▶] to move the cursor to the right → press ⑥ again until an <n> appears.

NOTE

- *When you are in the upper or lower case letter Entry mode, you can also enter symbols. Press # (#) repeatedly until you see the desired symbol.*
- *To enter a space, press [Space].*

4 **To complete entering the name for registration, press [OK].**

```
                        :a
DATA ENTRY OK
```

Correcting a Mistake



1 **Press [◀] or [▶] to move the cursor to the left or right to position it under the incorrect letter → open all three one-touch speed dialing panels → press [Delete] → enter the correct letter.**

NOTE

- *Press C (Clear) to delete the entire entry → start again.*

Downloaded from ManualsPrinter.com Manuals

Operation Panel Key Summary Table

When you come to a step where you must enter a number or name for data registration — in this section or any part of this manual and the *Facsimile Guide* — refer to the table below.

To see some of the keys described below, you may have to open all three one-touch speed dialing panels.

■ **Keys for Registering Information**

Key	Description
▲ ▼	The search keys display the next or previous menu item. Press [▼] to display the next item in the menu. If you press [▼] when the last item is displayed, the display rotates to the first item in the menu. Press [▲] to display the previous item in the menu. If you press [▲] when the first item is displayed, the display rotates to the last item in the menu. When registering names, press [▲] to immediately position the cursor under the first letter, and press [▼] to immediately position the cursor to the right of the last letter.
OK	Press [OK] to select the current item.
*	Switches the entry modes. :A The Upper Case Letter Entry mode. Enables you to enter upper case letters and symbols. :a The Lower Case Letter Entry mode. Enables you to enter lower case letters and symbols. :1 The Number Entry mode. Enables you to enter numbers.
ABC 2 to WXYZ 9	More than one letter is assigned to a key. Press [*] to enter the Text Entry mode, then press the key containing the letter you want to enter. If the letter you want to enter is not displayed first, press the key repeatedly until it appears. If the next letter is under a different key, just press that key to enter the first letter of the group, and press the key repeatedly until the letter you want appears. If the next letter is under the same key, press [▶] to move the cursor to the right one space, then press the key again to enter the first letter of the group. Press the key repeatedly until the letter you want appears.
◀ ▶	The cursor keys move the cursor to the left or right.

Downloaded from ManualsPrinter.com Manuals

#	Press [#] to enter a symbol. You can enter symbols in the Text Entry mode only. Press [#] repeatedly until the symbol you want appears. You can enter the following symbols: - . * # ! " , ; : ^ ` _ = / | ' ? $ @ % & + \ ~ ( ) [ ] { } < >
Space	Enters a space after the letter at the cursor position, or between numbers at the cursor position. You may enter spaces in telephone numbers–they do not affect dialing.
Delete	Deletes characters at the cursor position.
Ⓒ (Clear)	Clears the entire entry if you want to erase it and start again.
(Stop)	After you are finished making settings or registering information, press (Stop) to return to the Standby mode.

Downloaded from ManualsPrinter.com Manuals

Setting the Paper Size for the Paper Cassettes

This section describes the procedure to set the size of the paper you load in the paper cassettes.

Each time you change the size of the paper you load in the paper cassettes, it is necessary to change the paper size setting using the CASSETTE menu in the PAPER SETTINGS menu.



1 **Open all three one-touch speed dialing panels.**

2 **Press [Data Registration].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```

3 **Press [▼] or [▲] until <1.PAPER SETTINGS> appears → press [OK].**

```
ADDITIONAL FUNCTIONS          PAPER SETTINGS
 1.PAPER SETTINGS        →     1.MP TRAY
```

4 **Press [▼] or [▲] to select the paper cassette for which you want to change the paper size → press [OK].**

```
PAPER SETTINGS                CASSETTE 1
 2.CASSETTE 1            →                    A4
```

5 **Press [▼] or [▲] to select the paper size → press [OK].**

```
CASSETTE 1                    PAPER SETTINGS
                    A4   →     3.CASSETTE 2
```


Downloaded from ManualsPrinter.com Manuals

6 **Press (Stop) to return to the Standby mode.**

Downloaded from ManualsPrinter.com Manuals

Using the MP Tray

The MP (Multi-Purpose) tray can hold standard A or B series paper or inch-size paper, non-standard size paper, envelopes, label sheets or transparencies, and can hold up to approximately 100 sheets of paper (80 g/m^2). For details on the types of paper you can set on the MP tray, see “Available Paper Stock,” on p. 2-27. To use the MP tray as one of the input trays, you need to set MP TRAY to ‘USE’ in the PAPER SETTINGS menu. (See Chapter 5, “Summary of Important Settings.”)

NOTE

- *You can use the transparencies, envelopes, and label sheets only with the printer functions.*

Loading Paper into the MP Tray

For high-quality printouts, we recommend using Canon standard 60 to 163 g/m^2 weight paper for the MP tray.

IMPORTANT

- *Using print media that does not meet the paper's requirements may cause severe paper jams, or result in the excessive mechanical wear of the machine.*
- *Do not use the following paper in the MP tray:*
  - *Moist paper*
  - *Paper that is wavy, curled, or damaged*
  - *Folded, clipped, or stapled paper*
  - *Paper with cut-outs or perforations*
  - *Paper containing materials that melt, vaporize, offset, discolor, or emit dangerous fumes at a temperature of 190°C or higher*
- *Avoid pressing or applying excessive force on the MP tray, as this may cause damage.*
- *The paper stack must not exceed the paper limit guide.*
- *Do not load different sizes of paper in the MP tray at the same time.*
- *Do not add paper to the MP tray if paper is already loaded; incorrect paper feeding, or a paper jam may occur. Only add paper when the MP tray is empty.*
- *You can set the paper of the widths from 76 mm to 216 mm.*
- *Fan the transparencies before loading in the MP tray. Failure to do so may cause a paper jam.*
- *When fanning or aligning the transparencies, take particular care to hold by its edges and not to touch the print side.*
- *Keep the transparencies free of dust, oil, or fingerprints. They may cause the deterioration of outputs.*
- *Remove the transparencies from the output tray as they are printed to avoid a paper jam.*

Downloaded from ManualsPrinter.com Manuals

- *Remove the label sheets from the output tray as they are printed to prevent them from sticking together.*
- *Do not use the following label sheets in the MP tray:*
  - *Labels that are separating from the backing sheet or partially used label sheets*
  - *Coated labels which can be easily separated from the backing sheet*
  - *Label sheets with sticky paste exposed*
- *Do not set the paper guides so tight that the paper stack bends.*

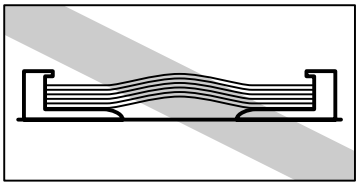

- *Do not set the paper guides so loose that the paper stack is not evenly aligned, or there is room between the guides and the paper.*

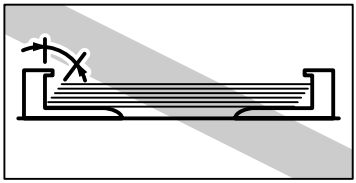

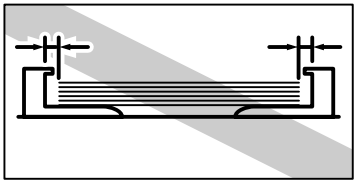

- *Make sure that the paper stack is under the load limit guides of the paper guides.*

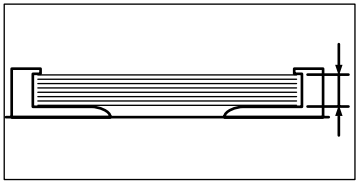

Downloaded from ManualsPrinter.com Manuals

- *Do not place the paper into the tray at an angle.*

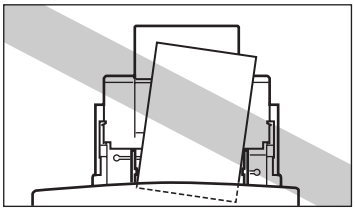

- *Do not load fanned out paper. Make sure the edges of the paper stack are evenly aligned when loading.*

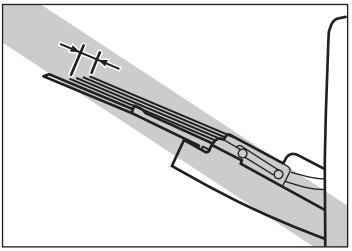

NOTE

- *If a printed page comes out of the machine all curled up, you can correct the problem by turning over the paper stack in the MP tray so that the bottom sheet in the stack is now at the top.*
- *If the leading edge of the paper is curled, straighten it out as much as possible before loading it into the tray.*

Downloaded from ManualsPrinter.com Manuals

1 **Open the MP tray.**

2 **Pull out the extension tray using the center grip ①, then flip open the support tray ②.**

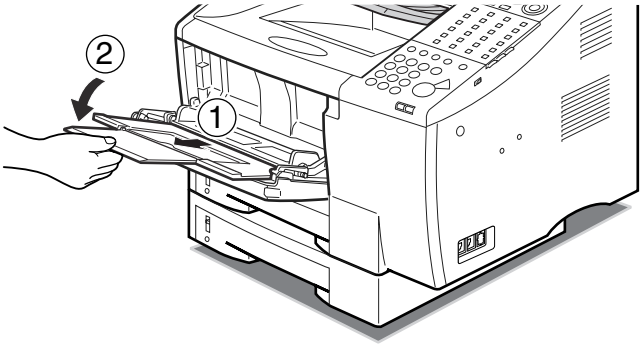

3 **Before you load paper into the MP tray, tap the edges of the stack to make sure the leading edge and sides of the stack are even.**

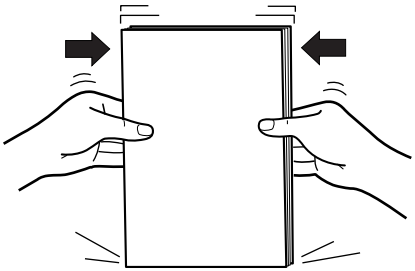

Downloaded from ManualsPrinter.com Manuals

NOTE

- *The MP tray holds approximately 100 sheets of paper.*

4 **Insert the paper stack as far as it will go into the main unit, with the side you want to print on facing up, and the top edge of the paper heading into the main unit first.**

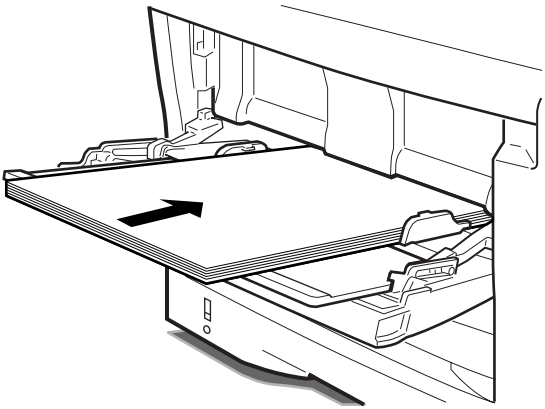

5 **Adjust the paper guides to the size of the paper.**

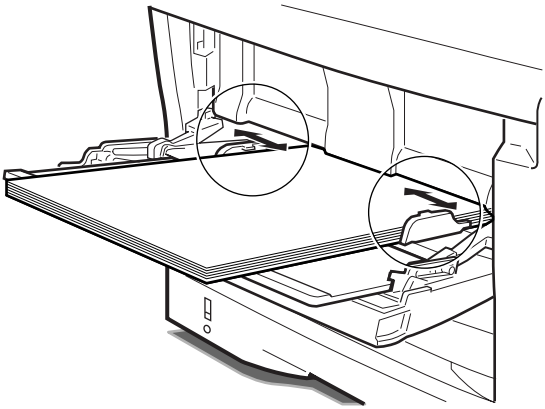

Downloaded from ManualsPrinter.com Manuals

IMPORTANT

- *Make sure that the leading edge of the paper is inserted all the way into the MP tray until it stops so that it is below the paper feed roller. The paper sensor for the MP tray is located to the right of the paper feed roller, when viewed from the front of the machine.*

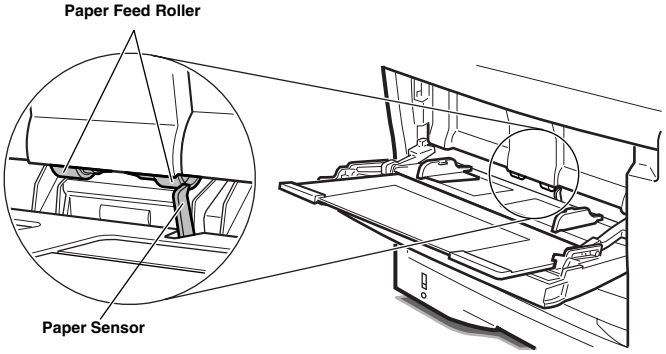

- *Please note the following points when loading small size paper:*
  - *If the paper is not loaded correctly, the paper is not detected by the machine, and a message appears asking you to load paper into the MP tray.*
  - *Make sure that the paper stack is not higher than the load limit guides on the paper guides.*

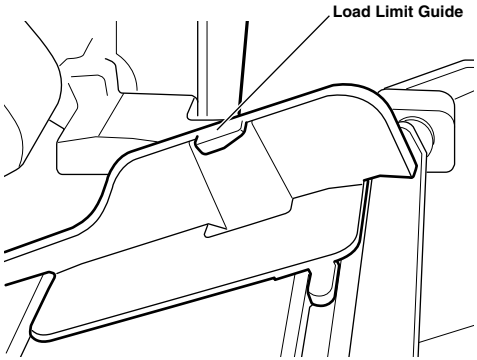

  - *Make sure that the paper guides are set correctly. To print with the MP tray, you also need to select the paper size in the MP TRAY menu. (See Chapter 5, "Summary of Important Settings.")*
  - *Make sure that the paper is loaded correctly, and that the leading edge is fully inserted into the main unit.*

Downloaded from ManualsPrinter.com Manuals

- *Make sure that the leading edge of the paper is resting against the paper sensor.*

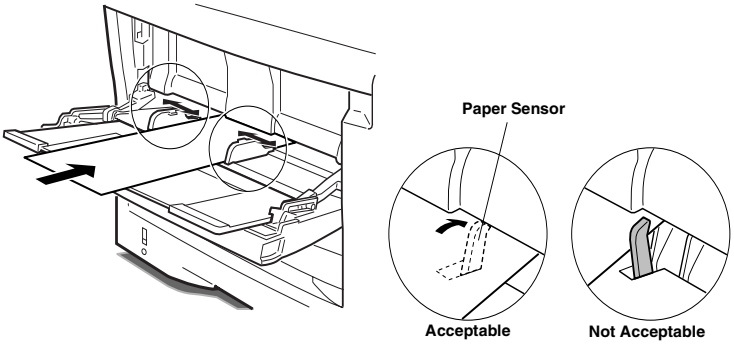

- *To avoid damaging the MP tray, close it when it is not in use. Remove and store any remaining print media. Fold up the support tray, and gently push in the extension tray before closing the MP tray.*

● To load envelopes into the MP Tray:

❑ Take five envelopes, loosen them as shown, and stack them together.

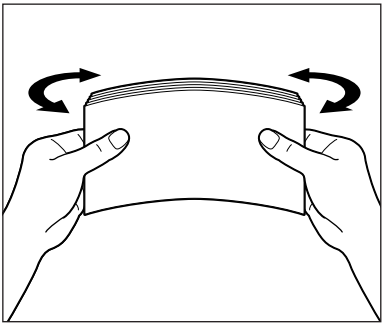

❑ Place the envelopes on a clean, level surface, and press all the way around the envelopes by hand, in the direction of the arrows, to remove any curls.

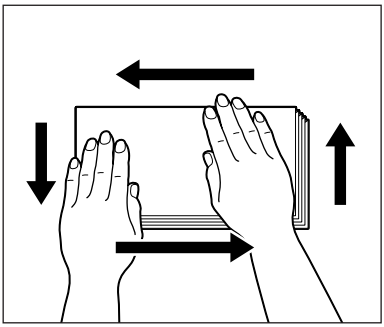

Downloaded from ManualsPrinter.com Manuals

IMPORTANT

- *Take particular care to position the envelopes in the direction that they will be fed.*

❑ Hold down the corners of the envelopes firmly as shown in the illustration below, so that they and the sealed or glued portion stay flat.

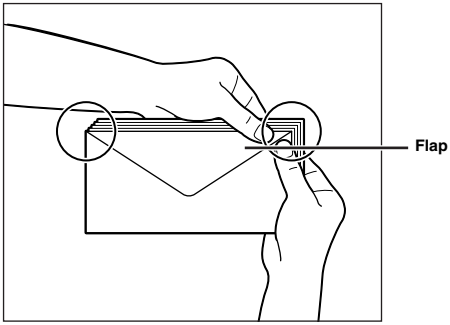

IMPORTANT

- *Do not print on the underside of the envelopes (the side with the flap).*
- *If the envelopes become filled with air, flatten them by hand before loading them into the MP tray.*

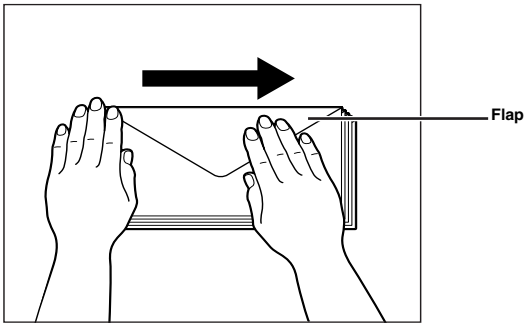

❑ Load the envelopes, as shown below.

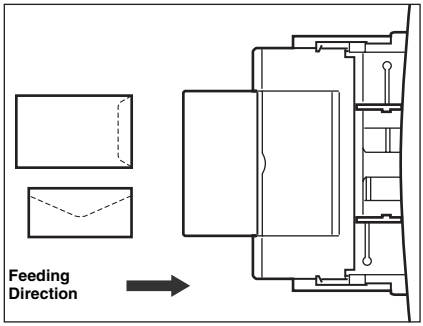

Downloaded from ManualsPrinter.com Manuals

IMPORTANT

- *Depending on the paper type or condition of the envelopes, the printing quality may deteriorate or a paper jam may occur. In such a case, it is recommended to change the type of envelopes.*

Downloaded from ManualsPrinter.com Manuals

Turning the MP Tray ON/OFF and Setting the Paper Size

To use the MP tray as one of the input trays, you need to select 'USE' for MP TRAY in the PAPER SETTINGS menu.

Follow the procedure below to set MP TRAY to 'USE' or 'DO NOT USE', and to select the paper size.



1 **Open all three one-touch speed dialing panels.**

2 **Press [Data Registration].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```

3 **Press [▼] or [▲] until <1. PAPER SETTINGS> appears → press [OK].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```
→
```
PAPER SETTINGS
 1.MP TRAY
```

4 **Press [▼] or [▲] until <1. MP TRAY> appears → press [OK].**

```
PAPER SETTINGS
 1.MP TRAY
```
→
```
MP TRAY
            DO NOT USE
```

5 **Press [▼] or [▲] to display <USE> → press [OK].**

```
MP TRAY
                  USE
```
→
```
MP PAPER SIZE
                   A4
```

6 **Press [▼] or [▲] to select the paper size you are loading into the MP tray → press [OK].**

```
MP PAPER SIZE
                   A4
```
→
```
PAPER SETTINGS
 2.CASSETTE 1
```


Downloaded from ManualsPrinter.com Manuals

7 **Press (Stop) to return to the Standby mode.**

Setting the Paper Type for the MP Tray

You can set the paper type you use on the MP tray after you set MP TRAY to 'USE'.



1 **Open all three one-touch speed dialing panels → press [Data Registration] → [▼] or [▲] until <1.PAPER SETTINGS> appears → press [OK].**

If necessary, see steps 1 to 3 of "Turning the MP Tray ON/OFF and Setting the Paper Size", on p. 2-25.

2 **Press [▼] or [▲] until <4. PAPER TYPE> appears → press [OK].**

```
PAPER SETTINGS
 4.PAPER TYPE
```
→
```
PAPER TYPE
          PLAIN PAPER
```

3 **Press [▼] or [▲] to select <PLAIN PAPER>, <HEAVY PAPER>, <THIN PAPER>, or <HEAVY PAPER H> → press [OK].**

<PLAIN PAPER>: Select when using plain paper.

<HEAVY PAPER>: Select when using heavyweight paper.

<THIN PAPER>: Select when using thin paper, such as tracing paper.

<HEAVY PAPER H>: Select when using heavyweight paper and you realize that the quality of printouts is poor using <HEAVY PAPER>.

```
PAPER TYPE
          PLAIN PAPER
```
→
```
ADDITIONAL FUNCTIONS
 2.COMMON SETTINGS
```

4 **Press (Stop) to return to the Standby mode.**

Downloaded from ManualsPrinter.com Manuals

Available Paper Stock

Paper types which can be used with this machine are shown in the following table.

Paper Type	Available Loading Place (Paper Set Place)	
	Paper Cassette	MP Tray
Plain*1	✔	✔
Heavy*2	✔	✔
Recycled*1	✔	✔
Colored	✔	✔
Bond	✔	✔
Thin	–	✔
Transparencies	–	✔
Envelope	–	✔
Labels	–	✔

*1 64 to 90 g/m^2
*2 90 to 128 g/m^2
✓ : Available
– : Unavailable

IMPORTANT

- *It is recommended not to use the back side of preprinted paper. It may cause a paper jam.*

Downloaded from ManualsPrinter.com Manuals

Paper Size		Length x Width	Available Loading Place (Paper Set Place)		
			Paper Cassette (250 sheets)	Paper Cassette (500 sheets)	MP Tray
A4		297 mm x 210 mm	✔	✔	✔
A5		210 mm x 148 mm	✔	–	✔
B5		257 mm x 182 mm	✔	–	✔
EXECUTIVE		267 mm x 184 mm	✔	–	✔
LGL		356 mm x 216 mm	✔	–	✔
LTR		279 mm x 216 mm	✔	✔	✔
Envelope	ISO-C5	229 mm x 162 mm	–	–	✔
	ISO-B5	250 mm x 176 mm	–	–	✔
	COM10	241.3 mm x 104.7 mm	–	–	✔
	DL	220 mm x 110 mm	–	–	✔
	Monarch	190.5 mm x 98.4 mm	–	–	✔
Free Size		127 mm x 76 mm to 356 mm x 216 mm	–	–	✔

✓ : Available
– : Unavailable

NOTE

- *For instructions on how to load paper, see the following pages:*
  - *Paper Cassette: "Loading Paper into the Paper Cassettes", on p. 1-41.*
  - *MP Tray: "Using the MP Tray", on p. 2-16.*
- *The paper sizes that can be used for report function are letter, legal, and A4.*
- *The paper sizes that can be used for fax function are letter, legal, A4, A5, and B5.*

Downloaded from ManualsPrinter.com Manuals

Using the Face-Up Tray

To select face up delivery, pull down the face-up tray. The machine automatically switches to face up delivery. The face-up tray is particularly useful for heavier paper.

To open the face-up tray, take hold of its tab, and pull down the tray ①. Grasp the end of the face-up tray, and pull it out until it locks ②.

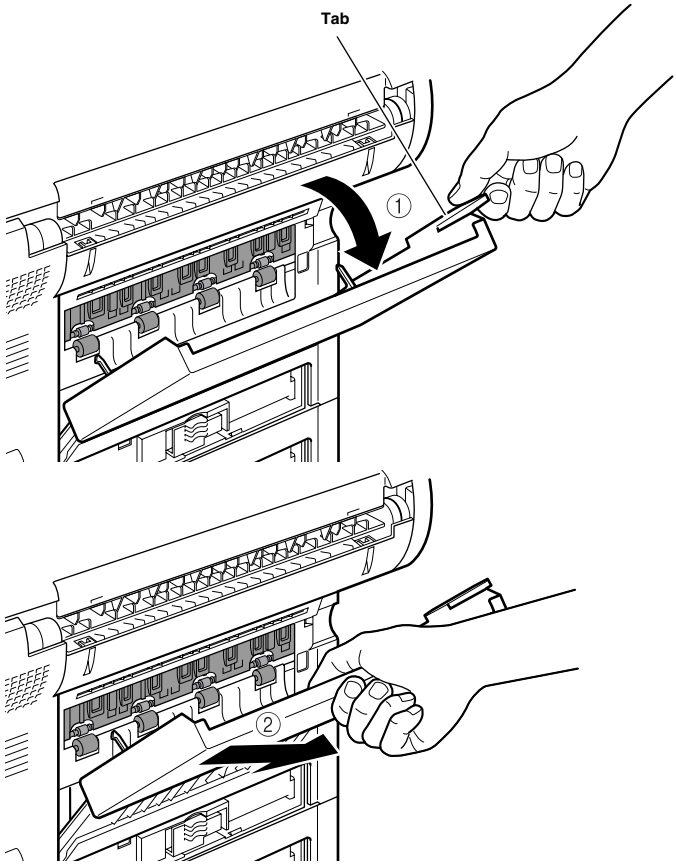

Downloaded from ManualsPrinter.com Manuals

Using the Energy Saver Mode

You can set the machine to enter a low energy sleep mode after it remains idle for a specified length of time. This ensures that the machine consumes less power when it is not being used.

Turning the Energy Saver Feature ON



1 **Open all three one-touch speed dialing panels.**

2 **Press [Data Registration].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```

3 **Press [▼] or [▲] until <5. TIMER SETTINGS> appears → press [OK].**

```
ADDITIONAL FUNCTIONS
 5.TIMER SETTINGS
```
→
```
TIMER SETTINGS
 1.DATE/TIME SETTING
```

4 **Press [▼] or [▲] until <3. ENERGY SAVER> appears → press [OK].**

```
TIMER SETTINGS
 3.ENERGY SAVER
```
→
```
ENERGY SAVER
                OFF
```

5 **Press [▼] or [▲] to display <ON> → press [OK].**

```
ENERGY SAVER
                 ON
```
→
```
ENERGY SVR TIME
             03MIN.
```


Downloaded from ManualsPrinter.com Manuals

6 **Enter a number for the time (from 03 to 30 minutes) using the numeric keys that you want the machine to remain idle before it automatically enters the low energy sleep mode → press [OK].**

You can also press [▼] or [▲] to specify the time.

```
ENERGY SVR TIME
                03MIN.
```
→
```
TIMER SETTINGS
 4.DAILY TIMER SET
```

7 **Press (Stop) to return to the Standby mode.**

After the machine enters the Energy Saver mode, only the Energy Saver indicator on the operation panel remains lit in green, while the LCD display is turned off.

NOTE

• To enter the Energy Saver mode manually, press (Energy Saver).

Returning to the Full Power Mode

When the machine is in the Energy Saver mode, the Energy Saver indicator lights in green.

To restore the Full Power mode, press (Energy Saver). While the machine is powering up, the message <PLEASE WAIT> is displayed for a few seconds.

```
PLEASE WAIT
```

The following actions automatically restores the Full Power mode:

- Receiving a document
- Printing an Activity Management report preset for printing
- Answering a call
- Dialing another machine to perform preset polling

You can awaken the machine from the low energy sleep mode by:

- Pressing (Energy Saver)
- Placing an original on the machine for sending or copying

Downloaded from ManualsPrinter.com Manuals

The machine does not enter the Energy Saver mode in the following cases:

- If documents are stored in memory
- If a document or paper jam has occurred, the paper cassettes have run out of paper, or if the toner cartridge has run out of toner
- If a document has been fed into the ADF (Automatic Document Feeder)
- If you set the machine to print an Activity Management report at a preset time
- If the machine is set to poll another machine within three minutes or less, or is receiving a document

NOTE

- *While the machine is powering up, you can perform any operation.*
- *To put the machine into the Energy Saver mode manually, press (Energy Saver).*

Setting the Daily Timer

This section describes the procedure to set the time that the machine automatically enters the Energy Saver mode for each day of the week.

NOTE

- *If the current date and time are not set correctly, the Daily Timer will not function correctly.*

1 **Open all three one-touch speed dialing panels → press [Data Registration] → [▼] or [▲] until <5.TIMER SETTINGS> appears → press [OK].**

If necessary, see steps 1 to 3 of “Turning the Energy Saver Feature ON”, on p. 2-30.

2 **Press [▼] or [▲] until <4.DAILY TIMER SET> appears → press [OK].**

```
TIMER SETTINGS
 4.DAILY TIMER SET
```
→
```
DAILY TIMER SET
 1.SUN
```


Downloaded from ManualsPrinter.com Manuals

3 **Press [▼] or [▲] to select a day of the week for which you want to set the daily timer → press [OK].**

DAILY TIMER SET 6.FRI	→	FRI _ :

4 **Enter the time in 24-hour notation (e.g., 1:00 p.m. as 13:00) using the numeric keys → press [OK].**

FRI 19:00	→	FRI DATA ENTRY OK

NOTE

- *If you want to clear the time you have set, press C (Clear) at this step → press OK (OK).*
- *To end the procedure and return to the Standby mode, press Stop (Stop).*

5 **Repeat steps 3 to 4 to set the daily timer for other days of the week.**

If you have set the daily timer for 7.SAT, repeat steps 2 to 4 to set the daily timer for other day of the week.

6 **When you are finished, press Stop (Stop) to return to the Standby mode.**

Setting the Auto Clear

If the machine remains idle for a certain period of time, the display returns to the Standby mode (Auto Clear function). Auto Clear Time can be set from 1 to 9 minutes in one minute increments, and can also be set to 'OFF'.

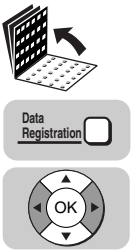

1 **Open all three one-touch speed dialing panels → press [Data Registration] → [▼] or [▲] until <5.TIMER SETTINGS> appears → press [OK].**

If necessary, see steps 1 to 3 of "Turning the Energy Saver Feature ON", on p. 2-30.

Downloaded from ManualsPrinter.com Manuals

2 Press [▼] or [▲] until <2.AUTO CLEAR> appears → press [OK].

TIMER SETTINGS 2.AUTO CLEAR	→	AUTO CLEAR ON

3 Press [▼] or [▲] to select <OFF> or <ON> → press [OK].

If you want to use the Auto Clear function, select <ON>, and proceed to step 4.

If you do not want to use the Auto Clear function, select <OFF>, and proceed to step 5.

AUTO CLEAR ON	→	AUTO CLEAR TIME 2MIN.

4 Enter the desired time period using the numeric keys → press [OK].

You can also press [▼] or [▲] to specify the time.

The Auto Clear Time settings are from 1 to 9 minutes (in one minute increments).

AUTO CLEAR TIME 4MIN.	→	TIMER SETTINGS 3.ENERGY SAVER

5 Press (Stop) to return to the Standby mode.

Downloaded from ManualsPrinter.com Manuals

This chapter describes the specifications of the machine and includes the index.

Specifications 8-2
- General 8-2
- Power 8-3
- Operating Environment 8-3
- Weight 8-4
- Dimensions 8-4
- Printing Area 8-5

Index 8-6

describes what to do in response to a paper jam in the main unit, an error code, or error play.

Document Feed Jams 7-2
g the Automatic Document Feeder 7-4
Printer Feed Jams 7-5
ng a Paper Jam 7-6
all Message 7-19
Your Local Authorized Dealer 7-
e Table (Listed by Number) 7-21
D Display Messages (Alphabetical List) 7-23
uble Occurs 7-26
g Document 7-26
ber, change the toner cartridge, and perform routine 7-26
roubles 7-26

. 8-2
. 2
. 6-2
. 6-3
. 6-8
. 6
. 6-9
. 6-9
ea 6-10
ou can perform with the PAPER
YSTEM SETTINGS menus. 6-13
. 6-20
ment (Optional) 6-22
. 5-2
. 5-3
. 5-3
. 5-5
. 5-5
. 5-8

Downloaded from ManualsPrinter.com Manuals

Flow of Checking Operations

If you press [Monitor], the job status display appears. You can check the status of fax jobs or copy jobs on the LCD display.

Checking the Fax Jobs

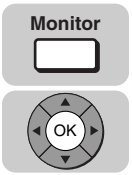

1 Press [Monitor] → [OK].

```
FAX MONITOR
1. FAX
```
→
```
FAX MONITOR
 1.RX/TX STATUS
```

● **To check the fax status:**

❑ Press [OK].

```
18:09 5003 RX  P.001
           0311111111
```

```
18:19 0003 TX  P.001
ABC
```

NOTE

- *If there is no job currently being processed, the message <NO CURRENT JOB> appears on the LCD display.*
- *If you want to cancel the transmission, see p. 3-5.*

● **To check the transaction results:**

❑ Press [▼] or [▲] to display <2.TX/RX RESULT>.

```
FAX MONITOR
 2.TX/RX RESULT
```


Downloaded from ManualsPrinter.com Manuals

❑ Press [OK].
To scroll through the list of the jobs, press [▼] or [▲].

```
18:09 5003 RX OK
          0311111111
```

```
--:-- 0003 TX TRM...
            123 4567
```

The fax jobs appear on the LCD display.

2 **Press (Stop) to return to the Standby mode.**

Checking the Copy Jobs



1 **Press [Monitor] → [▼] or [▲] to display <2.COPY>.**

```
FAX MONITOR
1. FAX
```
→
```
FAX MONITOR
2. COPY
```

2 **Press [OK].**

To scroll through the list of the jobs, press [▼] or [▲].

```
COPY STATUS
*0001  12:15  01×05
```

```
COPY STATUS
-0002  12:30  01×05
```

The copy job appears on the LCD display.

NOTE

- *An asterisk (*) appears at the top of the number of the copy job which is actually being processed.*
- *A hyphen (-) appears at the top of the number of the copy job which is stopped because the machine is running out of paper or toner.*

3 **Press (Stop) to return to the Standby mode.**

Downloaded from ManualsPrinter.com Manuals

Canceling a Job

You can cancel a job in two ways.

Canceling with the Stop key

1 **Press (Stop).**

- **If you press (Stop) during scanning:**

```
STOP KEY PRESSED
PRESS OK KEY
```

❑ Press [OK].
The scanning stops and the job will be canceled.

- **If there is only one job being processed:**

❑ Press [*].
If you do not want to cancel the job, press (#) (#).

```
CANCEL DURING TX/RX?
YES=(*)        NO=(#)
```

```
CANCEL COPYING?
YES=(*)        NO=(#)
```

The job is canceled.

- **If there are both fax and copy jobs:**

```
STOP KEY PRESSED
FAX=(*)  COPY=(#)
```



❑ Press [*] or [#] to select the job you want to cancel.

```
CANCEL COPYING?
YES=(*)        NO=(#)
```

```
CANCEL DURING TX/RX?
YES=(*)        NO=(#)
```


Downloaded from ManualsPrinter.com Manuals

NOTE

- *If the prompt <SELECT JOB TO CANCEL> appears, press [▼] or [▲] to select a job → press [OK].*

```
SELECT JOB TO CANCEL          CANCEL COPYING?
 0005  02:05  01×99     →     YES=(*)        NO=(#)
```

❑ Press [*] to cancel the job.
If you do not want to cancel the job, press (#) (#).
The selected job will be canceled.

NOTE

- *You cannot select multiple jobs and cancel them all at once. When canceling multiple jobs, select and cancel one by one.*

Canceling from the Monitor Screen

You can cancel a job during printing or while it is waiting to be processed, or sending or receiving faxes.

1 Display the job you want to cancel.

If necessary, see step 1 of “Flow of Checking Operations”, on p. 3-2.

2 Press [OK].

When canceling a fax transaction

```
CANCEL DURING TX/RX?
YES=(*)        NO=(#)
```

When canceling a copy job

```
CANCEL COPYING?
YES=(*)        NO=(#)
```

3 Press [*].

If you do not want to cancel the job, press (#) (#).

The selected job will be canceled.

Downloaded from ManualsPrinter.com Manuals

Downloaded from ManualsPrinter.com Manuals

This chapter describes the specifications of the machine and includes the index.

Specifications 8-2
- General 8-2
- Power 8-3
- Operating Environment 8-3
- Weight 8-4
- Dimensions 8-4
- Printing Area 8-5

Index 8-6

describes what to do in response to a paper jam in the main unit, an error code, or error play.

Document Feed Jams 7-2
g the Automatic Document Feeder 7-4
Printer Feed Jams 7-5
ng a Paper Jam 7-6
all Message 7-19
Your Local Authorized Dealer 7-
e Table (Listed by Number) 7-21
D Display Messages (Alphabetical List) 7-23
uble Occurs 7-26
g Document 7-26
ber, change the toner cartridge, and perform routine 7-26
roubles 7-26

. 8-2
. 2
. 6-2
. 6-3
. 6-8
. 6
. 6-9
. 6-9
ea 6-10
ou can perform with the PAPER
YSTEM SETTINGS menus. 6-13
. 6-20
ment (Optional) 6-22
. 5-2
. 5-3
. 5-3
. 5-5
. 5-5
. 5-8

Downloaded from ManualsPrinter.com Manuals

Setting and Using the System Administrator's ID and Password

The system administrator's ID and password protect all the settings in the SYSTEM SETTINGS menu.

Setting of the System Administrator's password is optional. If you set the System Administrator's password, you must enter the password every time you enter the SYSTEM SETTINGS menu. You can also use the System Administrator's ID and password instead of the Department ID and password when you are asked to enter the Department ID and password to begin operating the machine. In this case, you are using the machine as the System Administrator, and do not need to enter the System Administrator's password when you enter the SYSTEM SETTINGS menu.

IMPORTANT

- *If you fail to create and safeguard the System Administrator's ID and password, anyone can open the SYSTEM SETTINGS menu and change or disable the settings.*

Setting the System Administrator's ID and Password

Follow this procedure to set the System Administrator's ID and password.



1 **Open all three one-touch speed dialing panels.**

2 **Press [Data Registration].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```

3 **Press [▼] or [▲] until <6.SYSTEM SETTINGS> appears → press [OK].**

```
ADDITIONAL FUNCTIONS
 6.SYSTEM SETTINGS
```
→
```
SYSTEM SETTINGS
 1.SYS. ADMIN. INFO
```


Downloaded from ManualsPrinter.com Manuals

4 **Press [▼] or [▲] until <1. SYS. ADMIN. INFO> appears → press [OK].**

SYSTEM SETTINGS 1.SYS. ADMIN. INFO	→	SYS. ADMIN. INFO 1.SYS. ADMIN. ID

5 **Press [▼] or [▲] until <1. SYS. ADMIN. ID> appears → press [OK].**

SYS. ADMIN. INFO 1.SYS. ADMIN. ID	→	SYS. ADMIN. ID

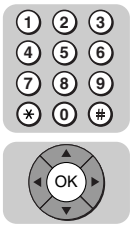

6 **Enter a System Administrator's ID of up to seven digits (from 1 to 9999999) using the numeric keys → press [OK].**

SYS. ADMIN. ID 1234567	→	SYS. ADMIN. INFO 2.SYSTEM PASSWORD

7 **Press [▼] or [▲] until <2. SYSTEM PASSWORD> appears → press [OK].**

SYS. ADMIN. INFO 2.SYSTEM PASSWORD	→	SYSTEM PASSWORD

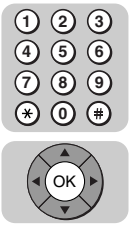

8 **Enter a System Administrator's password of up to seven digits (from 1 to 9999999) using the numeric keys → press [OK].**

SYSTEM PASSWORD 9876543	→	SYS. ADMIN. INFO 3.E-MAIL ADDRESS

9 **Record the System Administrator's ID and password, and store it in a safe location.**

Downloaded from ManualsPrinter.com Manuals

NOTE

- *Setting of the System Administrator's password is optional. If you set the System Administrator's password, you must enter the password every time you enter the SYSTEM SETTINGS menu. You can also use the System Administrator's ID and password instead of the Department ID and password when you are asked to enter the Department ID and password to begin operating the machine. In this case, you are using the machine as the System Administrator, and do not need to enter the System Administrator's password when you enter the SYSTEM SETTINGS menu.*

10 **Press (Stop) to return to the Standby mode.**

Changing/Canceling the System Administrator's ID and Password

Follow this procedure to change or cancel the System Administrator's ID and password.



1 **Open all three one-touch speed dialing panels.**

2 **Press [Data Registration].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```

3 **Press [▼] or [▲] until <6.SYSTEM SETTINGS> appears → press [OK].**

```
ADDITIONAL FUNCTIONS
 6.SYSTEM SETTINGS
```

→

```
SYSTEM SETTINGS
PASSWORD      _
```

4 **Enter the current System Administrator's password using the numeric keys → press [OK].**

The current password is not displayed as you enter it.

```
SYSTEM SETTINGS
PASSWORD      *******
```

→

```
SYSTEM SETTINGS
 1.SYS. ADMIN. INFO
```


Downloaded from ManualsPrinter.com Manuals

5 **Press [▼] or [▲] until <1. SYS. ADMIN. INFO> appears → press [OK].**

SYSTEM SETTINGS 1.SYS. ADMIN. INFO	→	SYS. ADMIN. INFO 1.SYS. ADMIN. ID

6 **Press [OK] and Ⓒ (Clear) to cancel or change the System Administrator's ID.**

You can also enter '0' to delete the System Administrator's ID.

SYS. ADMIN. ID 1234567	→	SYS. ADMIN. ID

NOTE

- *If you are canceling the System Administrator's ID, just press Ⓞ (OK) after pressing Ⓒ (Clear) → proceed to step 8.*
- *When you cancel the System Administrator's ID, the system password is also canceled.*

7 **Enter a new System Administrator's ID and password of up to seven digits (from 1 to 9999999) using the numeric keys → press [OK].**

For details about entering the System Administrator's ID and password, refer to steps 6 to 8 of "Setting the System Administrator's ID and Password," on p. 4-2.

The new password is displayed as you enter it.

SYSTEM PASSWORD 9876543	→	SYS. ADMIN. INFO 3.E-MAIL ADDRESS

8 **Press Ⓢ (Stop) to return to the Standby mode.**

Downloaded from ManualsPrinter.com Manuals

Restricting Machine Operation (Department ID Management)

This section describes how to restrict the operations of the machine. We first show you how to set the Department ID and password to restrict the sending and copying operations. Then we show you how to temporarily turn ON or OFF the restrictions, how to restrict the use of the telephone, and how to operate the machine with restrictions ON. Finally, we show you how to manage the counter information.

Setting Operation Restrictions

You can create up to 100 Department IDs and passwords to restrict sending operations on the machine. Follow this procedure to restrict the access to all of these features:

- Sending documents
- Copying documents, and manually printing fax reports and documents received/stored in memory
- Using the telephone for voice communication



1 **Open all three one-touch speed dialing panels.**

2 **Press [Data Registration].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```

3 **Press [▼] or [▲] until <6.SYSTEM SETTINGS> appears → press [OK].**

The display for entering the System Administrator's password appears if you have set the System Administrator's password in the SYS.ADMIN.INFO menu. (See "Setting and Using the System Administrator's ID and Password," on p. 4-2.)

```
ADDITIONAL FUNCTIONS
 6.SYSTEM SETTINGS
```
→
```
SYSTEM SETTINGS
PASSWORD      _
```


Downloaded from ManualsPrinter.com Manuals

4 **If the prompt <PASSWORD> is displayed, enter the System Administrator's password using the numeric keys → press [OK].**

SYSTEM SETTINGS PASSWORD *******	→	SYSTEM SETTINGS 1.SYS. ADMIN. INFO

5 **Press [▼] or [▲] until <2.DEPT.ID MANAGEMNT> appears → press [OK].**

SYSTEM SETTINGS 2.DEPT.ID MANAGEMNT	→	DEPT.ID MANAGEMNT OFF

6 **Press [▼] or [▲] to display <ON> → press [OK].**

DEPT.ID MANAGEMNT ON	→	DEPT.ID MANAGEMNT 1.DEPT. ID ENTRY

7 **Press [▼] or [▲] until <1. DEPT. ID ENTRY> appears → press [OK].**

DEPT.ID MANAGEMNT 1.DEPT. ID ENTRY	→	DEPT. ID ENTRY 00:



8 **Press [▼] or [▲] to select the number to which the department will be designated → press [OK].**

DEPT. ID ENTRY 07:	→	DEPT. ID ENTRY

9 **Enter the Department ID of up to seven digits using the numeric keys → press [OK].**

DEPT. ID ENTRY 1234567	→	DEPT.ID SETUP 1.PASSWORD

NOTE

- *You can set the Department ID from 1 to 9999999. If you set the Department ID as '111', it will be shown as <0000111>. When you are requested to enter the Department ID, however, it is sufficient to enter '111'.*
- *You can delete the numbers you entered by pressing ⓒ (Clear).*

Downloaded from ManualsPrinter.com Manuals

10 **Press [▼] or [▲] until <1. PASSWORD> appears → press [OK].**

```
DEPT.ID SETUP
 1.PASSWORD
```
→
```
PASSWORD
```

11 **Enter the password for the department of up to seven digits using the numeric keys → press [OK].**

```
PASSWORD
             1234567
```
→
```
DEPT.ID SETUP
 2.COPY LIMITS
```

NOTE

- *If you do not want to enter a password so you can use only the Department ID for transactions, just press (OK) (OK) → proceed to the next step.*
- *If you set only the Department ID, you have to enter only the Department ID when you operate the machine.*

12 **If you want to set the copy limit, press [▼] or [▲] until <2. COPY LIMITS> appears → press [OK].**

```
DEPT.ID SETUP
 2.COPY LIMITS
```
→
```
COPY LIMITS
             0
```

13 **Enter the maximum number of pages that can be copied or printed by the registered department using the numeric keys → press [OK].**

```
COPY LIMITS
            100000
```
→
```
DEPT.ID SETUP
 3.TX LIMITS
```

NOTE

- *You can set the copy limit from 0 to 999999.*
- *If you set the copy limit to 0, no copying operation can be performed by the department.*

14 **If you want to set the transmission limit, press [▼] or [▲] until <3. TX LIMITS> appears → press [OK].**

```
DEPT.ID SETUP
 3.TX LIMITS
```
→
```
TX LIMITS
             0
```


Downloaded from ManualsPrinter.com Manuals

15 **Enter the maximum number of pages that can be sent by the registered department using the numeric keys → press [OK].**

```
TX LIMITS                    →  DEPT.ID SETUP
          100000                 4.SELECT SENDER
```

NOTE

- *You can set the TX limit from 0 to 999999.*
- *If you set the TX limit to 0, no transmission can be performed by the department.*

16 **If you want to assign a sender's name for the department, press [▼] or [▲] until <4. SELECT SENDER> appears → press [OK].**

```
DEPT.ID SETUP                →  SELECT SENDER
 4.SELECT SENDER                 00:
```

NOTE

- *To use this feature, you have to register the sender's names first. (See Chapter 1, "Before You Use This Machine," in the Facsimile Guide.) The sender name will be printed on the document sent by the department as TX terminal ID.*

17 **Press [▼] or [▲] to select a sender's name → press [OK].**

```
SELECT SENDER                →  DEPT. ID ENTRY
 01:S.ROBERTS                    08:
```

18 **Repeat steps 8 to 17 to set restrictions for other Department IDs and passwords.**

19 **When you are finished, press (Stop) to return to the Standby mode.**

NOTE

- *To operate the machine with restrictions 'ON', see "Operating the Machine with Restrictions ON," on p. 4-13.*

Downloaded from ManualsPrinter.com Manuals

Turning Restrictions OFF or ON

Follow this procedure to turn 'OFF' or 'ON' the printing, copying and sending restrictions temporarily without changing the Department ID Management settings.



1 **Open all three one-touch speed dialing panels.**

2 **Press [Data Registration].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```

3 **Press [▼] or [▲] until <6.SYSTEM SETTINGS> appears → press [OK].**

```
ADDITIONAL FUNCTIONS
 6.SYSTEM SETTINGS
```
→
```
SYSTEM SETTINGS
PASSWORD      _
```

4 **If the prompt <PASSWORD> is displayed, enter the System Administrator's password using the numeric keys → press [OK].**

```
SYSTEM SETTINGS
PASSWORD      *******
```
→
```
SYSTEM SETTINGS
 1.SYS. ADMIN. INFO
```

5 **Press [▼] or [▲] until <2.DEPT. ID MANAGEMNT> appears → press [OK].**

```
SYSTEM SETTINGS
 2.DEPT.ID MANAGEMNT
```
→
```
DEPT.ID MANAGEMNT
                  OFF
```

6 **Press [▼] or [▲] to display <ON> → press [OK].**

```
DEPT.ID MANAGEMNT
                   ON
```
→
```
DEPT.ID MANAGEMNT
 1.DEPT. ID ENTRY
```


Downloaded from ManualsPrinter.com Manuals

7 Press [▼] or [▲] until <3.RESTRICTIONS> appears → press [OK].

DEPT.ID MANAGEMNT 3.RESTRICTIONS	→	RESTRICTIONS 1.RESTRICT PRINTING

8 Select the feature you want to turn 'OFF' or 'ON'.

● **To turn 'OFF' or 'ON' restricted printing:**

❑ Press [▼] or [▲] until <1. RESTRICT PRINTING> appears → press [OK].

RESTRICTIONS 1.RESTRICT PRINTING	→	RESTRICT PRINTING OFF

❑ Press [▼] or [▲] to display <OFF> or <ON> → press [OK].

RESTRICT PRINTING OFF	→	RESTRICTIONS 2.RESTRICT TX

NOTE

• This setting turns 'OFF' or 'ON' the restriction for printing fax reports and documents stored in memory, and copying function.

● **To turn 'OFF' or 'ON' restricted sending:**

❑ Press [▼] or [▲] until <2.RESTRICT TX> appears → press [OK].

RESTRICTIONS 2.RESTRICT TX	→	RESTRICT TX OFF

❑ Press [▼] or [▲] to display <OFF> or <ON> → press [OK].

RESTRICT TX OFF	→	DEPT.ID MANAGEMNT 4.PRINT WITH NO ID

9 Press (Stop) to return to the Standby mode.

Downloaded from ManualsPrinter.com Manuals

Restricting the Use of the Telephone

This section describes how to restrict the use of the telephone. When the telephone restriction feature is turned 'ON', the handset and (Hook) are disabled. If you press (Hook), you will not hear a dial tone.

1 **Open all three one-touch speed dialing panels.**

2 **Press [Data Registration].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```

3 **Press [▼] or [▲] until <6.SYSTEM SETTINGS> appears → press [OK].**

```
ADDITIONAL FUNCTIONS
 6.SYSTEM SETTINGS
```
→
```
SYSTEM SETTINGS
PASSWORD      _
```

4 **If the prompt <PASSWORD> is displayed, enter the System Administrator's password using the numeric keys → press [OK].**

```
SYSTEM SETTINGS
PASSWORD      *******
```
→
```
SYSTEM SETTINGS
 1.SYS. ADMIN. INFO
```

5 **Press [▼] or [▲] until <3.LOCK PHONE> appears → press [OK].**

```
SYSTEM SETTINGS
 3.LOCK PHONE
```
→
```
LOCK PHONE
                OFF
```

6 **Press [▼] or [▲] to display <ON> → press [OK].**

```
LOCK PHONE
                ON
```
→
```
SYSTEM SETTINGS
 4.NETWORK SETTINGS
```


Downloaded from ManualsPrinter.com Manuals

7 **Press (Stop) to return to the Standby mode.**

NOTE

• To turn the restriction 'OFF' again, repeat this procedure from step 1, and select 'OFF'.

Operating the Machine with Restrictions ON

This section describes how to operate the machine with the operation restriction features set up and turned 'ON'.

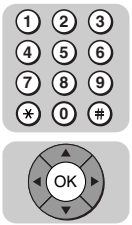

1 **If you see the message <ENTER DEPT. ID> when the machine is in Standby mode, the restriction is turned 'ON'. Enter the Department ID using the numeric keys → press [OK].**

```
ENTER DEPT.ID          →  DEPT.ID PASSWORD
          1234567                    _
```

NOTE

• You can also use the System Administrator's ID and password instead of the Department ID and password when you are asked to enter the Department ID and password to begin operating the machine. In this case, you are using the machine as the System Administrator, and do not need to enter the System Administrator's password when you enter the SYSTEM SETTINGS menu.

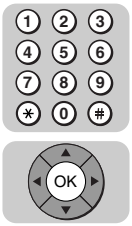

2 **If the message <DEPT. ID PASSWORD> is displayed, enter the Department password using the numeric keys → press [OK].**

```
DEPT.ID PASSWORD       →  01 S.ROBERTS
          *******
```

NOTE

• The sender name will appear on the LCD display only when you have set a sender name in the SELECT SENDER menu. (See page 4-9.)

• If you have set the sender name 00 for the Department ID in the SELECT SENDER menu, no sender name will be displayed.

3 **Continue operating the machine.**

Downloaded from ManualsPrinter.com Manuals

Checking and Clearing the Counter Information

This section describes how to check and clear the counter information for each department.

1 **Open all three one-touch speed dialing panels.**

2 **Press [Data Registration].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```

3 **Press [▼] or [▲] until <6.SYSTEM SETTINGS> appears → press [OK].**

```
ADDITIONAL FUNCTIONS
 6.SYSTEM SETTINGS
```
→
```
SYSTEM SETTINGS
PASSWORD      _
```

4 **If the prompt <PASSWORD> is displayed, enter the System Administrator's password using the numeric keys → press [OK].**

```
SYSTEM SETTINGS
PASSWORD      *******
```
→
```
SYSTEM SETTINGS
 1.SYS. ADMIN. INFO
```

5 **Press [▼] or [▲] until <2.DEPT. ID MANAGEMNT> appears → press [OK].**

```
SYSTEM SETTINGS
 2.DEPT.ID MANAGEMNT
```
→
```
DEPT.ID MANAGEMNT
                  OFF
```

6 **Press [▼] or [▲] to display <ON> → press [OK].**

```
DEPT.ID MANAGEMNT
                   ON
```
→
```
DEPT.ID MANAGEMNT
 1.DEPT. ID ENTRY
```


Downloaded from ManualsPrinter.com Manuals

7 **Press [▼] or [▲] until <2.COUNT MANAGEMENT> appears → press [OK].**

DEPT.ID MANAGEMNT 2.COUNT MANAGEMENT	→	COUNT MANAGEMENT 1.COUNT INFORMATION

8 **To see the counter information, press [▼] or [▲] until <1.COUNT INFORMATION> appears → press [OK].**

COUNT MANAGEMENT 1.COUNT INFORMATION	→	COUNT INFORMATION 1.PRINT COUNT

● **To check the print counter:**

❑ Press [▼] or [▲] until <1.PRINT COUNT> appears → press [OK].

COUNT INFORMATION 1.PRINT COUNT	→	PRINT COUNT 1111111 000001/100000

Department ID

Number of Printed Pages

Limit

NOTE

- *If you have not set the print limit, nothing will be displayed as "Limit." (See "Setting Operation Restrictions," on p. 4-6.)*

❑ Press [▼] or [▲] to scroll through the Department IDs.

● **To check the transmission counter:**

❑ Press [▼] or [▲] until <2.SEND COUNT> appears → press [OK].

COUNT INFORMATION 2.SEND COUNT	→	SEND COUNT 1111111 000001/100000

Department ID

Number of Sent Pages

Limit

NOTE

- *If you have not set the TX limit, nothing will be displayed as "Limit." (See "Setting Operation Restrictions," on p. 4-6.)*

Downloaded from ManualsPrinter.com Manuals

❑ Press [▼] or [▲] to scroll through the Department IDs.

9 **To reset the counter, press [Data Registration] twice → press [▼] or [▲] until <2.COUNT RESET> appears → press [OK].**

COUNT MANAGEMENT 2.COUNT RESET	→	COUNT RESET 1.ON

10 **Press [▼] or [▲] to display <1.ON> or <2.OFF> → press [OK].**

To reset the counter, select <1.ON>.

If you do not want to reset the counter, select <2.OFF>.

COUNT RESET 1.ON	→	COUNT MANAGEMENT 2.COUNT RESET

11 **Press (Stop) to return to the Standby mode.**

Downloaded from ManualsPrinter.com Manuals

Using Memory Lock

Normally, a document prints as soon as you receive it. However, there may be occasions when you want the machine to store all documents in memory until you are ready to print them. Locking the machine to receive and store all documents in memory is called “Memory Lock.”

You may want to turn Memory Lock ‘ON’ when the machine is left unattended at night, or over long holidays, to prevent a large volume of printed documents from collecting in the paper output trays. After you return to the office, you can review the contents of the memory, and enter the memory lock password to print all of the documents stored in memory.

Setting a Time and Password for Memory Lock

After Memory Lock is turned ‘ON’, the machine automatically enters and leaves the Memory Lock mode at the times you specify. The documents received when the machine is in the Memory Lock mode are stored in memory until you unlock the memory with a password and print them.

Follow this procedure to define a Memory Lock password, and set the times for the machine to enter and leave the Memory Lock mode.



1 **Open all three one-touch speed dialing panels.**

2 **Press [Data Registration].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```

3 **Press [▼] or [▲] until <3.FAX SETTINGS> appears → press [OK].**

```
ADDITIONAL FUNCTIONS
 3.FAX SETTINGS
```
→
```
FAX SETTINGS
 1.USER SETTINGS
```


Downloaded from ManualsPrinter.com Manuals

4 Press [▼] or [▲] until <7.SYSTEM SETTINGS> appears → press [OK].

FAX SETTINGS 7.SYSTEM SETTINGS	→	SYSTEM SETTINGS 1.MEMORY LOCK RX

If the prompt <SYSTEM SETTINGS PASSWORD> is displayed, enter the System Administrator's password using the numeric keys → press (OK) (OK).

5 Press [▼] or [▲] until <1.MEMORY LOCK RX> appears → press [OK].

SYSTEM SETTINGS 1.MEMORY LOCK RX	→	MEMORY LOCK RX OFF

6 Press [▼] or [▲] to display <ON> → press [OK].

If you select <OFF>, press (Stop) to return to the Standby mode.

MEMORY LOCK RX ON	→	MEMORY LOCK RX 1.MEM LOCK PASSWORD

7 Press [▼] or [▲] to display the desired Memory Lock setting → press [OK].

The MEMORY LOCK RX menu includes the following items:

Setting	Description
1. MEM LOCK PASSWORD	0 to 9999999 This password protects the Memory Lock settings. Setting a password is recommended. You must use this password to unlock the memory so you can print documents stored in memory. Use the numeric keys to enter a password of up to seven digits → press [OK].

Downloaded from ManualsPrinter.com Manuals

Setting	Description
2. REPORT	Sets the machine to print reports. This setting affects only reports that print automatically, such as activity reports for sending and receiving, and Activity Management Reports.
OUTPUT NO*	No report prints while in the Memory Lock mode.
OUTPUT YES	A report prints while the machine is in the Memory Lock mode.
3. TIME SETUP	Sets the time for the machine to enter and leave the Memory Lock mode. The timer settings are optional. If you do not set the time, you can use [Memory Reception] to turn the Memory Lock mode 'ON' or 'OFF'.
OFF*	Turns 'OFF' the timer setup. You can turn the Memory Lock mode 'ON' or 'OFF' with [Memory Reception].
ON	Turns 'ON' the timer setup. You can still use [Memory Reception] to turn the Memory Lock mode 'ON' or 'OFF'.
1. START TIME	Sets the time for the machine to automatically enter the Memory Lock mode.
EVERYDAY* SELECT DAYS	Set the time using 24-hour notation. Up to five start times can be specified for everyday or each selected day.
2. END TIME	Sets the time for the machine to leave the Memory Lock mode.
EVERYDAY* SELECT DAYS	Set the time using 24-hour notation. Up to five end times can be specified for everyday or each selected day.

An asterisk (*) indicates the default setting.

8 **When you are finished, press (Stop) to return to the Standby mode.**

Downloaded from ManualsPrinter.com Manuals

Turning Memory Lock ON

Follow this procedure to put the machine in the Memory Lock mode if the Memory Lock mode timer has not been set, or if you want to put the machine in the Memory Lock mode before the timer activates the Memory Lock mode.

NOTE

- *If the timer is set for the Memory Lock mode, the machine enters and leaves the Memory Lock mode automatically at the specified times. (See "Setting a Time and Password for Memory Lock," on p. 4-17.)*



1 **Open all three one-touch speed dialing panels.**

2 **Press [Memory Reception].**

```
MEM LOCK PASSWORD
                _
```

If you have not set the memory lock password, the machine immediately enters the Memory Lock receive mode. The setting is completed.

3 **Enter the memory lock password (up to seven digits) → press [OK].**

```
MEM LOCK PASSWORD          →  MEMORY LOCK RX
                 *******       AUTO
```

The machine is in the Memory Lock Receive mode.

NOTE

- *All documents are received in memory until you unlock memory receiving and print them.*

Downloaded from ManualsPrinter.com Manuals

Turning Memory Lock OFF and Printing Documents

Follow this procedure to turn the Memory Lock 'OFF' and print the documents received in memory.

NOTE

- *If the timer is set for the Memory Lock mode, the machine enters and leaves the Memory Lock mode automatically at the specified times. (See "Setting a Time and Password for Memory Lock," on p. 4-17.)*

1 **When the Memory Lock mode is 'ON', the message <MEMORY LOCK RX> is displayed.**

```
MEMORY LOCK RX
AUTO
```



2 **Open all three one-touch speed dialing panels → press [Memory Reception].**

```
MEM LOCK PASSWORD
                _
```

If you have not set the memory lock password, the machine prints documents received in memory and returns to the Standby mode.

3 **Enter the memory lock password (up to seven digits) using the numeric keys → press [OK].**

```
MEM LOCK PASSWORD
                *******
```

→

```
FAX 31/12 2002 10:44
AUTO
```

When you press [OK], all the documents received in memory while the machine was in the Memory Lock mode are printed.

Downloaded from ManualsPrinter.com Manuals

Downloaded from ManualsPrinter.com Manuals

This chapter describes the specifications of the machine and includes the index.

Specifications 8-2
- General 8-2
- Power 8-3
- Operating Environment 8-3
- Weight 8-4
- Dimensions 8-4
- Printing Area 8-5

Index 8-6

describes what to do in response to a paper jam in the main unit, an error code, or error play.

Document Feed Jams 7-2
g the Automatic Document Feeder 7-4
Printer Feed Jams 7-5
ng a Paper Jam 7-6
all Message 7-19
Your Local Authorized Dealer 7-
e Table (Listed by Number) 7-21
D Display Messages (Alphabetical List) 7-23
uble Occurs 7-26
g Document 7-26
ber, change the toner cartridge, and perform routine 7-26
roubles 7-26

. 8-2
. 2
. 6-2
. 6-3
. 6-8
. 6
. 6-9
. 6-9
ea 6-10
ou can perform with the PAPER
YSTEM SETTINGS menus. 6-13
. 6-20
ment (Optional) 6-22
. 5-2
. 5-3
. 5-3
. 5-5
. 5-5
. 5-8

Downloaded from ManualsPrinter.com Manuals

Opening the Additional Functions Menu

Follow this procedure to display the Additional Functions menu.

1 **Open all three one-touch speed dialing panels.**

2 **Press [Data Registration].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```

3 **Press [▼] or [▲] until the menu you want to set or change appears → press [OK] to display the next menu.**

4 **Press [▼] or [▲] to display the item you want to set or change → press [OK].**

For details about the settings, refer to the following sections in this chapter.

NOTE

- *The Additional Functions menu selections are displayed one line at a time.*
- *Press [▼] or [▲] to display these settings so you can check or change them.*

5 **Press (Stop) to return to the Standby mode.**

Downloaded from ManualsPrinter.com Manuals

Paper Settings

Follow this procedure to set the paper settings.

Setting Procedure



1 **Open all three one-touch speed dialing panels.**

2 **Press [Data Registration].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```

3 **Press [▼] or [▲] until <1.PAPER SETTINGS> appears → press [OK].**

```
ADDITIONAL FUNCTIONS          PAPER SETTINGS
 1.PAPER SETTINGS       →      1.MP TRAY
```

4 **Press [▼] or [▲] to display the item you want to set or change → press [OK].**

For more information on Paper Settings, see the table on the next page.

5 **Press (Stop) to return to the Standby mode.**

Downloaded from ManualsPrinter.com Manuals

Setting Items

Setting	Description
1. MP TRAY	Select whether to use the MP tray.
DO NOT USE*	The MP tray cannot be used.
USE	The MP tray can be used as a paper supply for fax, copy, report, and printer functions.
MP PAPER SIZE	Select the paper size you are loading in the MP tray. The available sizes are: LTR, LGL, EXECUTIV, COM10, MONARCH, DL, ISO-B5, ISO-C5, A4*, B5, A5
2. CASSETTE 1	Select the paper size you are loading into the upper paper cassette. The available sizes are: LTR, LGL, EXECUTIV, A4*, A5, B5.
3. CASSETTE 2	Select the paper size you are loading into the lower paper cassette. The available sizes are: LTR, LGL, EXECUTIV, A4*, A5, B5.
(4. CASSETTE 3)	This item appears on the LCD display only when the optional 500 sheet paper cassette is installed on your machine. Select the paper size you are loading in the 500 sheet paper cassette. The available sizes are: LTR, A4*.
4. PAPER TYPE (5. PAPER TYPE)	Select the type of paper you are loading into paper cassettes and MP tray. (When the optional 500 sheet paper cassette is installed on your machine, this item appears as <5. PAPER TYPE>.)
PLAIN PAPER*	Select when using plain paper.
HEAVY PAPER	Select when using heavyweight paper.
THIN PAPER	Select when using thin paper, such as tracing paper.
HEAVY PAPER H	Select when using heavyweight paper and you realize that the quality of printouts is poor using <HEAVY PAPER>.

An asterisk (*) indicates the default setting.

Downloaded from ManualsPrinter.com Manuals

Common Settings

Follow this procedure to set the common settings.

Setting Procedure



1 **Open all three one-touch speed dialing panels.**

2 **Press [Data Registration].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```

3 **Press [▼] or [▲] until <2.COMMON SETTINGS> appears → press [OK].**

```
ADDITIONAL FUNCTIONS
 2.COMMON SETTINGS
```
→
```
PAPER SETTINGS
 1.DENSITY CONTROL
```

4 **Press [▼] or [▲] to display the item you want to set or change → press [OK].**

For more information on Common Settings, see the table on the next page.

5 **Press (Stop) to return to the Standby mode.**

Downloaded from ManualsPrinter.com Manuals

Setting Items

Setting	Description
1. DENSITY CONTROL 1. LIGHT 2. STANDARD 3. DARK	Adjust the scan density from 1-7 for 'DK' (Dark) (3 is default), 2-8 for 'STD' (Standard) (5 is default), 3-9 for 'LT' (Light) (7 is default).
2. VOLUME CONTROL	Adjust the volume of the machine.
1. KEYPAD VOLUME ON* OFF	Adjust the volume of the tone that sounds when you press keys on the operation panel. 1 to 3; 1*
2. ALARM VOLUME ON* OFF	Adjusts the volume of the alarm that sounds when you press incorrect keys, or the volume of the Off Hook alarm. 1 to 3; 1*
3. TX DONE TONE ON ERROR ONLY* OFF	Adjust the volume of the tone that sounds when the transmission has finished. This tone sounds whenever you send a document using direct or manual sending, regardless of the setting. 1 to 3; 1*
4. RX DONE TONE ON ERROR ONLY* OFF	Adjust the volume of the tone that sounds when the reception has finished. This tone sounds whenever you receive a document using manual reception, regardless of the setting. 1 to 3; 1*
5. PRINTING END TONE ON ERROR ONLY* OFF	Adjust the volume of the tone that sounds when the printing has finished. 1 to 3; 1*
6. SCANNING END TONE ON* ERROR ONLY OFF	Adjust the volume of the tone that sounds when the scanning has finished. 1 to 3; 1*
3. CASS.ELIGIBLTY 1. FAX RECEIVING 1. MP TRAY 2. CASSETTE 1 3. CASSETTE 2 (4. CASSETTE 3) 2. REPORT 1. MP TRAY 2. CASSETTE 1 3. CASSETTE 2 (4. CASSETTE 3)	Select a paper supply source for fax receiving and report printing functions. OFF*/ON ON*/OFF ON*/OFF ON*/OFF OFF*/ON ON*/OFF ON*/OFF ON*/OFF

An asterisk (*) indicates the default setting.

Downloaded from ManualsPrinter.com Manuals

Setting	Description
4. DISPLAY LANGUAGE ENGLISH* FRENCH SPANISH GERMAN ITALIAN DUTCH FINNISH PORTUGUESE NORWEGIAN SWEDISH DANISH SLOVENE CZECH HUNGARIAN RUSSIAN	Select a language for prompts, messages, menus and, printed reports.

An asterisk (*) indicates the default setting.

Downloaded from ManualsPrinter.com Manuals

Timer Settings

Follow this procedure to set the timer settings.

Setting Procedure



1 **Open all three one-touch speed dialing panels.**

2 **Press [Data Registration].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```

3 **Press [▼] or [▲] until <5.TIMER SETTINGS> appears → press [OK].**

```
ADDITIONAL FUNCTIONS
 5.TIMER SETTINGS
```
→
```
TIMER SETTINGS
 1.DATE/TIME SETTING
```

4 **Press [▼] or [▲] to display the item you want to set or change → press [OK].**

For more information on Timer Settings, see the table on the next page.

5 **Press (Stop) to return to the Standby mode.**

Downloaded from ManualsPrinter.com Manuals

Setting Items

Setting	Description
1. DATE/TIME SETTING	Register the current date and time using 24-hour notation. (See Chapter 1, “Before You Start Using This Machine,” in the *Facsimile Guide*.)
2. AUTO CLEAR	When the machine remains idle for a certain period of time, the display returns to the standby mode. This is called the Auto Clear function. Select whether to use the Auto Clear function, and the time to execute the Auto Clear function.
ON*	Set the Auto Clear Time from 1 to 9 minutes in one minute increments. The default setting is 2MIN*.
OFF	Auto Clear function is turned ‘OFF’.
3. ENERGY SAVER	Set the machine to reduce power consumption when not in use. (See Chapter 1, “Before You Start Using This Machine.”)
OFF*	The machine does not power down even when it is idle.
ON	The machine reduces power consumption after it has remained idle for a specified length of time.
ENERGY SVR TIME	Set the idle time to elapse and trigger reduced power consumption. (03 to 30MIN.) The default setting is 03MIN*.
4. DAILY TIMER SET	Set the time that the machine automatically enters the Energy Saver mode for each day of the week. When Auto Clear time and Daily Timer are both set, Auto Clear time has priority.
1. SUN 2. MON 3. TUE 4. WED 5. THU 6. FRI 7. SAT	00:00 to 23:59
5. DATE SETUP	Set the format for the DATE/TIME SETTING menu and how the date is displayed on the LCD display in the Standby mode or how the date is printed as TX terminal ID.
MM/DD/YYYY DD/MM YYYY* YYYY MM/DD	

An asterisk (*) indicates the default setting.

Downloaded from ManualsPrinter.com Manuals

System Settings

Follow this procedure to set the system settings.

Setting Procedure



1 **Open all three one-touch speed dialing panels.**

2 **Press [Data Registration].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```

3 **Press [▼] or [▲] until <6.SYSTEM SETTINGS> appears → press [OK].**

If the prompt <PASSWORD> is displayed, enter the System Administrator's password using the numeric keys → press [OK].

```
ADDITIONAL FUNCTIONS
 6.SYSTEM SETTINGS
```
→
```
SYSTEM SETTINGS
 1.SYS ADMIN. INFO
```

4 **Press [▼] or [▲] to display the item you want to set or change → press [OK].**

For more information on System Settings, see the table on the next page.

5 **Press (Stop) to return to the Standby mode.**

Downloaded from ManualsPrinter.com Manuals

Setting Items

Settings	Description
SYSTEM SETTINGS PASSWORD	Enter the system password protecting the system settings. (You do not have to do this if the system settings are not yet password protected.) (See Chapter 4, “Restricting the Use of the Machine.”)
1. SYS. ADMIN. INFO	Set the System Administrator’s ID and password to protect the system settings. You cannot set the System Administrator's ID to 0. If you set the System Administrator’s ID to ‘0’, the registered System Administrator’s ID is deleted.
1. SYS. ADMIN. ID	1-9999999
2. SYSTEM PASSWORD	1-9999999
3. E-MAIL ADDRESS	Up to 60 characters (See the *Sending Guide*.)
2. DEPT.ID MANAGEMNT	Set restrictions for sending and printing with Department IDs and passwords. (See Chapter 4, “Restricting the Use of the Machine.”)
OFF*	Department ID management function is turned ‘OFF’.
ON	Department ID management function is turned ‘ON’. Set how the use of the machine will be restricted.
1. DEPT. ID ENTRY	Set the Department ID number from 00 to 99, and enter the Department ID from 1 to 9999999. You cannot set the Department ID and password to 0.
1. PASSWORD	1-9999999
2. COPY LIMITS	0-999999
3. TX LIMITS	0-999999
4. SELECT SENDER	Select one of the registered sender names to be used as TX terminal ID for the documents sent by the department. For details about registering the sender names, see Chapter 1, “Before You Start Using This Machine,” in the *Facsimile Guide*.
2. COUNT MANAGEMENT	Enables you to manage the counter.
1. COUNT INFORMATION	Display the counter information for each department.
1. PRINT COUNT	Display the counter information about the printing jobs.
2. SEND COUNT	Display the counter information about the sending jobs.
2. COUNT RESET 1. ON*	Reset the counter. Reset the counter.
2. OFF	Cancel resetting the counter.

An asterisk (*) indicates the default setting.

Downloaded from ManualsPrinter.com Manuals

Settings	Description
3. RESTRICTIONS	
1. RESTRICT PRINTING OFF* ON	Set the printing limits 'ON' or 'OFF'. If RESTRICT PRINTING is turned 'ON', the printing operations, such as printing reports manually, or documents stored in memory, are counted in the COPY LIMITS function.
2. RESTRICT TX OFF* ON	Set the sending restriction 'ON' or 'OFF'. If RESTRICT TX is turned 'ON', the sending operations are counted in the TX LIMITS function.
4. PRINT WITH NO ID OFF ON*	Set whether to allow printing jobs without a Department ID. This setting is available only for the models with the Printer Kit installed.
3. LOCK PHONE OFF* ON	Set the restriction on telephone communication. This setting does not restrict incoming calls and faxes.
4.NETWORK SETTINGS 1. IP ADDRESS AUTO. 2. IP ADDRESS 3. SUBNET MASK 4. DEFAULT GATEWAY 5. DNS SERVER ADD. 6. DNS DYNAMIC SET 7. HOST NAME 8. DOMAIN NAME 9. VIEW IP ADDRESS	See the *Sending Guide*. For the FAX-L2000, the installation of the optional Network Kit is necessary to access these items.

An asterisk (*) indicates the default setting.

Downloaded from ManualsPrinter.com Manuals

This chapter describes the specifications of the machine and includes the index.

Specifications 8-2
- General 8-2
- Power 8-3
- Operating Environment 8-3
- Weight 8-4
- Dimensions 8-4
- Printing Area 8-5

Index 8-6

describes what to do in response to a paper jam in the main unit, an error code, or error play.

Document Feed Jams 7-2
g the Automatic Document Feeder 7-4
Printer Feed Jams 7-5
ng a Paper Jam 7-6
all Message 7-19
Your Local Authorized Dealer 7-
e Table (Listed by Number) 7-21
D Display Messages (Alphabetical List) 7-23
uble Occurs 7-26
g Document 7-26
ber, change the toner cartridge, and perform routine 7-26
roubles 7-26

. 8-2
. 2
. 6-2
. 6-3
. 6-8
. 6
. 6-9
. 6-9
ea 6-10
ou can perform with the PAPER
YSTEM SETTINGS menus. 6-13
. 6-20
ment (Optional) 6-22
. 5-2
. 5-3
. 5-3
. 5-5
. 5-5
. 5-8

Downloaded from ManualsPrinter.com Manuals

Storing Recording Paper

Use only paper recommended by Canon or paper of similar quality, and store it carefully. For instructions on how to load the recording paper, see “Loading Paper into the Paper Cassettes”, on p. 1-41, and “Loading Paper into the MP Tray”, on p. 2-16.

Recommended Paper

We recommend using paper made by Canon with this machine.

Quality: Use plain bond, typewriter quality without curls, folds, or rough edges.

Weight: 60 to 105 g/m^2 for the paper cassettes, or 60 to 163 g/m^2 for the MP tray.

Storage: 17.5°C to 25°C
30%-70% RH (Relative Humidity)

IMPORTANT

- *Before buying large quantities of paper, other than Canon recommended paper, test it with the machine to make sure it is reliable.*
- *Use only plain white paper. Do not use perforated paper.*
- *Paper that is either too smooth or rough may reduce the print quality, or cause paper jams.*

Storing the Paper Supply

If paper is stored improperly, it can affect the quality of the printouts. Store unused paper in its package to protect the paper.

IMPORTANT

- *Do not store paper on the floor where the humidity is higher.*
- *To prevent excessive paper curl, do not stack the paper too high.*
- *Do not expose the stored paper supply to direct sunlight.*

NOTE

- *If humidity in the surrounding area is higher than normal, store the paper in a specially designed storage box.*
- *If paper is moved to a location with an extreme temperature difference, store the paper in the new location for at least one day before you use it.*

Downloaded from ManualsPrinter.com Manuals

Changing the Toner Cartridge

When the toner runs low in the toner cartridge, the following message is displayed:

```
REPLACE CARTRIDGE
```

NOTE

- *The machine may be set to continue printing or store the remainder of a document being received into memory. (See Chapter 11, "Summary of Important Settings," in the Facsimile Guide.)*
- *You may be able to extend the service life of the toner cartridge by removing it and rotating it five or six times to redistribute the toner inside the cartridge. If you reset the cartridge in the main unit, and the message <REPLACE CARTRIDGE> does not appear, you can continue printing, but make sure you have a new toner cartridge on hand to replace the old one when it finally runs out of toner. If the message <REPLACE CARTRIDGE> appears, follow the procedure below to replace the old cartridge.*

1 **Lift the document feeder tray and document output tray.**

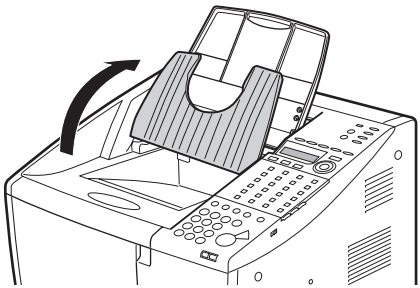

NOTE

- *Remove any printed paper or document from the trays before lifting them.*

Downloaded from ManualsPrinter.com Manuals

2 Open the printer cover, remove the old cartridge, and discard it.

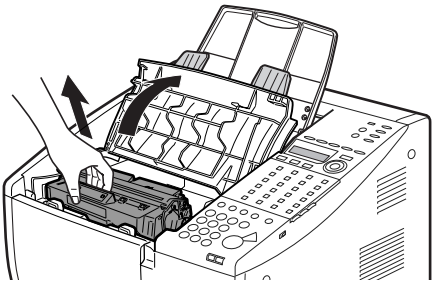

WARNING

- **Do not incinerate the cartridge. Scattered toner powder is highly flammable.**
- **Do not burn or throw used toner cartridges into open flames, as they may cause the toner remaining inside the cartridges to ignite, resulting in burns or a fire.**

CAUTION

- **Keep toner and other consumables out of the reach of small children. If these items are ingested, consult a physician immediately.**

IMPORTANT

- *Do not attempt to disassemble or refill the toner cartridge.*
- *Be sure to open the printer cover to its full extent.*

3 Remove the new toner cartridge from its protective bag.

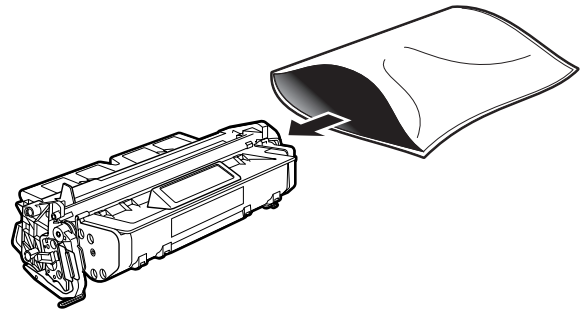

IMPORTANT

- *Save the protective bag. You may need it to transport the toner cartridge at a later date.*

Downloaded from ManualsPrinter.com Manuals

4 **While holding the cartridge by the ends, rock it gently five or six times to distribute the toner evenly inside the cartridge.**

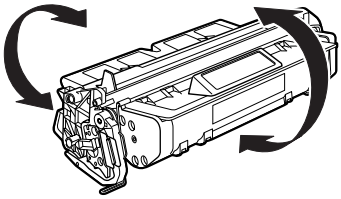

5 **Place the cartridge on a stable, flat, clean surface, and snap the tab on the side to detach it from the cartridge.**

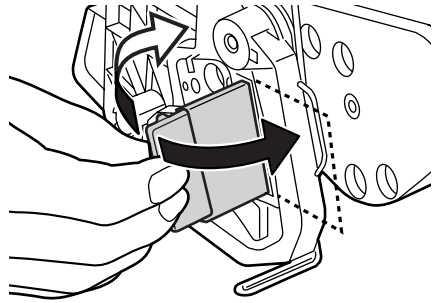

6 **As you steady the cartridge with one hand, remove the tape by gently pulling the plastic tab straight out with your other hand.**

Use a firm, even pull to avoid breaking the tape.

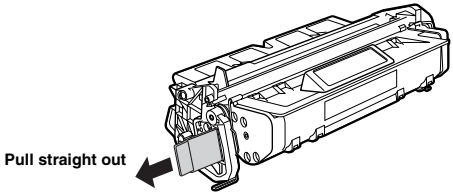

IMPORTANT

- *Do not pull the tab upwards or downwards. The tape may break.*
- *If the tab breaks off from the tape, pull the tape out by pulling on the end of the tape where the tab was originally attached.*
- *Wash off any toner from your hands or clothing immediately with cold water.*

Downloaded from ManualsPrinter.com Manuals

7 Insert the cartridge in the direction indicated by the arrow, with the FX7 toner label on the cartridge facing up.

Gently slide the cartridge into the machine until it is completely down and in a level position.

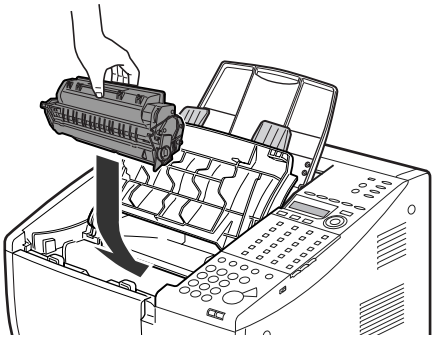

CAUTION

- **To avoid pinching your fingers between the toner cartridge and the machine, grip the cartridge as shown below.**

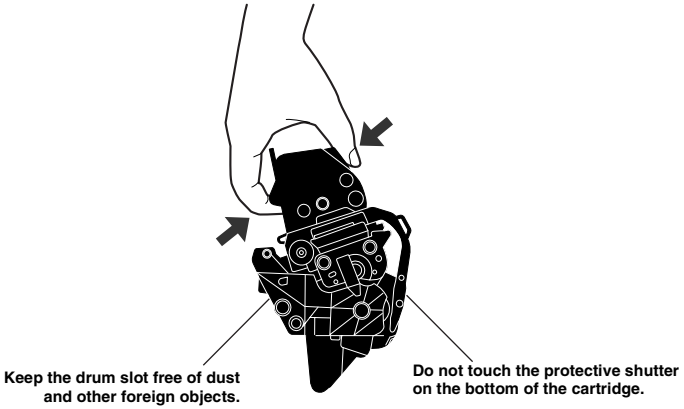
Keep the drum slot free of dust and other foreign objects.
Do not touch the protective shutter on the bottom of the cartridge.

Downloaded from ManualsPrinter.com Manuals

- **When you insert the toner cartridge, make sure that the plastic knob ① on the side of the cartridge slides vertically into the guiding groove ② on the machine.**

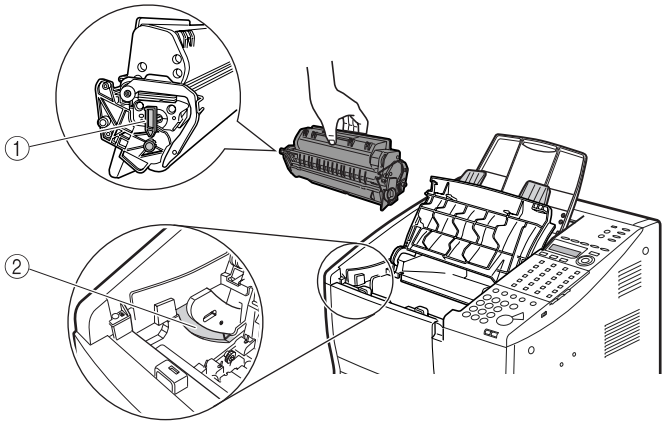

8 Close the printer cover.

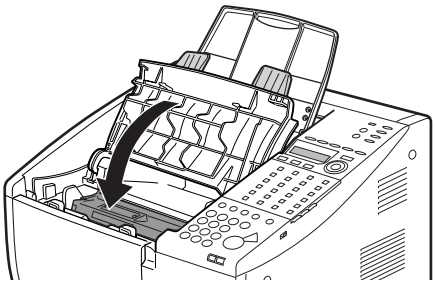

IMPORTANT

- *If the printer cover does not close completely, do not force it down. Remove the toner cartridge and insert it again.*
- *To avoid exposing the light-sensitive drum, never leave the printer cover open.*
- *The machine will not operate if the cover is not closed completely.*
- *If you see the message below, and the Error lamp blinks red when the machine is plugged in, open the printer cover again, and make sure the toner cartridge is in a level position. (See "Turning the Power ON", on p. 1-51.) Then, close the printer cover.*

```
CHECK PRINTER COVER
```

9 Lower the document output tray and document feeder tray.

Downloaded from ManualsPrinter.com Manuals

Storing Toner Cartridges

Follow these simple guidelines when you handle and store toner cartridges.

Handling Cartridges

Always place toner cartridges down with the FX7 toner label on the cartridge facing up.

Handle the toner cartridge with care.

IMPORTANT

- *Do not subject the toner cartridge to shock or vibrations.*
- *Do not remove the toner cartridge from its protective bag until you are ready to install it.*
- *Save the protective bag. You may need it later to repack the cartridge temporarily, and protect it from exposure to light.*
- *Never expose a toner cartridge to direct sunlight, and do not leave it exposed to normal room light (about 1,000 lux) for longer than five minutes.*
- *There are strong magnets inside a toner cartridge. To avoid the possible destruction of valuable data stored on disks or other media, keep the toner cartridge away from computer screens, hard disks, floppy disks, or any other kind of material sensitive to magnetic fields.*
- *Never touch or try to open the protective shutter that protects the light-sensitive drum inside the toner cartridge. If the drum is exposed to light, it may result in the deterioration of print quality.*

Storing Cartridges

Store a toner cartridge in its original box and protective bag until you are ready to install it.

IMPORTANT

- *Store toner cartridges at a constant temperature within a range of 0°C to 35°C. Do not store cartridges in locations subject to extreme fluctuations in temperature and humidity.*
- *To prevent caking of the toner, never stand the cartridge on its end, and do not store it upside down. If the toner becomes caked as a result of being stored in an odd position for too long, it may be impossible to dissolve it completely even by shaking the cartridge.*
- *Do not store the cartridge in salty or corrosive air.*
- *Never attempt to disassemble a toner cartridge or attempt to refill it.*
- *Make sure that you use a stored toner cartridge before the expiration date printed on the toner cartridge box.*

Downloaded from ManualsPrinter.com Manuals

Periodic Cleaning

Follow these simple procedures to keep the machine clean and operating smoothly. Before you clean the machine, print all of the documents received and stored in memory.

Cleaning the Main Unit

1 **Before you clean the machine, disconnect the power cord of the main unit from the power source.**

2 **Moisten a soft cloth with water and a small amount of diluted mild detergent.**

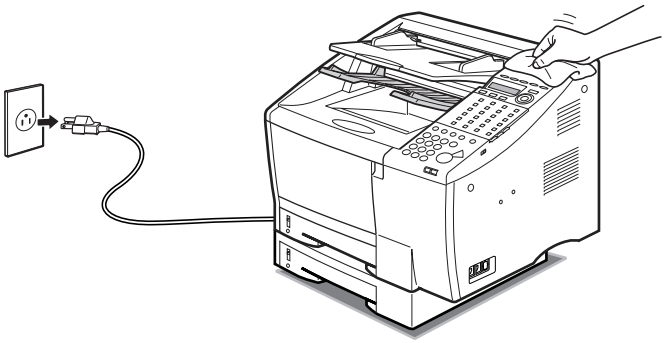

IMPORTANT

- *To prevent damage to the surface of the main unit, never use paint thinner, benzene, alcohol, acetone, or any other organic solvent to clean the machine.*

Downloaded from ManualsPrinter.com Manuals

Cleaning the Transfer Guide Area

1 **Disconnect the power cord of the main unit from the power source.**

2 **Lift the document feeder tray and document output tray.**

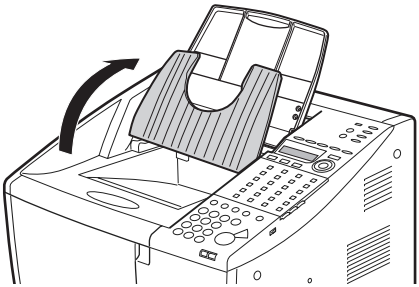

3 **Open the printer cover, and remove the toner cartridge.**

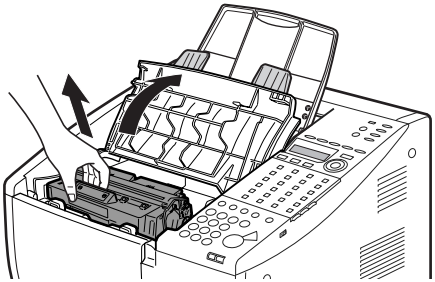

IMPORTANT

- *Store the toner cartridge in its original protective bag to avoid exposure to light.*
- *Be sure to open the printer cover to its full extent.*

Downloaded from ManualsPrinter.com Manuals

4 **Using a dry, lint-free cloth, wipe any dust off the silver metal plate of the transfer guide.**

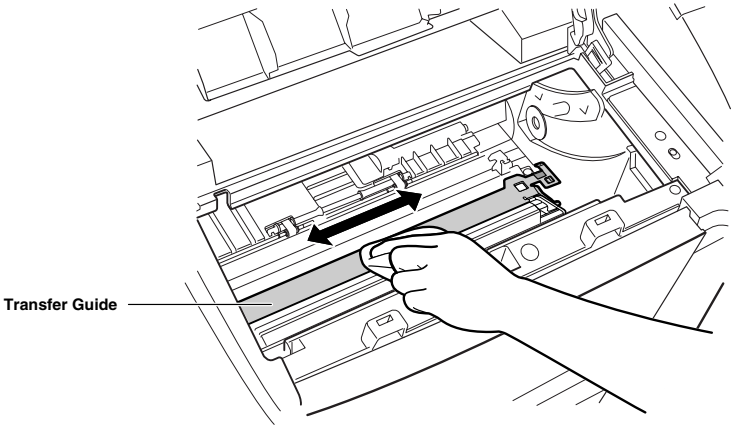

5 **While holding the green label, flip the transfer guide up to its full extent. Wipe the edge of the transfer guide with a soft, clean cloth, to remove toner and paper dust from both sides of the transfer guide.**

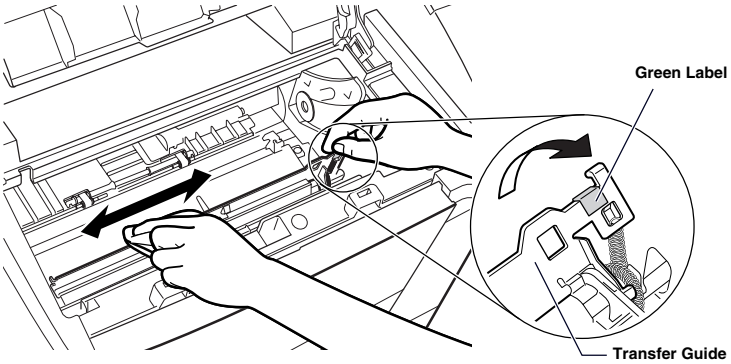

Downloaded from ManualsPrinter.com Manuals

6 **Wipe the silver metal strip ① with a soft, clean cloth. Then, gently place the transfer guide ② back into its original position.**

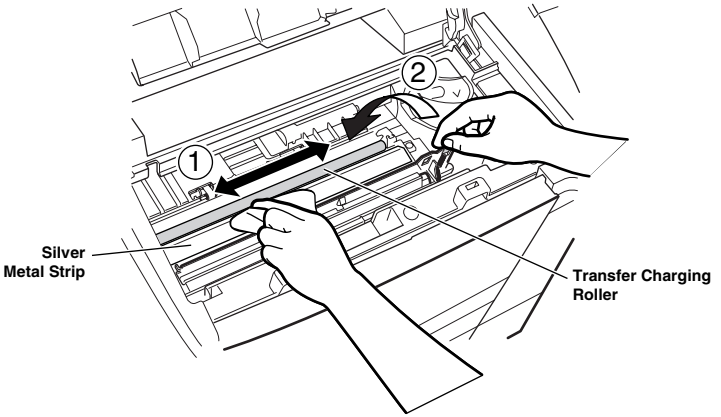

IMPORTANT

- *To avoid the deterioration of print quality, never touch the transfer charging roller when you clean the metal strip.*

7 **Reinsert the toner cartridge into the main unit.**

8 **Close the printer cover, lower the document output tray and document feeder tray. Then, connect the power cord of the main unit to the power source.**

Downloaded from ManualsPrinter.com Manuals

Cleaning the Scanning Area

Periodically check the scanning glass, the white scanning strip, and rollers. If the underside of the ADF (Automatic Document Feeder) cover or the scanning glass is dirty, the documents you send may look dirty.

Check if some streaked lines which do not exist on the original appear on the output when scanning the original using the ADF.

If such lines appear, the scanning area may be dirty.

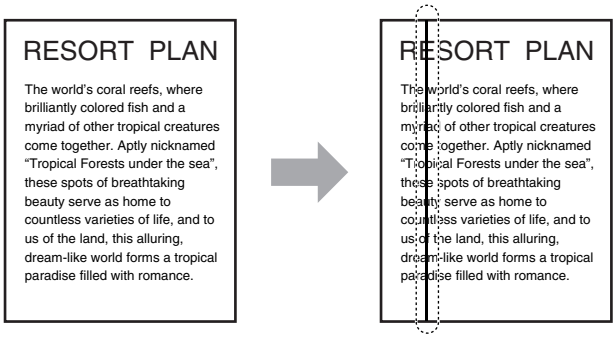
RESORT PLAN
The world's coral reefs, where brilliantly colored fish and a myriad of other tropical creatures come together. Aptly nicknamed "Tropical Forests under the sea", these spots of breathtaking beauty serve as home to countless varieties of life, and to us of the land, this alluring, dream-like world forms a tropical paradise filled with romance.
RESORT PLAN
The world's coral reefs, where brilliantly colored fish and a myriad of other tropical creatures come together. Aptly nicknamed "Tropical Forests under the sea", these spots of breathtaking beauty serve as home to countless varieties of life, and to us of the land, this alluring, dream-like world forms a tropical paradise filled with romance.

Follow the procedure described below to clean the scanning area.

1 **Disconnect the power cord of the main unit from its power source.**

Downloaded from ManualsPrinter.com Manuals

2 Gently open the top unit of the ADF cover, as shown in the illustration below.

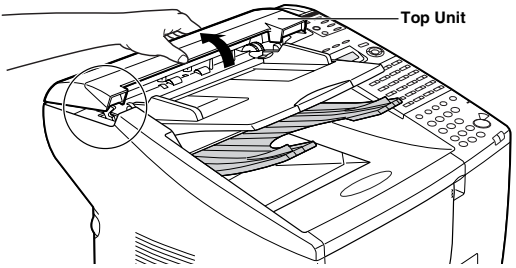

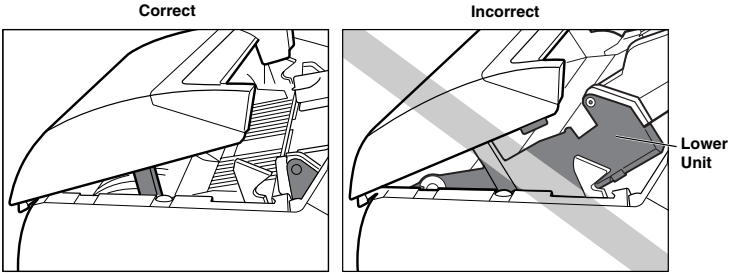

CAUTION

- **Be sure not to open the ADF cover fully to the extent that the lower unit is lifted, as shown in the illustration on the right. The lower unit may fall heavily when you unlock the ADF cover in step 3.**

Downloaded from ManualsPrinter.com Manuals

3 **Release the top unit of the ADF cover by pushing the hook inside with your finger or a pencil.**

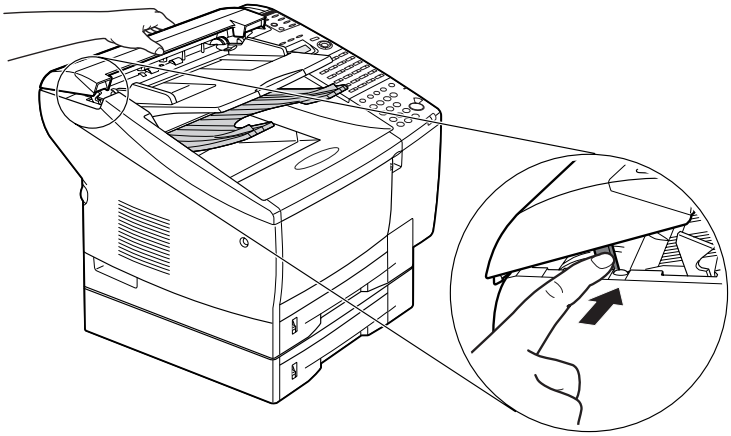

4 **Open the top unit of the ADF cover, and clean all the rollers.**

Use a dry cloth to wipe clean the underside of the ADF cover and to wipe up the paper dust around the rollers.

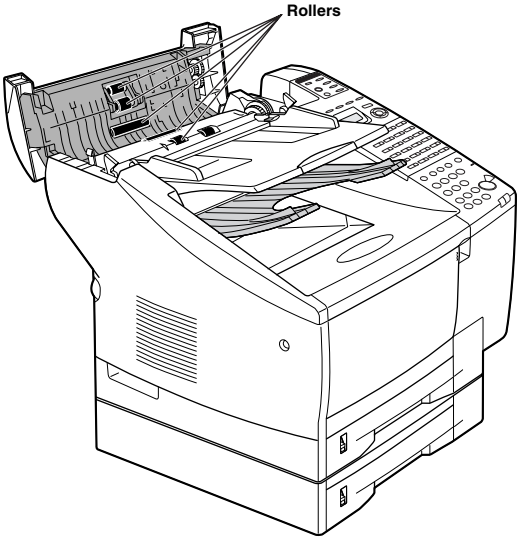

Downloaded from ManualsPrinter.com Manuals

5 **Gently close the top unit of the ADF cover until you hear it lock.**

CAUTION

- **Make sure that the top unit of the ADF cover is locked into position securely before proceeding to step 6.**

6 **Lift the document feeder tray, and gently open the ADF cover until it stops, grasping the document feeder tray and the ADF cover at the same time.**

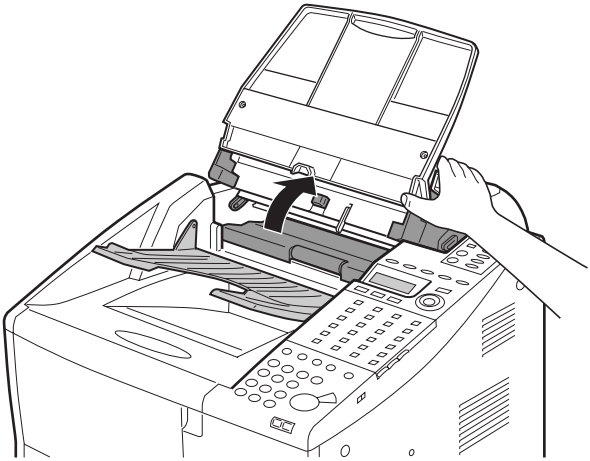

Downloaded from ManualsPrinter.com Manuals

7 **While holding the ADF cover open with one hand, use one finger of your other hand to gently push in the black, plastic loop to separate it from the stub on the machine.**

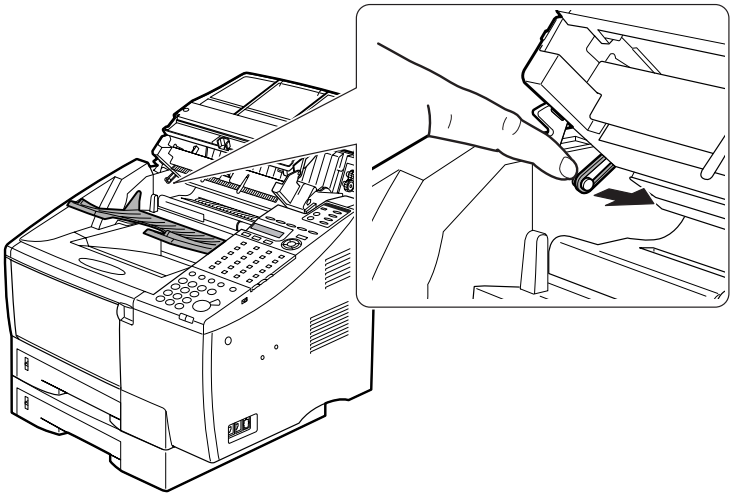

8 **Gently lift the ADF cover up to its full open position.**

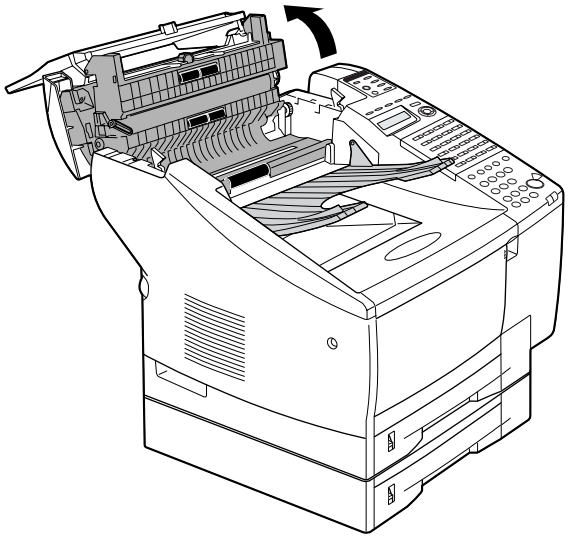

Downloaded from ManualsPrinter.com Manuals

9 Use a soft, dry cloth to wipe clean the scanning glass, the white strip above, the rollers, and the area around the scanning glass.

Use a soft, dry cloth that will not scratch the scanning glass to wipe clean the underside of the ADF cover and to wipe up the paper dust around the rollers.

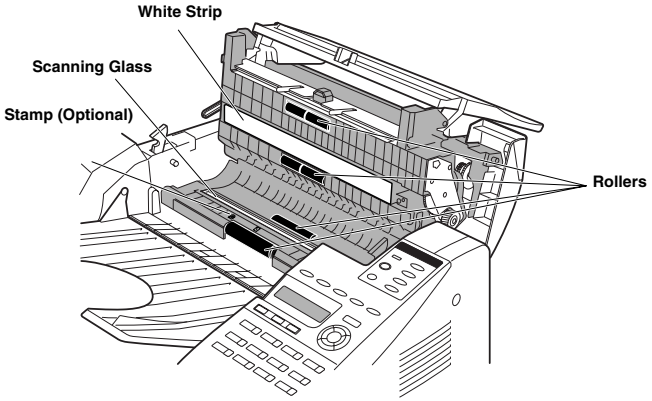

NOTE

- *If you have installed the optional stamp kit, be careful not to touch the stamp ink compartment when cleaning the scanning area.*

10 Lower the ADF cover until the black, plastic loop is even with the stub on the machine.

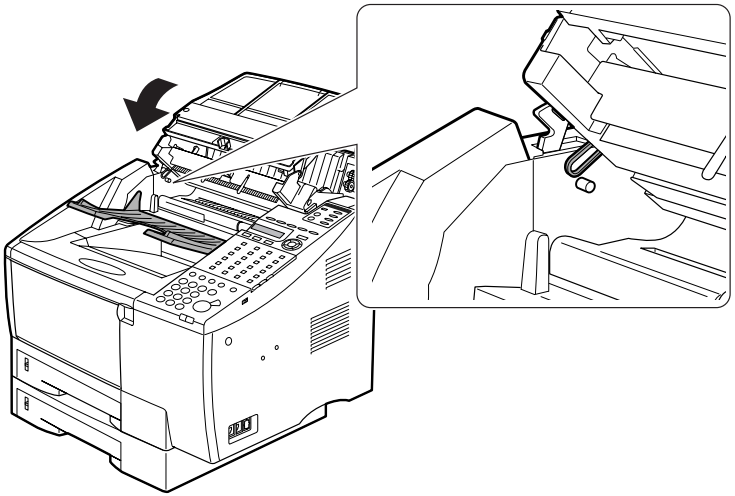

Downloaded from ManualsPrinter.com Manuals

11 **Place the end of the black, plastic loop over the end of the stub, so that it stays in place.**

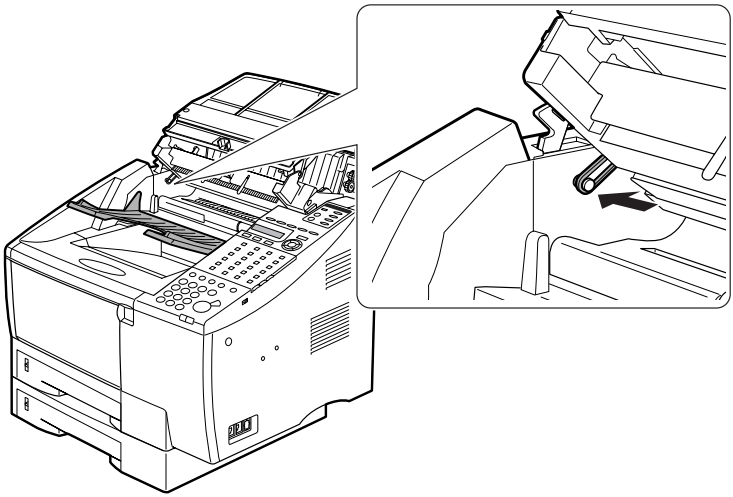

12 **Close the ADF cover, and press down on it slightly until you hear it lock into place. Then, lower the document feeder tray.**

IMPORTANT

- *Make sure that you have put the black, plastic loop back in place before you close the ADF cover.*

13 **Connect the power cord of the main unit to the power source.**

Downloaded from ManualsPrinter.com Manuals

Cleaning the Roller

If black streak appears on outputs, the fixing roller in the main unit may be dirty. In such a case, clean the roller.

Load A4 size paper in the MP tray to clean the roller.

IMPORTANT

- *Only A4 size paper can be used to clean the roller.*

NOTE

- *It takes about 130 seconds to clean the roller.*

1 **Open the MP tray.**

2 **Pull out the extension tray using the center grip ①, then flip open the support tray ②.**

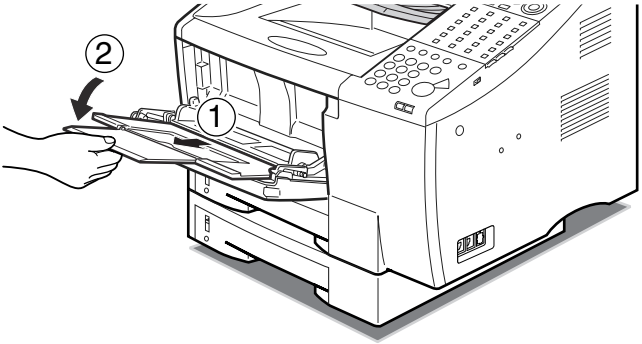

Downloaded from ManualsPrinter.com Manuals

3 **Load a A4 size paper into the MP tray.**

4 **Open all three one-touch speed dialing panels.**

5 **Press [Data Registration].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```

6 **Press [▼] or [▲] until <7.ADJUST/CLEAN> appears → press [OK].**

```
ADDITIONAL FUNCTIONS
 7.ADJUST/CLEAN
```
→
```
ADJUST/CLEAN
 1.ROLLER CLEANING
```

7 **Press [▼] or [▲] until <1.ROLLER CLEANING> appears → press [OK].**

```
ADJUST/CLEAN
 1.ROLLER CLEANING
```

The machine starts cleaning the roller.

NOTE

- *If a paper jam occurs, press (Stop) and remove the jammed paper.*
- *Discard the cleaning paper after use.*

Downloaded from ManualsPrinter.com Manuals

Refilling the Stamp Ink Compartment (Optional)

Follow this procedure to refill the stamp ink compartment if you are using the optional stamp feature.

Please contact your local authorized Canon dealer when you run out of ink.

1 **Disconnect the power cord of the main unit from its power source.**

2 **Lift the document feeder tray, and gently open the ADF cover until it stops, grasping the document feeder tray and the ADF cover at the same time.**

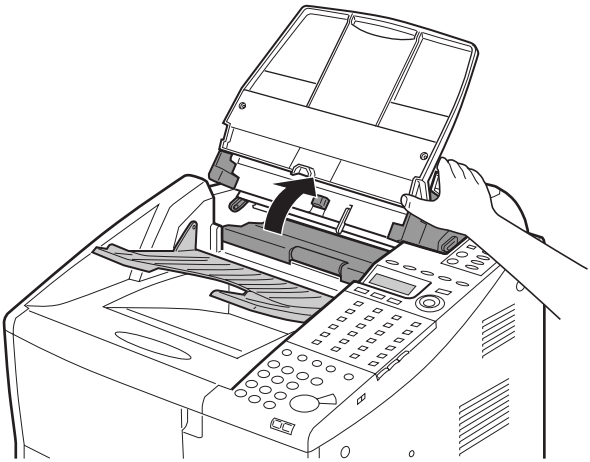

Downloaded from ManualsPrinter.com Manuals

3 **While holding the ADF cover open with one hand, use one finger of your other hand to gently push in the black, plastic loop to separate it from the stub on the machine.**

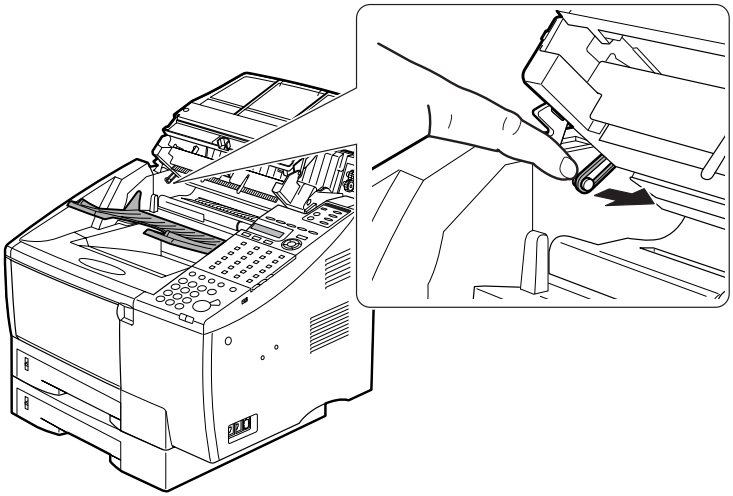

4 **Gently lift the ADF cover up to its full open position.**

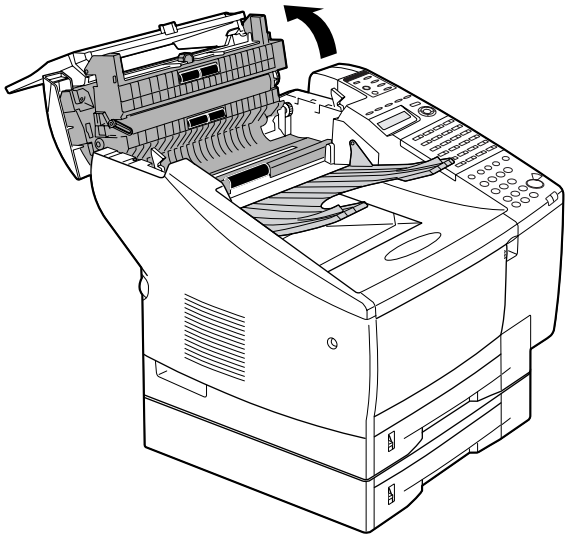

Downloaded from ManualsPrinter.com Manuals

5 **Locate the stamp pad, and apply only one drop of ink to the stamp ink compartment.**

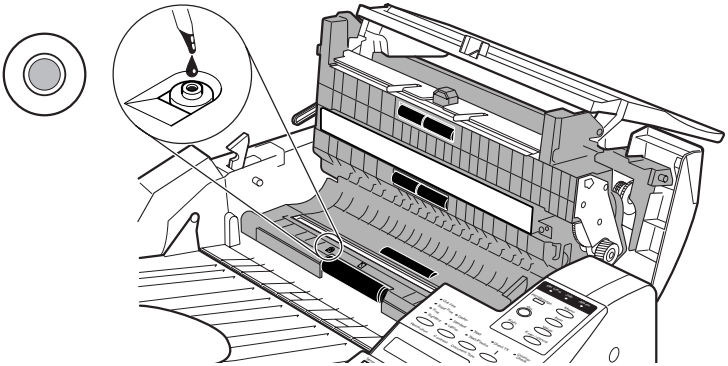

CAUTION

- **To avoid spilling ink, apply only one drop of ink to the stamp pad.**

IMPORTANT

- *To avoid a malfunction, do not add too much ink, and make sure that the ink does not drip on any other part of the machine.*
- *Use only Shachihata X Stamper Ink CS-20 Yellow.*
- *Do not use the stamp feature for at least one hour until the ink is completely soaked up. If you have to send a document, turn 'OFF' the stamp feature for the first hour. (See Chapter 11, "Summary of Important Settings," in the Facsimile Guide.)*

Downloaded from ManualsPrinter.com Manuals

6 **Lower the ADF cover until the black, plastic loop is even with the stub on the machine.**

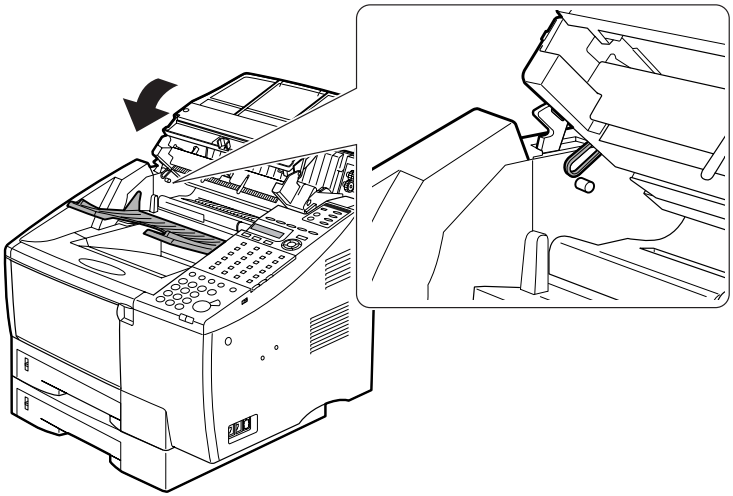

7 **Place the end of the black, plastic loop over the end of the stub, so that it stays in place.**

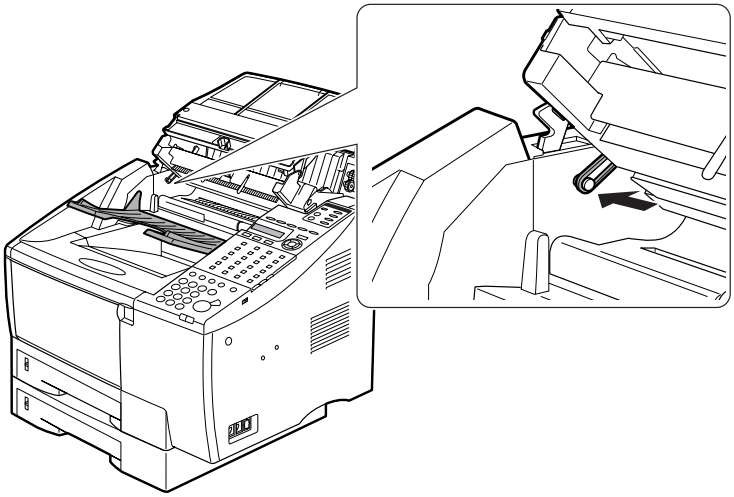

Downloaded from ManualsPrinter.com Manuals

8 **Close the ADF cover, and press down on it slightly until you hear it lock into place. Then, lower the document feeder tray.**

IMPORTANT

- *Make sure that you put the black, plastic loop back in place before you close the ADF cover.*

9 **Connect the power cord of the main unit to the power source.**

Downloaded from ManualsPrinter.com Manuals

This chapter describes the specifications of the machine and includes the index.

Specifications 8-2
- General 8-2
- Power 8-3
- Operating Environment 8-3
- Weight 8-4
- Dimensions 8-4
- Printing Area 8-5

Index 8-6

describes what to do in response to a paper jam in the main unit, an error code, or error play.

Document Feed Jams 7-2
g the Automatic Document Feeder 7-4
Printer Feed Jams 7-5
ng a Paper Jam 7-6
all Message 7-19
Your Local Authorized Dealer 7-
e Table (Listed by Number) 7-21
D Display Messages (Alphabetical List) 7-23
uble Occurs 7-26
g Document 7-26
ber, change the toner cartridge, and perform routine 7-26
roubles 7-26

. 8-2
. 2
. 6-2
. 6-3
. 6-8
. 6
. 6-9
. 6-9
ea 6-10
ou can perform with the PAPER
YSTEM SETTINGS menus. 6-13
. 6-20
ment (Optional) 6-22
. 5-2
. 5-3
. 5-3
. 5-5
. 5-5
. 5-8

Downloaded from ManualsPrinter.com Manuals

Clearing Document Feed Jams

To prevent frequent paper jams during document scanning, always check the pages before you feed them into the machine. (See Chapter 3, “Sending Documents,” in the *Facsimile Guide*.)

If a document is curled or wrinkled, make a copy of the original and scan the copy.

If a paper jam occurs during scanning, the Error lamp blinks red, and the following message appears on the LCD display:

```
CHECK DOCUMENT
```

Follow the procedure described below to clear the document feed jam.

1 **Press (Stop).**

2 **Gently lift the ADF cover.**

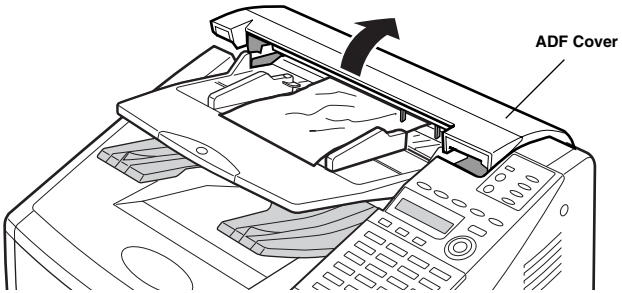

Downloaded from ManualsPrinter.com Manuals

3 **Pull the document straight out to remove it.**

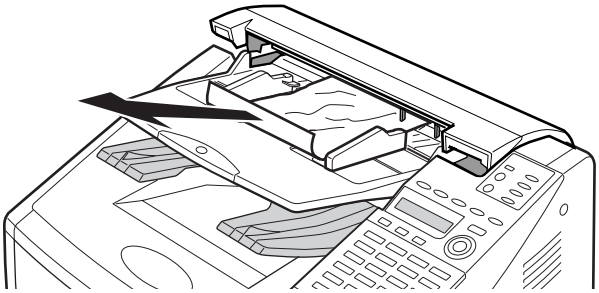

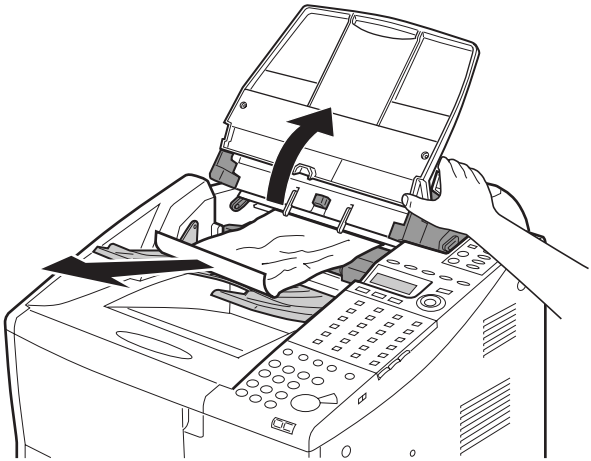

NOTE

- *Always open the ADF cover before you attempt to remove a jammed document.*

4 **Close the ADF cover, and press down on it gently until you hear it lock into place.**

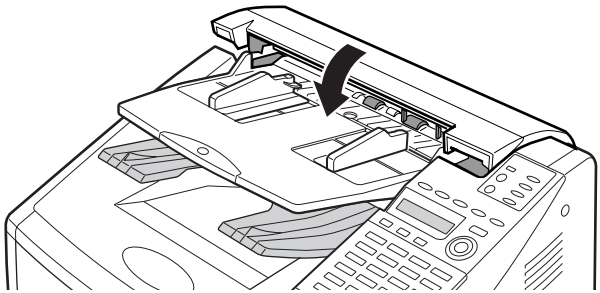

Downloaded from ManualsPrinter.com Manuals

Initializing the Automatic Document Feeder

If the document cannot be correctly fed into the automatic document feeder, follow the procedure below to initialize the ADF.

1 **Open all three one-touch speed dialing panels.**

2 **Press [Data Registration].**

```
ADDITIONAL FUNCTIONS
 1.PAPER SETTINGS
```

3 **Press [▼] or [▲] until <7.ADJUST/CLEAN> appears → press [OK].**

```
ADDITIONAL FUNCTIONS
 7.ADJUST/CLEAN
```
→
```
ADJUST/CLEAN
 1.ROLLER CLEANING
```

4 **Press [▼] or [▲] until <2.INITIALIZING ADF> appears → press [OK].**

```
ADJUST/CLEAN
 2.INITIALIZING ADF
```
→
```
ADDITIONAL FUNCTIONS
 8.PRINT LISTS
```

The pick up roller inside the ADF is reset to its initial position.

5 **Press (Stop) to return to the Standby mode.**

7 Troubleshooting

Downloaded from ManualsPrinter.com Manuals

Clearing Printer Feed Jams

Observe these guidelines when you are inspecting the machine for printer feed jams:

- If the paper jam occurred as a result of a power failure, restore power to the main unit by reconnecting it to the power source before you follow the procedure below.
- Make sure you check all the areas described below because paper jams can occur at more than one location.
- Follow the exact order of the steps below.
- When removing the paper cassettes, remove them gently.

If a paper jam occurs during printing, the Error lamp blinks red, and the following message appears on the LCD display:

```
REC. PAPER JAM
```

CAUTION

- **The toner fixing area becomes very hot. Do not touch any parts in the fixing area when you are clearing a paper jam.**

IMPORTANT

- *Wash off any toner from your hands or clothing immediately with cold water.*

Downloaded from ManualsPrinter.com Manuals

Locating a Paper Jam

A paper jam can occur in any of the following locations shown below. You should check each location for jammed paper, and remove it carefully. If a paper jam occurs in any of the areas shown below, use the table to direct you to the proper section to help you clear the jam.

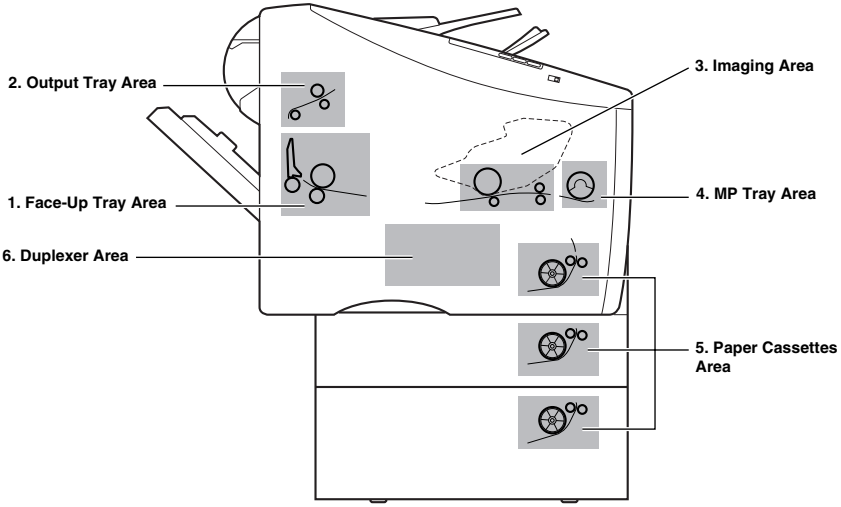

Area	Page
1. Face-Up Tray Area	7-7
2. Output Tray Area	7-8
3. Imaging Area	7-11
4. MP Tray Area	7-13
5. Paper Cassettes Area	7-14
6. Duplexer Area*	7-16

* A paper jam may occur in this area when using duplex printing with the printer function.

IMPORTANT

- *Paper jams can occur in more than one location at a time, so ensure that all locations indicated in the illustration are checked.*

Downloaded from ManualsPrinter.com Manuals

Face-Up Tray Area

1 **Gently pull out the jammed paper.**

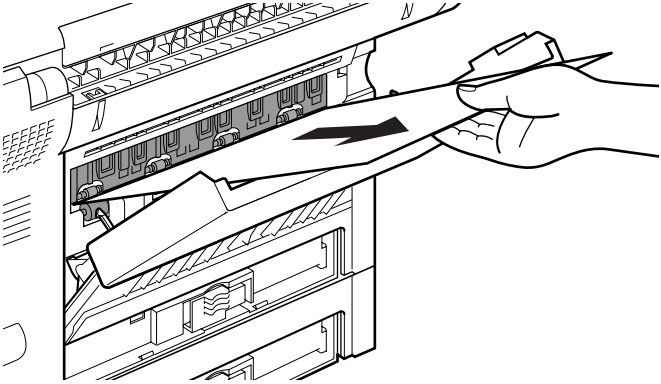

IMPORTANT

- *If the jammed paper cannot be easily removed, do not force it out. This happens when the trailing edge of the paper is still within the paper feed area. Follow the procedure from step 2 on p. 7-8 ("Output Tray Area") to remove the jammed paper.*
- *The pressure from the pressure roller must be released before removing the paper. To do this, follow steps 1 through 4 on p. 7-11 ("Imaging Area") to hold the green label, and flip the transfer guide up. Then, try removing the jammed paper from this area. After removing the paper, gently place the transfer guide back to its original position.*

NOTE

- *If you cannot see the paper, check the imaging area. (See "Imaging Area", on p. 7-11.)*

Downloaded from ManualsPrinter.com Manuals

Output Tray Area

1 **Open the face-up tray.**

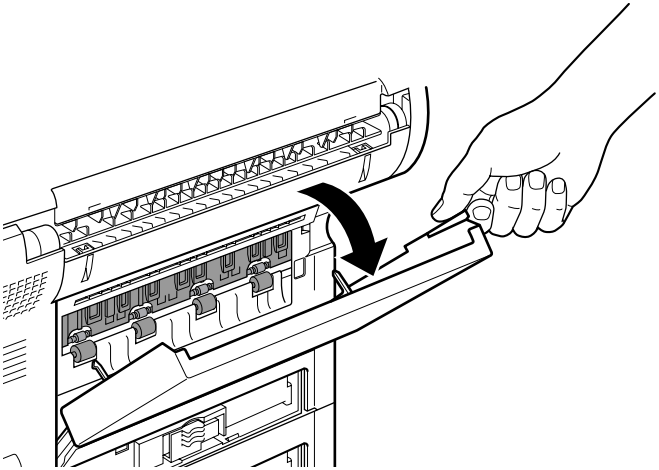

2 **Hold up the face-up tray slightly ① to release the lock pin ② ③ which is located on the right side of the tray.**

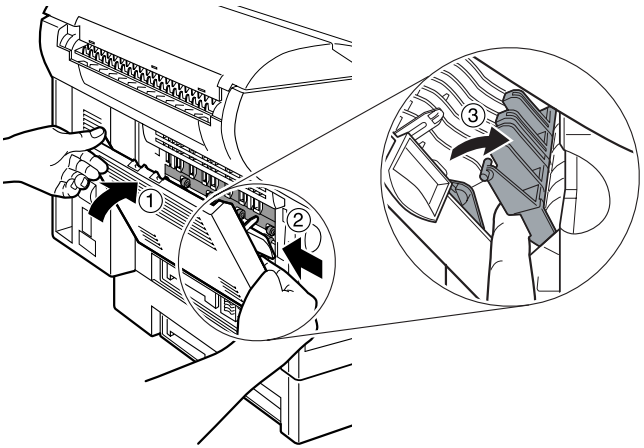

Downloaded from ManualsPrinter.com Manuals

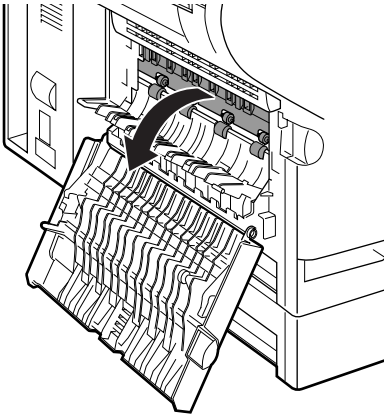

NOTE

- *When you release the lock pin on the face-up tray, be sure to firmly hold the face-up tray and lower it down slowly.*

3 Remove the jammed paper.

● **If you can see the edge of the paper:**

❑ Gently remove the jammed paper.

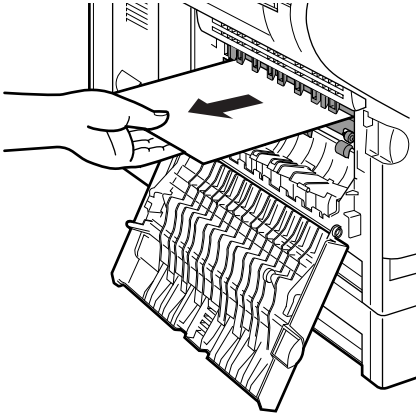

Downloaded from ManualsPrinter.com Manuals

● **If you cannot see the edge of the paper:**

❏ Pull the paper up using both hands.

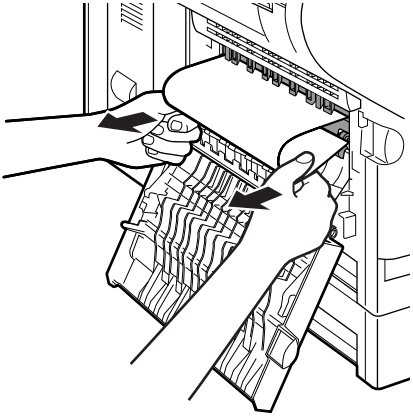

❏ After the paper's edge has rolled out, pull the paper forward carefully.

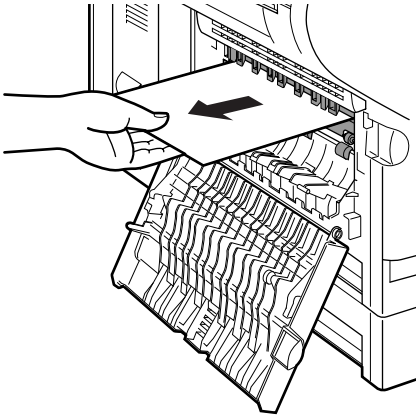

IMPORTANT

- *If you cannot see the paper, check the imaging area. (See "Imaging Area", on p. 7-11.)*
- *The pressure from the pressure roller must be released before removing the paper. To do this, follow steps 1 to 4 on p. 7-11 ("Imaging Area") to hold the green label, and flip the transfer guide up. Then, try removing the jammed paper from this area. After removing the paper, gently place the transfer guide back to its original position.*

Downloaded from ManualsPrinter.com Manuals

4 **Close the face-up tray.**

The hooks automatically catch the lock pins.

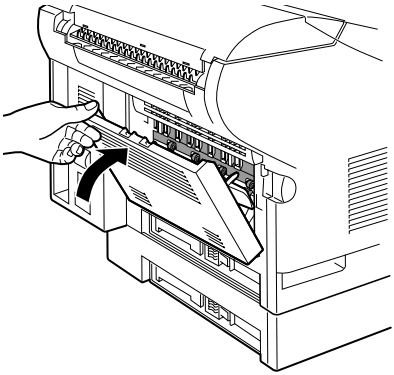

Imaging Area

1 **Lift the document feeder tray and document output tray.**

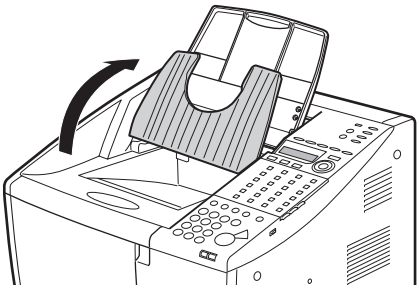

2 **Open the printer cover, and remove the toner cartridge.**

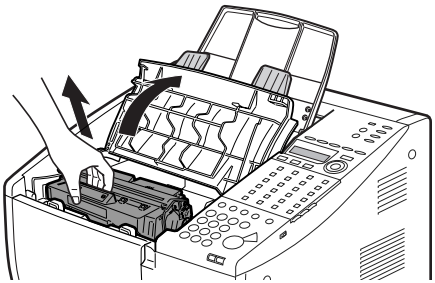

Downloaded from ManualsPrinter.com Manuals

IMPORTANT

- *Store the toner cartridge in its original protective bag to avoid exposure to light.*
- *Be sure to open the printer cover to its full extent.*

3 **If you see the edge of the jammed paper in the imaging area, remove the paper by pulling it slowly.**

4 **If you do not see the edge of the paper, flip the transfer guide ① up holding it by the green label, and remove the jammed paper ②.**

After the paper's back edge has come out, slowly pull the paper forward and out of the main unit.

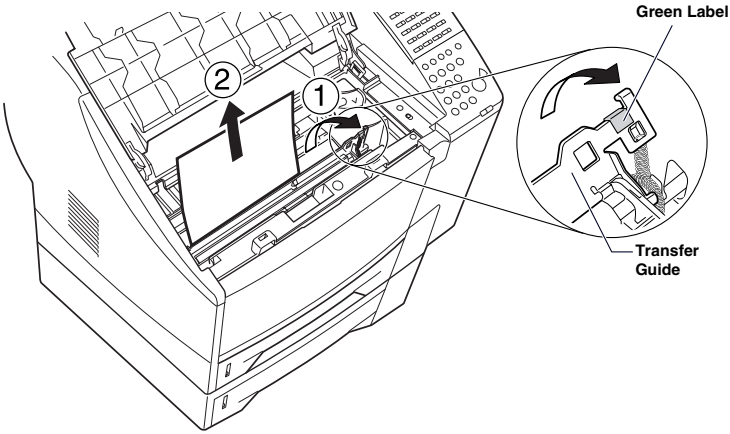

CAUTION

- **The toner fixing unit and its surroundings inside the machine may become hot during use. When removing jammed paper or when inspecting the inside of the machine, do not touch the toner fixing unit and its surroundings, as doing so may result in burns or electrical shock.**

IMPORTANT

- *When removing the jammed paper, be careful not to touch the transfer charging roller (see p. 6-12). If the roller becomes dirty, the print quality deteriorates.*

Downloaded from ManualsPrinter.com Manuals

MP Tray Area

1 **If a paper jam occurs in the MP tray area, follow the procedure for clearing the paper jam in the Imaging area.**

For details on clearing a paper jam in the Imaging area, see “Imaging Area”, on p. 7-11.

2 **If you cannot easily reach the paper to clear the jam, slowly pull the jammed paper out from the front.**

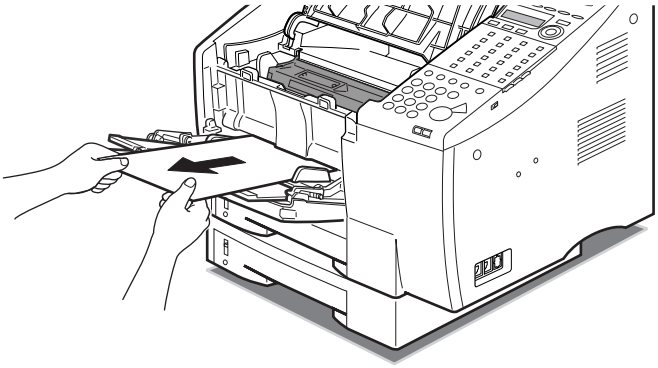

IMPORTANT

- *Do not pull the jammed paper upwards when removing it from the main unit. This could damage the paper sensor.*

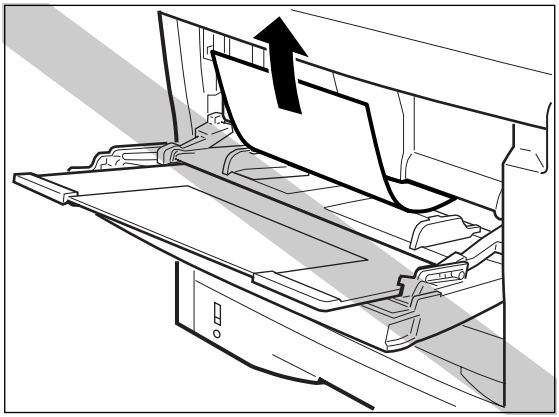

Downloaded from ManualsPrinter.com Manuals

Paper Cassettes Area

1 **Remove the paper cassette.**

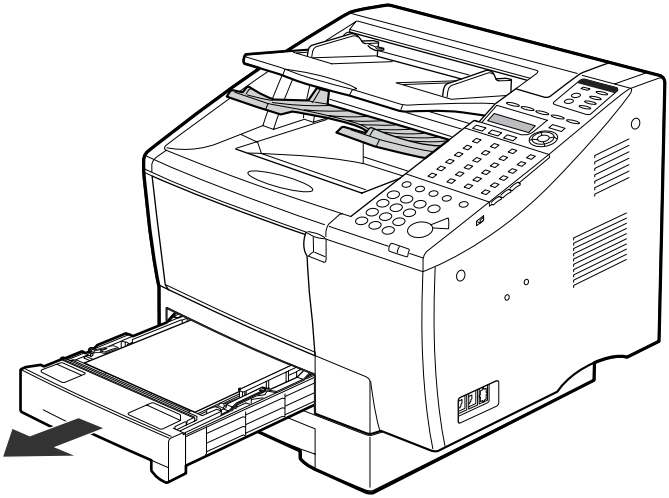

- **If you can see the edge of the paper:**
  - ❑ Locate the jammed paper inside the main unit, and gently pull it out.

NOTE

- *If the paper does not come out easily, or you cannot grasp the edge of the paper easily, do not force it out. Proceed to step 2.*

- **If you cannot see the edge of the paper:**
  - ❑ Proceed to step 2.

2 **Lift the document feeder tray and document output tray, open the printer cover, and remove the toner cartridge.**

For details, see steps 1 and 2 of “Imaging Area”, on p. 7-11.

IMPORTANT

- *Store the toner cartridge in its original protective bag to avoid exposure to light.*

Downloaded from ManualsPrinter.com Manuals

3 **While holding the green label, flip the transfer guide up ①, and slowly pull the paper out from below ②.**

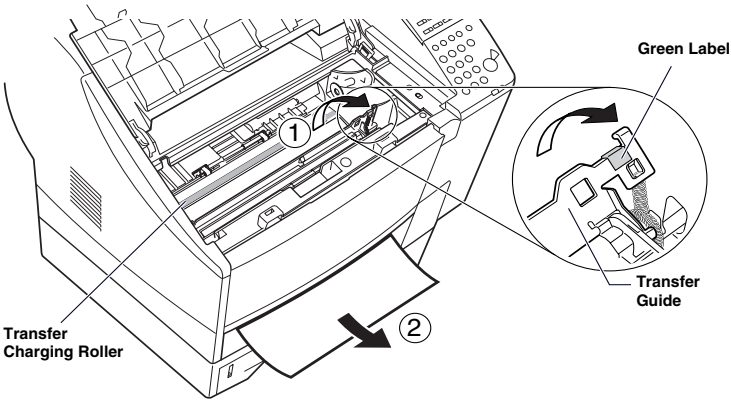

CAUTION

- **The toner fixing unit and its surroundings inside the machine may become hot during use. When removing jammed paper or when inspecting the inside of the machine, do not touch the toner fixing unit and its surroundings, as doing so may result in burns or electrical shock.**

IMPORTANT

- *When removing the jammed paper, be careful not to touch the transfer charging roller. If the roller becomes dirty, the print quality deteriorates.*
- *After removing the jammed paper, make sure you insert the paper cassette all the way into the main unit until it locks into place.*

NOTE

- *After removing the paper, gently place the transfer guide back to its original position.*

Downloaded from ManualsPrinter.com Manuals

Duplexer Area

1 **Remove the upper paper cassette.**

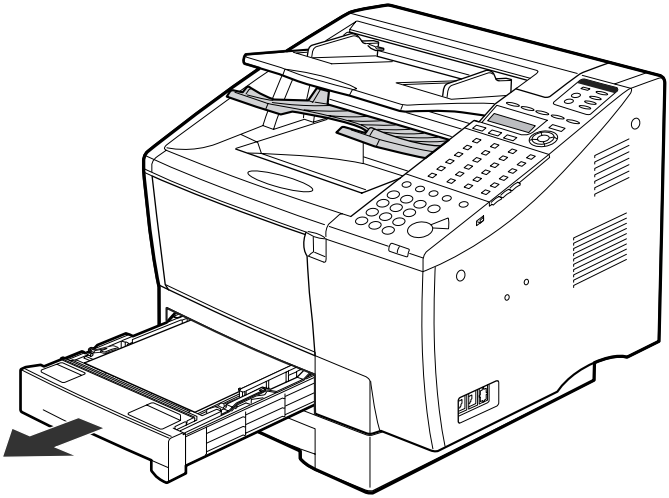

2 **Pull the green lever on the left front of the machine to open the bottom of the duplexer.**

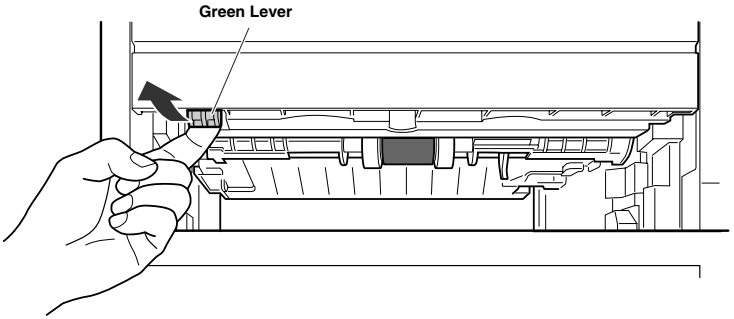

Downloaded from ManualsPrinter.com Manuals

3 **Reach in and pull out the jammed paper from the duplexer area.**

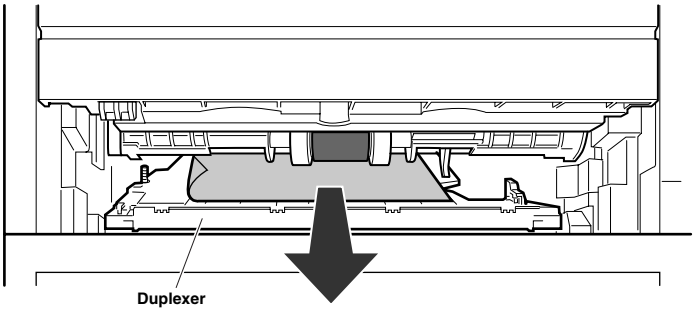

4 **Push the bottom of the duplexer back up until it clicks into place.**

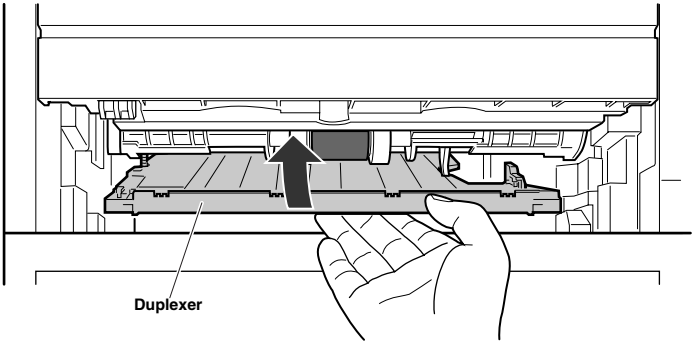

Downloaded from ManualsPrinter.com Manuals

5 **Reinsert the paper cassette into the machine.**

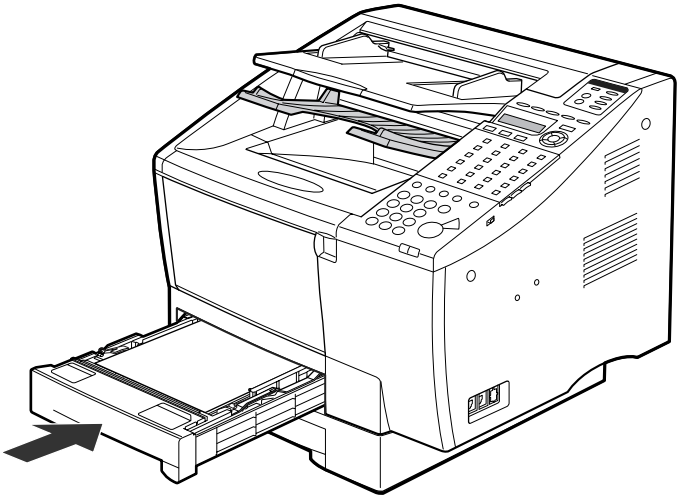

NOTE

- *To reset the printer and continue printing, open the printer cover all the way and close it. If the Error lamp does not stop blinking, there is still jammed paper inside the machine. Check the other areas of the machine to clear all paper jams.*

Downloaded from ManualsPrinter.com Manuals

Service Call Message

If a malfunction occurs to the machine, service call messages appear on the LCD display.

WARNING

- **Do not connect or disconnect the power plug with wet hands, as this may result in electrical shock.**

CAUTION

- **Always grasp the plug portion when disconnecting the power plug. Pulling by the power cord may expose or snap the core wire, or otherwise damage the power cord. If the cord is damaged, this could cause an electricity leak and result in a fire or electrical shock.**

IMPORTANT

- *If you disconnect the power cord when there is any stored job, a built-in battery keeps a trickle of current supplied to the memory so all of the documents currently stored in memory can be saved for up to 12 hours.*

Calling Your Local Authorized Canon Dealer

If service call messages appear on the LCD display, follow the procedure described below to solve the problem.

EXXX

Downloaded from ManualsPrinter.com Manuals

1 **Disconnect the power cord, wait for more than 10 seconds, then connect it again.**

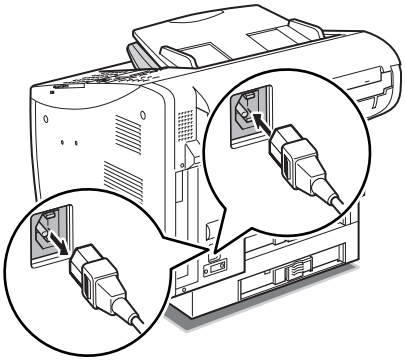

2 **If the problem persists, disconnect the power cord again, and contact your local authorized Canon dealer.**

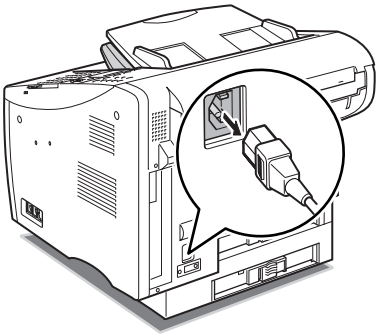

NOTE

- *When consulting your local authorized Canon dealer, check the following:*
  - *Model name*
  - *Problem and status of the machine*
  - *Error code on the LCD display*

Downloaded from ManualsPrinter.com Manuals

Error Code Table (Listed by Number)

Errors in reports are recorded as numbers because there is not enough space to print a detailed description of the error in the report. When errors are recorded in reports, note the error code number, and check it against the table below to learn more about what caused the error and how to remedy it. Try to solve the problem following the procedure described as "Remedy." If you cannot find the corresponding error code below, refer also to Chapter 13, "Troubleshooting," in the *Facsimile Guide*.

#0001

Cause	A document may be jammed in the ADF (Automatic Document Feeder).
Remedy	Remove the jammed document and try again. (See "Clearing Document Feed Jams", on p. 7-2.)

#0003

Cause	The document is longer than 1 meter.
Remedy	Make a reduced copy of the document with a copy machine, then send the copy. You can also cut the document, and paste it onto smaller sheets of paper. (See Chapter 14, "Appendix," in the *Facsimile Guide*.)

#0009

Cause 1	The paper cassette on your machine is out of paper.
Remedy	Refill the paper cassette, and make sure the paper stack is below the tabs. (See "Loading Paper into the Paper Cassettes", on p. 1-41.)
Cause 2	If the paper cassette is still loaded with paper, the paper cassette may not be installed correctly.
Remedy	Check all paper cassettes, and make sure they are installed correctly.
Cause 3	Recording paper may have jammed inside the paper cassette.
Remedy	Check the paper cassette, and clear the paper jam. (See "Clearing Printer Feed Jams", on p. 7-5.)

Downloaded from ManualsPrinter.com Manuals

##0322 to ##0330

Cause	A fatal error has occurred.
Remedy	Contact your local authorized Canon dealer where you purchased your Canon product for assistance.

Downloaded from ManualsPrinter.com Manuals

List of LCD Display Messages
(Alphabetical List)

This section explains a list of messages that appear on the LCD display when a problem occurs in the machine.

CHECK DOCUMENT

Cause	A document page may be jammed or may not have been fed correctly by the ADF (Automatic Document Feeder).
Remedy 1	Clear the paper jam, and try placing the document again. (See “Clearing Document Feed Jams”, on p. 7-2.)
Remedy 2	If the document does not feed correctly, clean the rollers. (See “Cleaning the Scanning Area”, on p. 6-13.)

CHECK PRINTER

Cause	Printer malfunction.
Remedy	Press (Stop). Disconnect the machine from its power source, wait a few minutes, then connect the power cord to the power outlet. If the machine is connected to a UPS (Uninterruptable Power Supply), disconnect the power cord, and plug into an AC outlet. If the message remains on the LCD display and the machine does not return to the Standby mode, call your local authorized Canon dealer.

CHECK PRINTER COVER

Cause	The printer cover is not closed completely.
Remedy	Check the printer cover, and make sure that it is completely closed. Make sure a toner cartridge is installed, and resting properly underneath the printer cover.

DOCUMENT TOO LONG

Cause	The document is longer than 1 meter.
Remedy	Make a reduced copy of the document with a copy machine, then send the copy. You can also cut the document, and paste it onto smaller sheets of paper. (See Chapter 14, “Appendix,” in the *Facsimile Guide*.)

Downloaded from ManualsPrinter.com Manuals

ENTER DEPT. ID

Cause	Department ID restriction has been set.
Remedy	You have to enter the Department ID and password (if set) in order to operate the machine.

HANG UP PHONE

Cause	The transaction has completed, but the handset is not sitting completely on its cradle.
Remedy	Make sure the handset is sitting completely on its cradle.

INCORRECT PAPER SIZE

Cause	The paper size set in the PAPER SETTINGS menu does not match the paper size loaded in the paper cassettes or MP tray.
Remedy	Set the correct paper size in the PAPER SETTINGS menu. Open the printer cover and close it to reset the printer.

MEMORY FULL PLEASE WAIT

Cause	The memory is full.
Remedy	Wait until the current document transmission is complete.

OUTPUT TRAY FULL

Cause	The output tray is full of paper.
Remedy	Pick up the printed pages in the output tray.

PRT ALT. PAPER SIZE? YES=(∗) NO=(#)

Cause	The size of the available recording paper loaded in a paper cassette does not match the size of the document waiting to be printed.
Remedy 1	If you do not mind printing the document on a different paper size, press [∗].
Remedy 2	If you want to print on the correct paper size, press (Stop) → load the correct size paper → press (Start).

Downloaded from ManualsPrinter.com Manuals

REC. PAPER JAM

Cause	Paper has jammed in a paper cassette or inside the printer.
Remedy	Clear the paper jam. (See “Clearing Printer Feed Jams”, on p. 7-5.)

REPLACE CARTRIDGE

Cause	The toner cartridge has run out of toner.
Remedy	Replace the toner cartridge. (See “Changing the Toner Cartridge”, on p. 6-3.)

SUPPLY REC. PAPER

Cause	Your machine has run out of paper.
Remedy	Refill the paper cassettes. (See “Loading Paper into the Paper Cassettes”, on p. 1-41, and “Loading Paper into the MP Tray”, on p. 2-16.)

PRINT LIMIT REACHED

Cause	Printing has been restricted.
Remedy	Set RESTRICT PRINTING from the DEPT. ID MANAGEMNT menu to ‘OFF’. (See “Turning Restrictions OFF or ON”, on p. 4-10.)

TX LIMIT REACHED

Cause	Sending has been restricted.
Remedy	Set RESTRICT TX from the DEPT. ID MANAGEMNT menu to ‘OFF’. (See “Turning Restrictions OFF or ON”, on p. 4-10.)

Downloaded from ManualsPrinter.com Manuals

When Trouble Occurs

If an error occurs during operating the machine, or there is an abnormality in the machine, check the following points.

Copying Documents

You cannot copy.

Cause	The toner cartridge is out of toner.
Remedy	Check the toner cartridge, and if you find it empty, replace it with a new one. (See “Changing the Toner Cartridge”, on p. 6-3.)

Copied documents are cut at the margins.

Cause	The paper size guides on the paper cassettes or paper guides on the MP tray are not set with the correct width of the paper loaded.
Remedy	Adjust the paper size guides on the paper cassettes or paper guides on the MP tray to the width of the paper loaded. (See “Assembling the Machine”, on p. 1-36.)

Other Troubles

The documents received are not printed out.

Cause 1	The paper cassettes are not set correctly into the machine.
Remedy	Insert the paper cassettes all the way into the main unit until they lock into place. (See “Loading Paper into the Paper Cassettes”, on p. 1-41.)
Cause 2	The machine is in the Memory Reception mode.
Remedy	Turn ‘OFF’ the Memory Lock (See “Using Memory Lock”, on p. 4-17.)

Downloaded from ManualsPrinter.com Manuals

This chapter describes the specifications of the machine and includes the index.

Specifications 8-2
- General 8-2
- Power 8-3
- Operating Environment 8-3
- Weight 8-4
- Dimensions 8-4
- Printing Area 8-5

Index 8-6

describes what to do in response to a paper jam in the main unit, an error code, or error play.

Document Feed Jams 7-2
g the Automatic Document Feeder 7-4
Printer Feed Jams 7-5
ng a Paper Jam 7-6
all Message 7-19
Your Local Authorized Dealer 7-
e Table (Listed by Number) 7-21
D Display Messages (Alphabetical List) 7-23
uble Occurs 7-26
g Document 7-26
ber, change the toner cartridge, and perform routine 7-26
roubles 7-26

. 8-2
. 2
. 6-2
. 6-3
. 6-8
. 6
. 6-9
. 6-9
ea 6-10
ou can perform with the PAPER
YSTEM SETTINGS menus. 6-13
. 6-20
ment (Optional) 6-22
. 5-2
. 5-3
. 5-3
. 5-5
. 5-5
. 5-8

Downloaded from ManualsPrinter.com Manuals

Specifications

Specifications are subject to change without notice for product improvement or future release.

General

Item	Specification
Sheet Size	Max. width 279 mm Min. width 148 mm
ADF (Automatic Document Feeder) Capacity	50 sheets of letter or A4 pages 20 sheets of legal or 11" x 17" pages 20 sheets of B4 pages
Effective Scanning Image Size	Width: (A4) 208 mm
Recording Paper Size	Width: (A4) 210 mm
Paper Capacity	MP (Multi-Purpose) tray: Approximately 100 sheets (letter, legal, executive, A4, A5, B5, Postcard, DBL P/CD, COM 10, Monarch, DL, ISO-B5, or ISO-C5) (80 g/m^2) Paper Cassettes Approximately 250 sheets for each (letter, legal, executive, A4, A5, or B5) (80 g/m^2)
Compatibility	G3
Modem Speed	33.6, 31.2, 28.8, 26.4, 24, 21.6, 19.2, 16.8, 14.4, 12, 9.6, 7.2, 4.8, or 2.4 Kbps
Memory	Standard: 500 pages[*1] approximately Upgrade Option: maximum 1,500 pages[*1] approximately
LCD (Liquid Crystal Display)	2 lines 20 characters per line

Downloaded from ManualsPrinter.com Manuals

Item	Specification
Data Compression System	MH (Modified Huffman), MR (Modified READ), MMR (Modified Modified READ), and JBIG[*2] (Joint Bi-level Image experts Group)
Transmission Time	G3 Mode: V.34 + JBIG: Approximately 3 seconds[*3]/page[*1] ECM - MMR: Approximately 6 seconds/page[*1] MR Standard Mode: Approximately 12 seconds/page[*1] MH Standard Mode: Approximately 15 seconds/page[*1]
Scanning Line Density	G3 Mode: Standard: 8 dots/mm x 3.85 lines/mm Fine: 8 dots/mm x 7.7 lines/mm Super Fine: 8 dots/mm x 15.4 lines/mm Ultra Fine: 16 dots/mm x 15.4 lines/mm (interpolated)
Toner Cartridge	Canon FX7 Toner Cartridge

*1 Based on Canon FAX Standard Chart No.1 (Standard Mode).
*2 JBIG is a new ITU-T standard image data compression method. JBIG's compression method allows data to be compressed more efficiently than MMR, a conventional compression method. JBIG is especially effective when transmitting halftone image documents. The smaller data size requires less transmission time, thereby saving you time and money.
*3 Approximately 3 seconds per page is the fax transmission time based on Canon FAX Standard Chart No.1, (JBIG or Standard Mode) at 33.6 Kbps modem speed.

Power

Item	Specification
Power Source	200-240 V AC ± 10 % (50/60 Hz)
Battery Backup	12 hours (This length of time will become shorter through repeated charging and discharging of the backup battery, or if you install the optional memory.)
Power Consumption	Standby mode: Approximately 15 W at 25°C (FAX-L2000) Approximately 20 W at 25°C (FAX-L2000IP) Operation: Approximately 480 W; approximately 980 W max. Energy Saver mode: Approximately 5 W (FAX-L2000) Approximately 15 W (FAX-L2000IP)

Operating Environment

Item	Specification
Temperature	10°C to 32.5°C
Humidity	20% to 80% RH (Relative Humidity)

Downloaded from ManualsPrinter.com Manuals

Weight

Item	Specification
FAX-L2000	Approximately 24 kg
FAX-L2000IP	Approximately 25 kg

Dimensions

Item	Specification
FAX-L2000/L2000IP	Without Handset 499 mm (W) x 499 mm (D) x 459 mm (H) With Handset 569 mm (W) x 499 mm (D) x 459 mm (H)

Downloaded from ManualsPrinter.com Manuals

Printing Area

Note that the machine cannot print completely from one edge of the paper to the other. There is a margin around the paper, and the size of the margin differs slightly with the paper size.

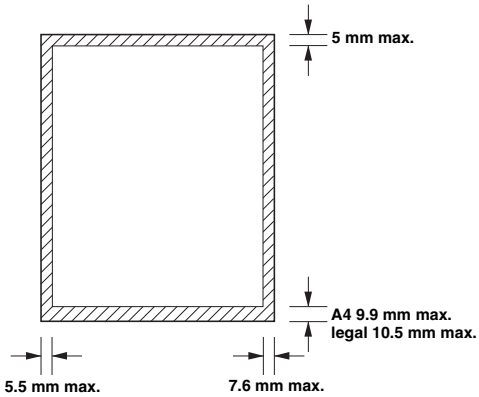

Downloaded from ManualsPrinter.com Manuals

Index

A

ADF (Automatic Document Feeder) tray 1-27
assembling the machine 1-36
Auto Clear Function 2-33
Auto Clear Setting 2-33

C

canceling a job 3-4
CHECK PRINTER COVER
  displayed at power on 1-39
cleaning 6-9
  main unit 6-9
  scanning area 6-13
  transfer guide area 6-10
Clear 2-3
Coded Dial 2-3
COMMON SETTINGS
  accessing 5-3, 5-5
  menu 5-4, 5-6
consumables 1-24
Contrast 2-4
Copy 2-3
cursor buttons 2-3
customer support 1-8

D

Data Registration 2-5, 2-7
DATE SETUP
  format setting 5-9
Delayed Transmission 2-5
Delete 2-6
Delete File 2-4
Department ID management
  setting 4-6, 5-11
department ID management
  using 4-13
destination labels 1-24
Direct TX 2-3
Directory 2-4
DISPLAY LANGUAGE 5-7
document extension tray 1-27
document feed jams 7-2
document feeder tray 1-23, 1-27
  attaching 1-40
document guides 1-27
document output tray 1-23, 1-27
  attaching 1-40
document type 2-4
drum slot 1-38

E

ECM (Error Correction Mode) 1-4
ENERGY SAVER 5-9
Energy Saver 2-3, 2-31
Energy Saver mode 2-30
  turning OFF 2-31
  turning ON 2-30
entering names for registration 2-10
entry mode
  changing 2-10
  name 2-10
  number 2-10
  text 2-10
error code 7-21
Error lamp 1-27, 1-52, 2-3
error messages 7-23
extension telephone
  connecting 1-49
extension telephone jack 1-28, 1-49

F

face-up tray 1-28, 2-29
fax memory 1-7
fax memory option 1-25
Full Power mode 2-31
FX7 Toner Cartridge 1-24, 1-36

Downloaded from ManualsPrinter.com Manuals

G

general precautions 1-15

H

handset (optional) 1-27, 1-29
  connecting 1-47
handset cradle 1-47
handset cradle holder 1-47
Hook 2-3

I

In Use/Memory lamp 1-27, 2-3

J

jam
  document feed 7-2
  printer feed 7-5
JBIG 1-6

L

language
  switching 5-7
LCD display 1-27, 2-4
LCD display messages 7-23
load limit marks 2-21
loading paper 1-41
  MP tray 2-16
  paper cassettes 1-41
location
  choosing 1-9
  ideal temperature 1-9
  space around the machine 1-9

M

main features 1-3
main unit
  assembling 1-36
  front view 1-26
  lifting 1-18
  parts 1-26
  rear view 1-28
Memory Lock 4-17
  setting 4-17
  turning OFF 4-21
  turning ON 4-20
Memory lock password 4-17
MEMORY LOCK RX 4-18
Memory Reception 2-6, 4-20, 4-21
Memory Reference 2-5
menu 2-7
  key summary 2-12
  opening 2-8
  returning to previous level 2-8
  using 2-7
menus 2-7
messages 7-23
mode
  changing entry mode 2-10
Monitor 2-4
moving the machine 1-18
MP tray 1-27, 2-16
  loading paper 2-16
  paper size 2-25
  setting paper size 2-25
  turning ON/OFF 2-25

N

numeric keypad
  entering text/numbers 2-10
  summary 2-12

Downloaded from ManualsPrinter.com Manuals

O

OK 2-3
one-touch speed dialing keys 2-3
one-touch speed dialing panels 2-3
operation buttons 2-2
operation panel 1-27
  keys 2-2, 2-7
  using 2-7
operation restrictions 4-6
optional equipment 1-7, 1-25
output tray 1-27

P

paper
  loading MP tray 2-16
  loading paper cassettes 1-41
  storing 6-2
paper cassettes
  changing the paper size 1-42
  loading paper 1-41
paper delivery
  selecting face-up delivery 2-29
paper guides 1-27, 2-20
paper jam 7-5
  avoiding 1-17
  face-up tray area 7-7
  imaging area 7-11
  locating 7-6
  MP tray area 7-13
  output tray area 7-8
  paper cassettes area 7-14
paper sensor 2-20
paper size
  MP tray 2-25
  paper cassette 1-42
paper size rear guide 1-42
paper volume status bar 1-27, 1-46
parts of the machine 1-26
Password 2-6
password
  system setting password 4-2
Pause 2-3
power
  connection 1-13, 1-51
  turning ON 1-51
power cord 1-23, 1-51
power requirements 1-13
printer cover 1-27
printer feed jams 7-5
  face-up tray area 7-7
  output tray area 7-8
printer operation panel 2-3
printing area 8-5

R

recording paper
  loading 1-41
  recommended paper 6-2
  storing 6-2
registering information 2-7
  correcting 2-11
  operation panel key summary table 2-12
REPLACE CARTRIDGE 6-3
Report 2-5
Resolution 2-4
restricting machine operation 4-6
ringer volume switch 1-29
rollers 6-15, 6-18

S

safety
  electrical storms 1-15
  handling power cord 1-13
  space around the machine 1-11
scanning glass 6-18
search keys 2-3
setup the machine
  assembling the machine 1-36
  attaching trays 1-40
  connecting extension phone 1-49
  connecting handset (optional) 1-47
  connecting telephone line 1-50
  error messages at power on 1-52
  installing toner cartridge 1-36
  loading MP tray 2-16
  loading paper cassettes 1-41
  power requirements 1-13
  removing the shipping material 1-30
  space around the machine 1-11
  unpacking 1-19
  where to setup 1-9
shipping material 1-30
Space 2-6
speaker volume switch 1-27

Downloaded from ManualsPrinter.com Manuals

specifications 8-2
Stamp (optional) 2-6
  refilling the stamp ink compartment 6-22
stamp pad 6-24
Standby mode 1-52, 2-9
Start 2-3
Stop 2-3
Subaddress 2-6
SUPPLY REC. PAPER 1-52
system administration
  setting ID and password 4-2
system setting password 4-2
  canceling 4-4
  changing 4-4
SYSTEM SETTINGS
  accessing 5-10
  menu 5-11

T

telephone line 1-23
  connecting 1-50
telephone line jack 1-28, 1-50
temperature
  machine location 1-9
TIMER SETTINGS
  accessing 5-8
  menu 5-9
toner cartridge
  changing 6-3
  handling 6-8
  installing 1-36
  protective bag 6-4
  storing 6-8
Transfer 2-6
transfer charging roller 6-12, 7-12
transfer guide 6-11, 7-15
troubleshooting 7-1, 7-26
  copying documents 7-26
  other troubles 7-26
TTI Selector 2-6

U

unpacking 1-19

W

white strip 6-18

Downloaded from ManualsPrinter.com Manuals

Downloaded from ManualsPrinter.com Manuals